

# QUICK START GUIDE

## PR-300 Scanning - Adding/Deleting Channels

Adding and deleting channels from the scan list allows you to personalize the channels that will be monitored when the scan function is activated.



### How To Begin

Begin on the channel that is being added or deleted.

*For this example, Channel 1 will be removed from the scan list.*



### Access the Short Menu

Press the menu function key, the default is the S/M Key, long press.



### Toggle Menu Options

Press the up/down keys until the "Scan List" menu option is displayed.



### Press the S/M Key

Press the S/M key to select the menu option. The current setting will be displayed.



### Use the Up or Down Keys

Cycle through the setting options. The scan list options are "ON" or "OFF".



### Press the S/M Key

Press the S/M key to select the desired setting.

CONTINUE ON NEXT PAGE ►

# QUICK START GUIDE

## PR-300 Scanning - Adding/Deleting Channels



### Exit the Menu

Press the F Key, or it will exit automatically after an amount of inactivity.



### Repeat

Repeat the process on any channel that is needed to be added or deleted to the scan list.



### When Finished

At least two channels are needed for the scan function to work.

## PLEASE NOTE

### Scan List is Per Channel

This means that the change is made to the channel that is selected when the short menu is accessed and, if wanted, each channel needs to be programmed separately.

### Large Scan List May Lead to Missed Messages

This is because the radio must stop for a short time on each channel to check for activity before it moves on to the next one. The more channels you have, the longer it will take to cycle through the list, and for this reason, we recommend that the scan list only has the channels you absolutely need for the best performance of employees.