





▲ Designate Proper Finish Suffix



see what Delta can do

STEAMBATH INTERFACE

■ Transitional Square

FEATURES:

- Preset time and programmable temperature
- Digital display of ambient and set temperature

STANDARD SPECIFICATIONS:

- Surface Mount 1 1/2" hole required
- Must mount inside the steam room
- The multi-conductor cable should be run through 3/4" conduit to protect cable from damage and to facilitate easy replacement
- Mount control near seating area and not above Steam head
- Control should be mounted 48" above the floor
- Steam head to be mounted 12" to 18" above the finished floor or 6" above the rim of the tub and as far from the seating are as possible.
- Required Electrical Service: Low-voltage connection from 5P-EST series steam generators via multi-conductor cable (supplied with generator)
- Model is not compatible with 5GE-SMP series generators

WARRANTY

- Steam Generators Lifetime limited warranty; or for commercial purchasers (including for steam bath generators with model numbers beginning with 5COM, which are intended solely for heavy commercial use), one (1) year from the date the product is received by the original purchaser or their authorized representative (installation contractor, etc.).
- Electronic Parts for Steam Bath Generators, Controls, Spa Options and Accessories – two (2) years from the date the product is received by the original consumer purchaser or their authorized representative (installation contractor, etc.); or for commercial purchasers, one (1) year from the date the product is received by the original purchaser or their authorized representative (installation contractor, etc.).
- Please go to www.deltafaucet.com for the complete details of our limited warranty.