

INSTALLATION INSTRUCTIONS For 0723-0100, 0200, 0300 & 0724-0101, 0201, 0301, OAD.25 Manual and 2 position outside air intake hoods

starting installation

zontal return opening.

unit and into control section.

in place.

Downshot

INSTRUCTIONS - Please read completely before

2.) Caulk the back side of the hood flanges. Feed harness through

4.) On down discharge application, remove cover panel over hori-


5.) Install replacement cover panel over return opening and screw

6.) On 2 position hoods, run harness through return chamber of

1.) Unpackage hood, panel and screw package.

3.) Screw hood to duct cover panel.

the grommet in the duct cover panel (2 position only).

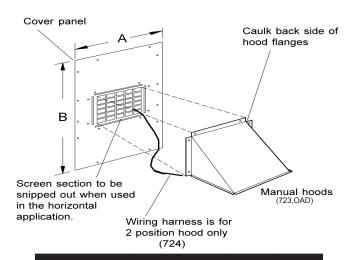

Outside air intake hoods specifications (in inches)					
MicroMetl Part No.	Description	А	в		
0723-0100 0734HJ3-6OA OAD.25-TC0407	Manual O.A. Hood	11 ¹⁵ / ₁₆	26 ¹³ / ₁₆		
0724-0101	2 Position O.A. Hood				
0723-0200 0734HJ7-6OA OAD.25-TC0814	Manual O.A. Hood	13 ⁵ / ₈	34 ³ / ₄		
0724-0201	2 Position O.A. Hood				
0723-0300 OAD.25-TC0814	Manual O.A. Hood	13 ⁵ / ₈	37 ¹ / ₂		
0724-0301	2 Position O.A. Hood				

2/3

Actuator

MANUAL HOOD adjustment settings detail

24 V

Fan Relay

R


T-Stat


White


Red


To: Room

Unit transformer must have an additional 10 V.A. if not, optional transformer must

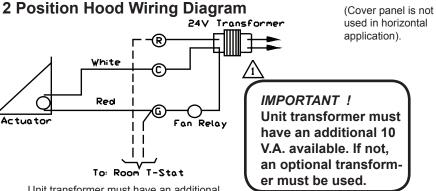

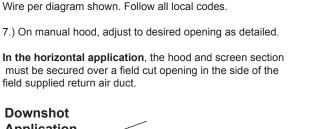

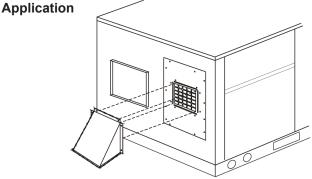

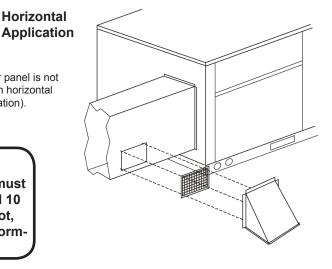

be used.		,		
MicroMetl Indianapolis	1-800-MMC-HVAC	MicroMetl We	st	1-800-884-4662
3419 Roosevelt Avenue Indianapolis, IN. 46218		202 South 18th St.	Sparks, Nevada	89431
Manufacturer reserves the right to discontinue, or change at any time, specifications, designs and prices without notice and without incurring obligations.				
Form No. 1875-6P		Copyright	MicroMetl Corpora	ation 1999. All rights reserved.