

GAS-FIRED WARM AIR FURNACE



WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death or property damage.

— Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

— **WHAT TO DO IF YOU SMELL GAS:**

- Do not try to light any appliance.
 - Do not touch any electrical switch, or use any phone or radio in the vehicle.
 - Leave the building immediately.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



AVERTISSEMENT

RISQUE D'INCENDIE OU D'EXPLOSION

Si les consignes de sécurité ne sont pas suivies à la lettre, cela peut entraîner la mort, de graves blessures ou des dommages matériels.

— Ne pas entreposer ni utiliser d'essence ni autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

— **QUE FAIRE SI UNE ODEUR DE GAZ EST DÉTECTÉE**

- Ne mettre en marche aucun appareil.
 - Ne toucher aucun interrupteur électrique; ne pas utiliser de téléphone dans le bâtiment.
 - Quitter le bâtiment immédiatement.
 - Appeler immédiatement le fournisseur de gaz en utilisant le téléphone d'un voisin. Suivre les instructions du fournisseur de gaz.
 - Si le fournisseur de gaz n'est pas accessible, appeler le service d'incendie.
- L'installation et l'entretien doivent être effectués par un installateur ou une entreprise d'entretien qualifié, ou le fournisseur de gaz.

Installer - *Affix this manual, Installation Guide, and Warranty adjacent to the appliance.*

Owner - *Read and keep all product literature in a safe place for future reference.*



WARNING

SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, TURN OFF THE MANUAL GAS SHUTOFF VALVE EXTERNAL TO THE FURNACE BEFORE TURNING OFF THE ELECTRICAL SUPPLY.



WARNING

TO PREVENT POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, THE FURNACE MUST BE LOCATED TO PROTECT THE ELECTRICAL COMPONENTS FROM WATER.



WARNING

PRODUCT CONTAINS FIBER GLASS WOOL. DISTURBING THE INSULATION IN THIS PRODUCT DURING INSTALLATION, MAINTENANCE OR REPAIR WILL EXPOSE YOU TO FIBERGLASS WOOL. BREATHING THIS MAY CAUSE LUNG CANCER. TO REDUCE EXPOSURE OR FOR FURTHER INFORMATION, CONSULT MATERIAL SAFETY DATA SHEETS AVAILABLE FROM THE ADDRESS SHOWN BELOW.



WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT. THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER INSTALLATION, ADJUSTMENT, SERVICING OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

PROP 65 WARNING FOR CALIFORNIA CONSUMERS



WARNING

Cancer and Reproductive Harm -

www.P65Warnings.ca.gov

0140M00517-A



RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION

19001 Kermier Rd. Waller, Tx 77484
www.goodmanmfg.com • www.amana-hac.com
© 2020 Goodman Manufacturing Company, L.P.

HIG-2005
01/2020

Amana

is a registered trademark of Maytag Corporation or its related companies and is used under license. All rights reserved.



Dear Homeowner, please recognize the following safety information. This information will alert you to the potential for personal injury.

WARNING - Indicates hazards or unsafe practices which **COULD** result in severe personal injury or death.

WARNING
 TO AVOID POSSIBLE EQUIPMENT DAMAGE, PERSONAL INJURY, FIRE OR DEATH, THE FOLLOWING INSTRUCTIONS MUST BE OBSERVED REGARDING LOCATION, AIR REQUIREMENTS AND OPERATING PROCEDURES.

WARNING
 HEATING UNITS SHOULD NOT BE UTILIZED WITHOUT REASONABLE ROUTINE INSPECTION, MAINTENANCE, AND SUPERVISION. IF THE BUILDING IN WHICH ANY SUCH DEVICE IS LOCATED WILL BE VACANT, CARE SHOULD BE TAKEN THAT SUCH DEVICE IS ROUTINELY INSPECTED, MAINTAINED, AND MONITORED. IN THE EVENT THAT THE BUILDING IS EXPOSED TO FREEZING TEMPERATURES, ALL WATER-BEARING PIPES SHOULD BE DRAINED. THE BUILDING SHOULD BE PROPERLY WINTERIZED, AND THE WATER SOURCE CLOSED. SHOULD THE BUILDING BE EXPOSED TO FREEZING TEMPERATURES, ANY HYDRONIC COIL UNITS SHOULD BE DRAINED AS WELL; AND, IN SUCH CASE, ALTERNATIVE HEAT SOURCES SHOULD BE UTILIZED.

Should the gas supply fail to shut off or if overheating occurs, shut off the gas valve to the furnace before shutting off the electrical supply.

En cas de température excessive, ou s'il est impossible de couper l'alimentation en gaz, fermer le robinet manuel d'alimentation en gaz du générateur d'air chaud avant de couper l'alimentation électrique.

The installation and servicing of this equipment must be performed by qualified, experienced technicians only.

SAFETY

- The furnace area must be kept clear and free of combustible materials, gasoline, and other flammable vapors and liquids.
- The furnace must be kept free and clear of insulating material. Examine the furnace area after installation and periodically thereafter. Examine the furnace area anytime work is performed or insulation has been added since insulating materials have the potential to be combustible.
- For proper and safe operation the furnace needs air for combustion and ventilation, do not block or obstruct air openings on the furnace, air openings to the area in which the furnace is installed, and the spacing's around the furnace.
- Refer to the lighting instruction label on the furnace door and information & illustrations in this document on pages 5 & 6 for lighting and shutting down the furnace.

- Contact a qualified service agency should your furnace ever fail to operate.
- Make certain the required clearances for the furnace are always maintained. These clearances are listed on the furnace clearance label. If any question develops, contact the installer of the furnace or another qualified servicer.

WARNING
 TO AVOID PERSONAL INJURY OR FIRE, MINIMUM CLEARANCES TO COMBUSTIBLE SURFACES MUST BE FOLLOWED.

AIR REQUIREMENTS

WARNING
 TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, SUFFICIENT FRESH AIR FOR PROPER COMBUSTION AND VENTILATION OF FLUE GASES MUST BE SUPPLIED. MOST HOMES REQUIRE OUTSIDE AIR BE SUPPLIED INTO THE FURNACE AREA.

If fuel-burning appliances are starved for air, the flue gases produced may not vent outdoors properly. These flue gases may include carbon monoxide.

WARNING



CARBON MONOXIDE POISONING HAZARD

Failure to keep this compartment closed except when servicing could result in carbon monoxide poisoning or death.

This compartment must be closed except when servicing.

ADVERTISSEMENT

RISQUE D'EMPOISONNEMENT AU MONOXYDE DE CARBONE

Si ce compartiment n'est pas fermé en tout temps, sauf en cas de réparation, il y a risque d'empoisonnement ou monoxyde de carbone ou de mort.

Ce compartiment doit être fermé sauf au moment de l'entretien.

ADVERTENCIA

PELIGRO MONOXIDO DE CARBONO TOXICO

El fracaso de no mantener compartimiento cerrado menos durante, atender, podría tener como resultado envenenar de monóxido de carbono o muerte.

Este compartimiento debe cerrado menos al atender.

0140L00106 REV C

Carbon monoxide or "CO" is a colorless and odorless gas produced when fuel is not burned completely or when the flame does not receive sufficient oxygen.

Be aware of these air starvation signals which indicate conditions that may result in carbon monoxide or that carbon monoxide may be present:

1. Headaches, Nausea, Dizziness, Flu-like symptoms.
2. Excessive humidity, heavily frosted windows or a moist “clammy” feeling in the home.
3. Smoke from a fireplace will not draw up the chimney.
4. Flue gases that will not draw up the appliance vent pipe.

PROPANE (LP) GAS INSTALLATIONS ONLY

For furnaces operating on propane gas, please review the following warnings before use.

⚠ WARNING
TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE OR EXPLOSION CAUSED BY A PROPANE GAS LEAK, INSTALL A GAS DETECTING WARNING DEVICE. SINCE RUST CAN REDUCE THE LEVEL OF ODORANT IN PROPANE GAS, A GAS DETECTING WARNING DEVICE IS THE ONLY RELIABLE WAY TO DETECT A PROPANE GAS LEAK. CONTACT A LOCAL PROPANE GAS SUPPLIER ABOUT INSTALLING A GAS DETECTING WARNING DEVICE.

⚠ WARNING
IF THE GAS FURNACE IS INSTALLED IN A BASEMENT, AN EXCAVATED AREA OR CONFINED SPACE, IT IS STRONGLY RECOMMENDED TO CONTACT A PROPANE SUPPLIER TO INSTALL A GAS DETECTING WARNING DEVICE IN CASE OF A GAS LEAK.
<ul style="list-style-type: none"> • SINCE PROPANE GAS IS HEAVIER THAN AIR, ANY LEAKING GAS CAN SETTLE IN ANY LOW AREAS OR CONFINED SPACES. • PROPANE GAS ODORANT MAY FADE, MAKING THE GAS UNDETECTABLE EXCEPT WITH A WARNING DEVICE.

⚠ WARNING
AN UNDETECTED GAS LEAK WILL CREATE A DANGER OF EXPLOSION OR FIRE. IF THE PRESENCE OF GAS IS SUSPECTED, FOLLOW THE INSTRUCTIONS ON THE COVER OF THIS MANUAL. FAILURE TO DO SO COULD RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

FURNACE OPERATION


⚠ WARNING
ELECTRICAL COMPONENTS ARE CONTAINED IN BOTH COMPARTMENTS. TO AVOID PERSONAL INJURY, ELECTRICAL SHOCK OR DEATH, DO NOT REMOVE ANY INTERNAL COMPARTMENT COVERS. CONTACT A QUALIFIED SERVICER AT ONCE IF AN ABNORMAL CONDITION IS NOTICED.

NOTE: DO NOT OPERATE THE FURNACE UNLESS THE DOORS ARE IN PLACE.


FURNACE START-UP

1. Close the external manual gas shut-off valve.
2. Turn off the electrical power to the furnace.
3. Set the room thermostat to the lowest possible setting.
4. Remove the burner compartment door.
5. This furnace is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
6. Move the furnace’s gas valve ON/OFF switch to the OFF position.

7. Wait five minutes to clear out any gas. Then smell for gas, including near the floor as some types of gas are heavier than air.
8. If you smell gas following the five minute waiting period in step 7, immediately follow the instructions on the cover of this manual. If you do not smell gas after five minutes, move the furnace’s gas valve ON/OFF switch to the ON position.
9. Replace the burner compartment door.
10. Open the external manual gas shut-off valve.
11. Turn on the electrical power to the furnace.
12. Adjust the thermostat to a setting above room temperature
13. After the burners are lit, set the thermostat to desired temperature.

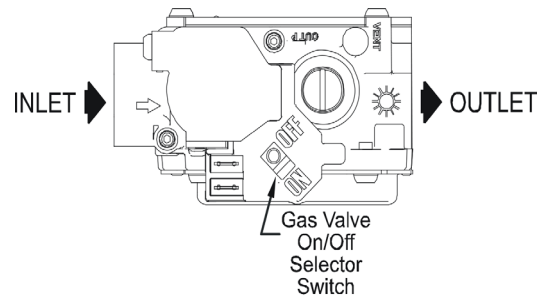

White-Rodgers Model 36G22/36J22 (Single-Stage)

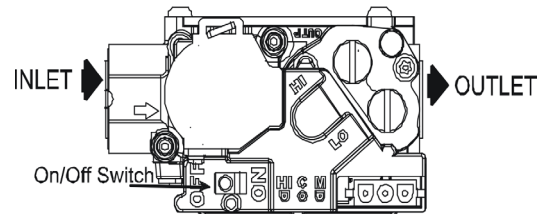

White-Rodgers Model 36G54/36J54 (Two-Stage)

FURNACE SHUT DOWN

To shut down your furnace, follow the steps listed below.

1. Set the thermostat to the lowest setting.
2. Integrated control closes gas valve extinguishing flame.
3. Induced draft blower is de-energized following a 15 second delay. The circulator blower is de-energized following a 90, 120, 150, or 180 second delay period.
4. Remove the burner compartment door.
5. Move the furnace’s gas valve ON/OFF switch to the OFF position.
6. Close the external manual gas shut-off valve.
7. Replace the burner compartment door.

LOCKOUT RESET

Furnace lockout is characterized by a non-functioning furnace (circulator blower may be running continuously) providing a diagnostic LED code. Lockout results when a furnace control detects abnormal conditions. If the furnace is in “lockout”, it may be reset by any of the following methods:

1. One hour automatic reset. Control will automatically reset itself and attempt to resume normal operations following a one hour lockout period.
2. Power interruption. Interrupt 115 volt power to the furnace for greater than 20 seconds.
3. Thermostat cycle. Interrupt thermostat signal to the furnace for between 0 and 20 seconds.

If the condition which originally caused the lockout still exists, the control will return to lockout. If your furnace frequently locks out, a problem exists which must be corrected. Contact a qualified servicer.

ROUTINE MAINTENANCE

Maintenance is to be performed by a qualified service technician only. User maintenance is to be restricted to frequent air filter changes and to ensure the warnings and notices found elsewhere in this manual be followed. We recommend that at a minimum system maintenance be performed by a qualified service technician prior to the beginning of each heating season, and if equipped with air conditioning, prior to air conditioning season.

 WARNING
PERSONAL INJURY OR DEATH MAY RESULT FROM IMPROPER MAINTENANCE PERFORMED BY UNTRAINED PERSONNEL. CALL YOUR INSTALLING DEALER OR OTHER QUALIFIED SERVICE COMPANIES TO PERFORM THE MAINTENANCE INSPECTION.

 WARNING
TO PREVENT PERSONAL INJURY OR DEATH DUE TO ELECTRIC SHOCK, DISCONNECT ELECTRICAL POWER BEFORE SERVICING THIS UNIT.

ANNUAL INSPECTION

The furnace should be inspected by a qualified installer, or service agency at least once per year. Do not attempt to service the unit in any way. This check should be performed at the beginning of the heating season by a qualified technician. This will insure that all furnace components are in proper working order and that the heating system functions appropriately. Particular attention should be paid to the following items.


- Flue pipe system. Check for blockage and/or leakage. Check the outside termination and the connections at and internal to the furnace.
- Combustion air intake pipe system (where applicable). Check for blockage and/or leakage. Check the outside termination and the connection at the furnace.
- Heat exchanger. Check for corrosion and/or buildup within the heat exchanger passageways.
- Burners. Check for proper ignition, burner flame, and flame sense. Flames should extend directly outward from burners without curling, floating or lifting off.
- Wiring. Check electrical connections for tightness and/or corrosion. Check wires for damage.
- Drainage system. Check for blockage and/or leakage. Check hose connections at and internal to furnace.

- Filters. Check that filters are clean.

MOTORS

The combustion air motor and indoor blower motor are permanently lubricated and require no further lubrication.

FILTERS

 WARNING
TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, DISCONNECT ELECTRICAL POWER BEFORE REMOVING FILTERS OR PERFORMING ANY OTHER MAINTENANCE. NEVER OPERATE FURNACE WITHOUT A FILTER INSTALLED BECAUSE DUST AND LINT WILL BUILD UP ON INTERNAL PARTS RESULTING IN LOSS OF EFFICIENCY, EQUIPMENT DAMAGE OR POSSIBLE FIRE.

A return air filter is not supplied with this furnace and cannot be installed inside the cabinet; however, **a filter must be in place when the unit is operating.**

Filters must be inspected, cleaned or changed every two months or as required. Dirty filters are the most common cause of inadequate heating or cooling performance.





FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS**
- Do not try to light any appliance.
 - Do not touch any electric switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control lever. Never use tools. If the lever will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been underwater. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been underwater.

OPERATING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
5. Push the gas control lever to "OFF" Position. Do not force.
6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you then smell gas, STOP! Follow "B" in the safety information above on this label if you don't smell gas, go to next step.
7. Push gas control lever to "ON".
8. Replace access panel.
9. Turn on all electric power to the appliance.
10. Set thermostat to desired setting.
11. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas company.

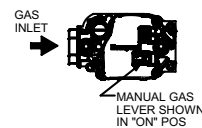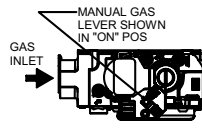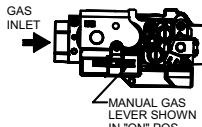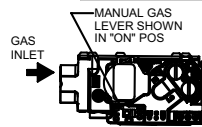

TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Push the gas control lever to "OFF" Position. Do not force.
4. Replace control access panel.

0140F02456-A




LIRE AVANT DE METTRE EN MARCHÉ

AVERTISSEMENT: Quiconque ne respecte pas à la lettre les instructions dans le présent manuel risque de déclencher un incendie ou une explosion entraînant des dommages matériels, des lésions corporelles ou la perte de vies humaines.

- A. Cet appareil ne comporte pas de veilleuse. Il est muni d'un dispositif d'allumage qui allume automatiquement le brûleur. Ne pas tenter d'allumer le brûleur manuellement.
- B. AVANT DE LE FAIRE FONCTIONNER, renifler tout autour de l'appareil pour déceler une odeur de gaz. Renifler près du plancher, car certains gaz sont plus lourds que l'air et peuvent s'accumuler au niveau du sol.
- QUE FAIRE S'IL Y A UNE ODEUR DE GAZ**
- Ne pas tenter d'allumer d'appareils.
 - Ne toucher à aucun interrupteur; ne pas vous servir des téléphones dans le bâtiment.
 - Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur de gaz.
 - Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.
- C. Ne pousser ou tourner la manette d'admission de gaz qu'à la main. Ne jamais employer d'outil à cette fin. Si la manette reste coincée, ne tenter pas de la réparer; appelez un technicien qualifié. Quiconque tente de forcer la manette ou de la réparer peut provoquer une explosion ou un incendie.
- D. Ne pas se servir de cet appareil s'il a été plongé dans l'eau, même partiellement. Faire inspecter l'appareil par un technicien qualifié et remplacer toute partie du système de contrôle et toute commande qui ont été plongées dans l'eau.

MISE EN MARCHÉ

1. ARRÊTEZ Lisez les instructions de sécurité dans la section supérieure de cette étiquette.
2. Régler le thermostat à la température la plus basse.
3. Couper l'alimentation électrique de l'appareil.
4. Cet appareil ménageant étant doté d'un système d'allumage automatique, ne pas essayer à allumer le brûleur manuellement.
5. Pousse le levier du contrôle du gaz à "OFF/ ARRET" position.
6. Attendre cinq (5) minutes pour laisser échapper tout le gaz. Renifler tout autour de l'appareil, y compris près du plancher, pour déceler une odeur de gaz. Si c'est le cas, ARRÊTEZ. Passer à l'étape B des instructions de sécurité sur la portion supérieure de cette étiquette. S'il n'y a pas d'odeur de gaz, passer à l'étape suivante.
7. Pousse le levier du contrôle du gaz à "ON/MARCHE" position.
8. Remettre en place le panneau d'accès.
9. Mettre l'appareil sous tension.
10. Régler le thermostat à la température désirée.
11. Si l'appareil ne se met pas en marche, suivre les instructions intitulées Comment couper l'admission de gaz de l'appareil et appeler un technicien qualifié ou le fournisseur de gaz.

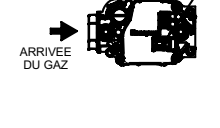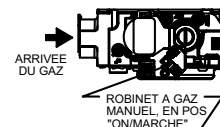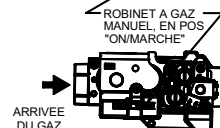

POUR COUPER L'ADMISSION DE GAZ DE L'APPAREIL


1. Régler le thermostat à la température la plus basse.
2. Couper l'alimentation électrique de l'appareil s'il faut procéder à des opérations d'entretien.
3. Pousse le levier du contrôle du gaz à "OFF/ ARRET" position. Ne pas forcer.
4. Remettre en place le panneau d'accès.



0140F02456-A

SAFETY LABELS
NOTE: IF SAFETY LABELS ARE MISSING OR ILLEGIBLE, CONTACT THE INSTALLING DEALER OR OUR CUSTOMER SERVICE DEPARTMENT FOR ORDERING INFORMATION.

SAFETY LABELS

	⚠ WARNING
	RISK OF ELECTRIC SHOCK CAN CAUSE INJURY OR DEATH. DISCONNECT ALL REMOTE ELECTRIC POWER SUPPLIES BEFORE SERVICING. THIS COMPARTMENT MUST BE CLOSED EXCEPT WHEN SERVICING.
	⚠ AVERTISSEMENT
	DANGER DE CHOC ÉLECTRIQUE OU DE MORT. COUPEZ TOUT LE COURANT AVANT TOUT ENTRETIEN OU RÉPARATION. LE COMPARTIMENT DOIT RESTER FERMÉ SAUF PENDANT L'ENTRETIEN.
	⚠ ADVERTENCIA
	PELIGRO DE CHOQUE ELÉCTRICO O MUERTE. DESCONECTE TODAS LAS FUENTES DE ENERGÍA ELÉCTRICA ANTES DE MANTENIMIENTO O SERVICIO TÉCNICO. EL COMPARTIMIENTO DEBE PERMANECER CERRADO EXCEPTO DURANTE EL SERVICIO DE MANTENIMIENTO.
	⚠ WARNING
	HEATING UNITS SHOULD NOT BE UTILIZED WITHOUT REASONABLE ROUTINE INSPECTION, MAINTENANCE, AND SUPERVISION. IF THE BUILDING IN WHICH ANY SUCH DEVICE IS LOCATED WILL BE VACANT, CARE SHOULD BE TAKEN THAT SUCH DEVICE IS ROUTINELY INSPECTED, MAINTAINED, AND MONITORED. IN THE EVENT THAT THE BUILDING IS EXPOSED TO FREEZING TEMPERATURES, ALL WATER-BEARING PIPES SHOULD BE DRAINED. THE BUILDING SHOULD BE PROPERLY WINTERIZED, AND THE WATER SOURCE CLOSED. SHOULD THE BUILDING BE EXPOSED TO FREEZING TEMPERATURES, ANY HYDRONIC COIL UNITS SHOULD BE DRAINED AS WELL; AND, IN SUCH CASE, ALTERNATIVE HEAT SOURCES SHOULD BE UTILIZED.
	⚠ AVERTISSEMENT
	UNITÉS DE CHAUFFAGE NE DEVRAIT ÊTRE UTILISÉ SANS RAISONNABLE INSPECTION DE ROUTINE, LA MAINTENANCE ET LA SUPERVISION, SI L'IMMEUBLE DANS LEQUEL UN TEL DISPOSITIF SE TROUVE SERA VACANTE, IL CONVIENT DE VEILLER À CE QUE CE TYPE D'APPAREIL EST RÉGULIÈREMENT INSPECTÉ ET ENTRETIENU, ET SURVEILLÉ DANS LE CAS OÙ L'IMMEUBLE EST EXPOSÉE A DES TEMPÉRATURES DE GEL, TOUTE L'EAU DES TUYAUX DE ROULEMENT DOIT ÊTRE VIDANGÉE, LE BÂTIMENT DEVRAIT ÊTRE CORRECTEMENT URBANO, ET LA SOURCE D'EAU FERME. SI LE BÂTIMENT EST EXPOSÉ À DES TEMPÉRATURES DE GEL, AUCUNE BOBINE HYDRONIQUE UNITÉS DOIT ÊTRE VIDANGE AINSI; ET, DANS DE TELS CAS, D'AUTRES SOURCES DE CHALEUR DEVAIT ÊTRE UTILISÉ.
	⚠ WARNING
	FIRE, EXPLOSION AND ASPHYXIATION HAZARD
	IMPROPER ADJUSTMENT, ALTERATION, SERVICE, MAINTENANCE OR INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH. READ AND FOLLOW INSTRUCTIONS AND PRECAUTIONS IN USER'S INFORMATION MANUAL PROVIDED WITH THIS FURNACE. INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED SERVICE AGENCY OR GAS SUPPLIER.
	⚠ AVERTISSEMENT
	RISQUE D'INCENDIE ET D'ASPHYXIE
	UN REGLAGE, UNE MODIFICATION, UN RÉPARATION, UN ENRETIEN OU UNE INSTALLATION INCORRECT PUEUT ENTRAÎNER DES BLESSEURS GRAVES OU LA MORT. SUIVRE LES INSTRUCTION ET LES CONSIGNES QUI FIGURENT DANS LA NOTICE D'UTILISATION QUI ACCOMPAGNE CE GÉNÉRATEUR D'AIR CHAUD. L'INSTALLATION ET L'ENTRETIEN DOIVENT ÊTRE EFFECTUÉS PAR UN RÉPARATEUR QUALIFIÉ OU PAR LE FOURNISSEUR DE GAZ.

0140M00409

⚠ WARNING: FIRE, EXPLOSION AND ASPHYXIATION HAZARD

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, OR EXPOSURE TO SUBSTANCES IN FUEL OR FROM FUEL COMBUSTION WHICH CAN CAUSE DEATH OR SERIOUS ILLNESS, AND WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, OR OTHER REPRODUCTIVE HARM. READ AND FOLLOW INSTRUCTIONS AND PRECAUTIONS IN USER'S INFORMATION MANUAL PROVIDED WITH THIS FURNACE. INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER, SERVICE AGENCY, OR GAS SUPPLIER.

⚠ AVERTISSEMENT: RISQUE D'INCENDIE, D'EXPLOSION ET ASPHYXIE

UN REGLAGE, UNE MODIFICATION, UNE RÉPARATION, UN ENRETIEN OU UNE INSTALLATION INCORRECT PUEUT ENTRAÎNER DES BLESSEURS GRAVES OU LA MORT. SUIVRE LES INSTRUCTION ET LES CONSIGNES QUI FIGURENT DANS LA NOTICE D'UTILISATION QUI ACCOMPAGNE CE GÉNÉRATEUR D'AIR CHAUD. L'INSTALLATION ET L'ENTRETIEN DOIVENT ÊTRE EFFECTUÉS PAR UN RÉPARATEUR QUALIFIÉ OU PAR LE FOURNISSEUR DE GAZ.

SEE INSIDE SURFACE OF BURNER COMPARTMENT DOOR FOR LIGHTING / OPERATING INSTRUCTIONS.

LES INDICATIONS POUR L'ECLAIRAGE ET LE SERVICE SE TROUVENT A LA SURFACE INTERIEURE LA PORTE DU COMPARTIMENT DU BRULEUR.

⚠ WARNING: FIRE AND EXPLOSION HAZARD

CAN RESULT IN SERIOUS INJURY OR DEATH. DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. STORAGE OF OR USE OF GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS APPLIANCE CAN RESULT IN SERIOUS INJURY OR DEATH.

⚠ AVERTISSEMENT: RISQUE D'INCENDIE ET D'EXPLOSION


RISQUE DE BLESSURES GRAVES OU DE MORTE. NE PAS ENTREPOSER NI UTILISER DE L'ESSENCE NI D'AUTRES VAPEURS OU LIQUIDES INFLAMMABLES DANS LE VOISINAGE DE CET APPAREIL, NI DE TOUT AUTRE APPAREIL. LE FAIT D'ENTREPOSER OU D'UTILISER DE L'ESSENCE OU D'AUTRES LIQUIDES OU VAPEURS INFLAMMABLES À PROXIMITÉ DE CET APPAREIL OU DE TOUT AUTRE APPAREIL PEUT CAUSER DES BLESSURES GRAVES OU LA MORT.

FILTER(S) SHOULD BE INSPECTED FREQUENTLY AND CLEANED WHEN NECESSARY. WHEN REPLACEMENT IS REQUIRED BE SURE TO USE THE SAME TYPE (CLASS 1 OR 2) AND SIZE ORIGINALLY INSTALLED AND THAT IT IS U. L. C. *CERTIFIED.

*CANADIAN REQUIREMENT

LES FILTRES DOIVENT ÊTRE FREQUEMMENT INSPECTÉS ET NETTOYÉS SI NECESSAIRE, REMPLACES-LES DE FILTRES DU MEME TYPE (CLASSE 1 OU 2) ET FORMAT QUE DANS L'EQUIPMENT ORIGINAL. CERTIFIES PAR LE U. L. C.

22317001

	⚠ DANGER CARBON MONOXIDE POISONING HAZARD
	Special warning for installation of furnaces or air handling units in enclosed area such as garages, utility rooms or parking areas. Carbon monoxide producing devices (such as an automobile, space heater, gas water heater, etc.) Should not be operated in enclosed areas such as unventilated garages, utility room or parking areas because of the danger of carbon monoxide (CO) poisoning resulting from the exhaust emissions. If a furnace or air handler is installed in an enclosed area such as garage, utility room or parking area and a carbon monoxide producing device is operated therein, there must be adequate, direct outside ventilation. Carbon monoxide emissions can be (re)circulated throughout the structure if the furnace or air handler is operating in any mode. CO can cause serious illness including permanent brain damage or death.

⚠ DANGER RISQUE D'EMPOISONNEMENT AU MONOXYDE DE CARBONE
Avertissement spécial au sujet de l'installation d'appareils de chauffage ou de traitement d'air dans des clos tels les garages, es locaux d'entretien et les stationnements. Évitez de mettre en marche les appareils produisant du monoxyde de carbone (tels que es automobiles, les appareils de chauffage autonome, les chauffe-eau au gaz, etc.) dans des endroits non ventilés tels que les garages, les locaux d'entretien et les stationnements. Les émissions de gaz polluants provenant de ces appareils augmentent le Risque d'empoisonnement au monoxyde de carbone. Si vous devez faire fonctionner ces appareils dans un endroit clos, assurez-vous qu'il y ait une ventilation directe provenant de l'extérieur. Les émissions de monoxyde de carbone peuvent être recirculés dans les endroits clos, si l'appareil de chauffage ou de traitement d'air sont en marche. Le monoxyde de carbone peut causer des maladies graves telles que des dommages permanents au cerveau et même la mort.

⚠ PELIGRO de envenenamiento o por monóxido de carbono
Advertencia especial para la instalación de calderas o unidades que llevan aire en áreas encerradas tales como, garajes, cuartos de uso general o áreas de parqueo. Los aparatos que producen monóxido de carbono (tales como carros, calentadores de espacios, calentadores de agua de gas, etc.) No deben operarse en áreas encerradas tales como garajes, cuartos de uso general o áreas de parqueo sin ventilación, por el peligro de envenenamiento por monóxido de carbono (CO) que resulta de las emisiones de gases de combustion. Si el aparato se opera en dichas áreas, debe haber una ventilación adecuada, directa al exterior. Las emisiones de monóxido de carbono pueden recircular a través de la estructura si el calentador o el recirculador de air estan encendidos. El CO puede ocasionar enfermedades serias como daño cerebral permanente o muerte.

0140M00020

THIS PAGE IS INTENTIONALLY LEFT BLANK

Most questions can be answered by your local dealer.
For additional information, please call:

CONSUMER INFORMATION LINE — TOLL FREE
1-855-770-5678 (U.S. only)

Email us at: customerservice@goodmanmfg.com

Fax us at: (731) 856-1821
(Not a technical assistance line for dealers)

Outside the U.S., call 1-713-861-2500.
(Not a technical assistance line for dealers)
Your telephone company will bill you for the call.

**To obtain the proper labels, the MODEL Number and SERIAL Number of the unit must be supplied.
These numbers are recorded on the nameplate of the furnace.
For convenience, record this information here:**

MODEL NUMBER: _____

SERIAL NUMBER: _____

19001 Kermier Rd. Waller, Tx 77484
www.goodmanmfg.com • www.amana-hac.com
© 2020 Goodman Manufacturing Company, L.P.

Amana is a registered trademark of Maytag Corporation or its related companies and is used under license. All rights reserved.