



## INSTALLATION INSTRUCTIONS

1. Rockford RLSW Lint interceptors do not require any additional fittings.
2. Always consider the location of the interceptor, for cleaning maintenance.
3. Excavation for flush with grade installation shall be free of any materials that may damage the interceptor and its coatings. The interceptor shall be set to be level and plumb, on a compacted material or full support concrete slab. Taking care not to damage the coatings. Coat any exposed fittings with an asphalt-based coating, and to any damaged areas due to handling.
4. The interceptor's static water level (invert of the outlet line) shall be at least 6" below the bottom of any floor drain. In addition, the static water level must be below the frost line in your area.
5. The equipment used to set the interceptor must be of adequate size capable of lifting the entire unit. Do not drag or drop the interceptor into place or possible damage to the structure or its coatings may occur.
6. Connect the fittings per your local codes. Vent the inlet and outlet on all RLSW units.
7. Fill the interceptor with clean water as soon as possible after installation.
8. Any interceptor installed in traffic areas needs to be reinforced to withstand the anticipated loads.
9. Areas subject to high water tables, must consider anchoring the unit.

*NOTE: All interceptors must be installed per local codes.*

