Maintenance Guide RP-Series



Regular and thorough cleaning of your interceptor assures maximum operating efficiency. Here's what you need to know:

When to Clean Your Interceptor

It is time to clean your Rockford interceptor when you notice a gradual slowdown of the drainage at the fixtures that are draining into the unit. With normal use, you should be able to establish a cleaning cycle. Whether once a week, or once a month. A thorough and regular cleaning each time will assure maximum operating efficiency, and will extend the life of your interceptor.

Rockford does not recommend adding enzymes or other short-circuiting products to a grease interceptor.

How to Clean Your Interceptor

- 1. Run cold water for a few minutes to congeal the grease. Turn off water.
- 2. Remove the cover attachment screws and remove cover.
- 3. Scoop out all floating grease and any solids that have collected in the unit. Including scraping the internal walls, and baffles. Place the grease in a proper waste container for disposal.
- 4. Once clean, run warm water into the interceptor to establish the operating level in the unit.
- 5. Inspect the cover gasket for any damage and replace if necessary. Call Rockford for any replacement gasket needs.
- 6. Replace and secure the cover with the removed screws.

How to Replace a Gasket

1. Remove all gasket material from the top lip of the unit. Once removed and the surface is clean, cut the new gasket to approximately half an inch longer than needed. Place the self-adhesive side towards the unit's top lip. Start by placing the gasket in the corners, and working from the center out to the corners. Making sure the corners fill in tightly.

