

OMNI T2/C2/F2/R2

INSTALLATION INSTRUCTIONS

OMNI meters can be installed vertically or rotated on the bolt pattern in any orientation above ground and pit sets in up to four (4) feet of water depth for continuous submersion and up to ten (10) feet for intermittent submersion. Contact Sensus with any questions.

To ensure valid registration, proper performance and meter longevity, the following factors should be considered when installing Sensus OMNI Meters.

1. When installing Sensus OMNI Meters with the strainer, a minimum of 2 1/2 pipe diameters of straight run of pipe or equivalent full open components is required upstream and downstream of the meter or strainer flanges. Full open flow components may consist of straight pipe, full open gate valves, bypass tees and concentric reducers (1 nominal pipe size reduction only). For all other installation configurations, a minimum of 5 pipe diameters of straight run is required upstream.¹
2. Gate valves located immediately upstream or downstream are acceptable, provided they are fully open during meter service and are not used to throttle flow rates through the meter.

3. Install nonconcentric reducers, check valves, back flow preventers, PRV (pressure reducing valves), throttling devices, and altitude valves no closer than 4 pipe diameters downstream of the meter. Always avoid placing any of these devices upstream of any meter since the placement will put the meter in a low pressure zone and can cause inconsistent accuracy and reduced longevity.


Accuracy levels may be determined with comparison accuracy testing by:

- using a Sensus Portable Large Meter Tester
- removing the suspect meter and testing it on a calibrated test bench
- returning the suspect measuring chamber or complete meter to Sensus for a certified accuracy test.

Note: High flow meter applications or near open to air discharge must maintain a minimum 25 psi downstream pressure to assure accuracy and meter longevity. Pumps should not be located downstream unless pressure sustaining devices are utilized to maintain at least the 25 psi at the meter outlet.

For more detailed OMNI meter installation instructions, please see the OMNI User Guide. This OMNI installation sheet takes precedence over all other OMNI installation documents.

¹ Ford setters acceptable on 1 1/2" and 2" OMNI R2 Meters.

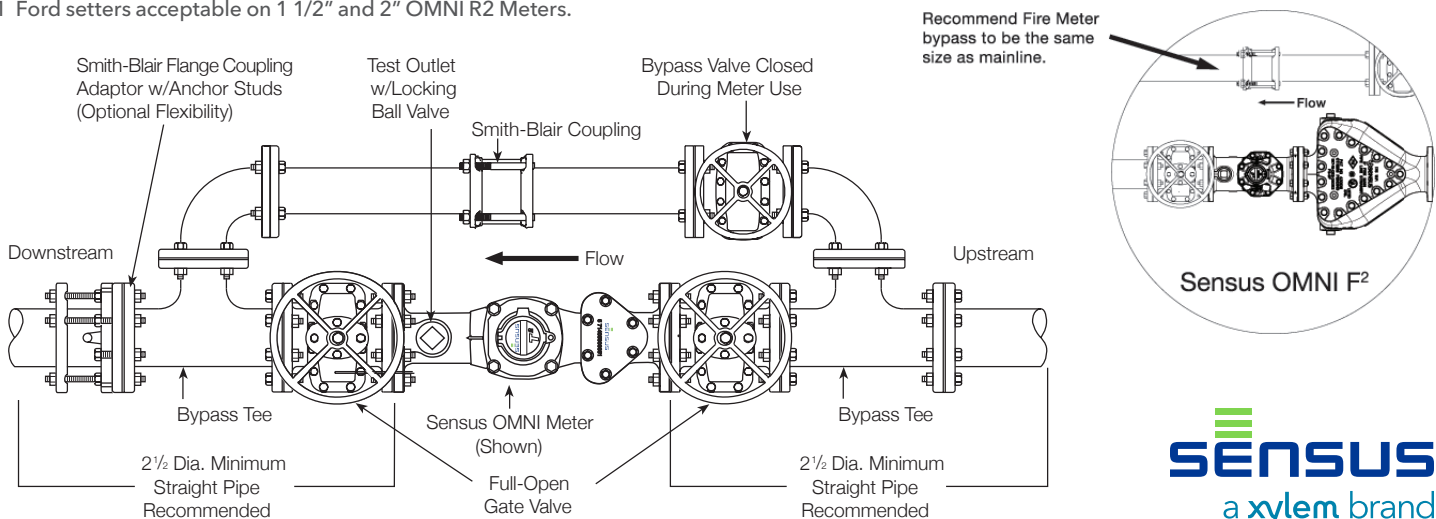



xylem.com

SENSUS | 637 Davis Drive | Morrisville, NC 27560 | 800.638.3748 | [sensus.com](https://www.sensus.com)

©2020 Sensus. All products purchased and services performed are subject to Sensus' terms of sale, available at either [sensus.com/TC](https://www.sensus.com/TC) or 1-800-638-3748. Sensus reserves the right to modify these terms and conditions in its own discretion without notice to the customer. The Sensus logo is a registered trademark of Sensus.

This document is for informational purposes only, and SENSUS MAKES NO EXPRESS WARRANTIES IN THIS DOCUMENT. FURTHERMORE, THERE ARE NO IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES AS TO FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. ANY USE OF THE PRODUCTS THAT IS NOT SPECIFICALLY PERMITTED HEREIN IS PROHIBITED.