


3-STEP QUICK GUIDE:

1. Remove

WARNING: TAKE NOTE OF HUMIDIFIER CONTROL SETPOINT AND TURN DIAL TO OFF POSITION BEFORE STARTING.

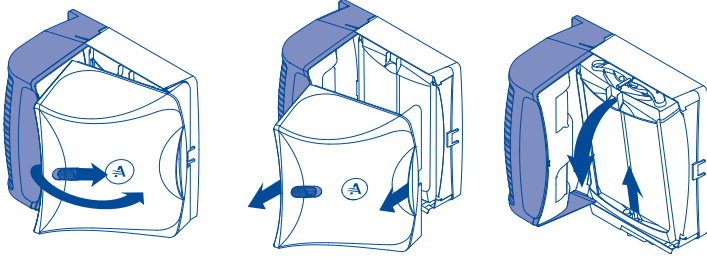


a. Slide latch to release cover and rotate away from fan module (Model 720) or bypass module (Model 620).

b. Remove cover and set aside.

c. Tilt HydroCore forward. Remove then dispose. See Recycling Instructions.

2. Inspect and Replace

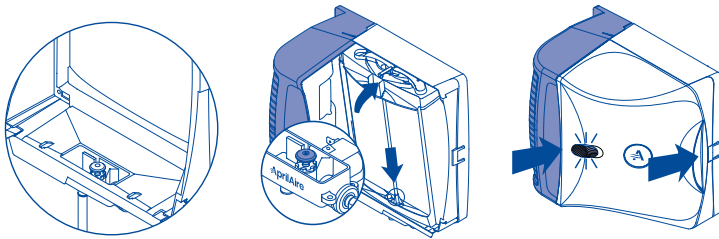

a. Inspect base, valve cup, orifice, and drain line for buildup and clean if necessary* (see Cleaning Instructions).

b. Ensure rubber seal cap is still in place on valve orifice. Align HydroCore to valve, then tilt and snap in place.

c. Align cover to outside edge of base and push or pivot into place. Ensure cover is fully latched to avoid air leaks.

*Hard water installations may require additional valve cleaning and more frequent replacement of orifice (See included Cleaning Instructions)

3. System Check List

Digital Humidifier Control (Model 60):


- ☐ Turn on the HVAC blower at the thermostat.
- ☐ Rotate the dial clockwise to **TEST/RESET** (past the click) to reset Change Water Panel indicator light and check operation. The humidifier will operate for one minute.
- ☐ Rotate the dial counterclockwise to set control to original position.

DO NOT LEAVE IN TEST MODE; HUMIDIFIER WILL NOT OPERATE.

Manual Humidifier Control (Model 4655):

- ☐ Turn on the HVAC blower at the thermostat.
- ☐ Rotate the dial counterclockwise to the highest humidity setting (the humidifier will run if the relative humidity is higher than the set point).
- ☐ Rotate the dial clockwise to set control to original position.

Recycling Instructions

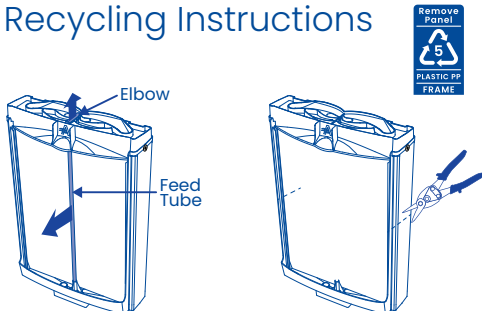

a. Remove elbow and feed tube from frame. Recycle feed tube and throw away elbow.

b. Use shears or tin snips to cut through both sides of the frame.


c. Separate frame and panel. Recycle frame and throw away used water panel

NOTE: Check local recycling regulations for polypropylene.

AprilAire[®]

HydroCore[™]

SCAN TO LEARN MORE

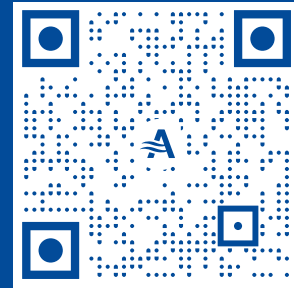

- Maintenance videos and product information
- Easily reorder HydroCore replacements
- Learn more about our Healthy Air Products

REPLACE
EVERY
12
MONTHS

For optimal performance of your AprilAire Humidifier, we recommend HydroCore[™] replacement at least **once per heating season.**



AIR FILTER UNIT
10017340
AS TO FLAMMABILITY
ONLY 697A

Designed & Made in the USA
01.26 | © 2026 AprilAire
Madison, WI | aprilair.com
EPA Est. No. 2539-WI-2
Patent: rpc-pat.com