

INSTALLATION INSTRUCTIONS



For more information contact...

WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: www.woodfordmfg.com or email: sales@woodfordmfg.com

A Division of WCM Industries, Inc.

Model B65 & B67 Box Type - Automatic Draining Wall Hydrant

Rev 01/11 Form No. IIB65.101



Model B65 with Single Check Vacuum Breaker



Model B67 with Double Check Backflow Preventer

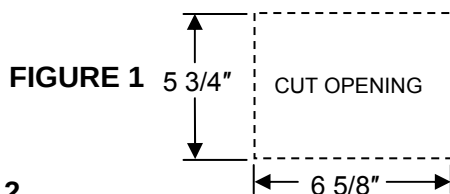


FIGURE 1

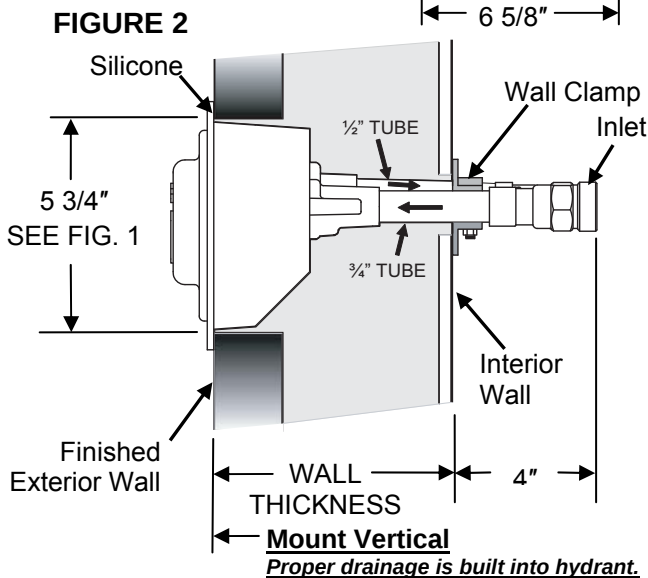


FIGURE 2

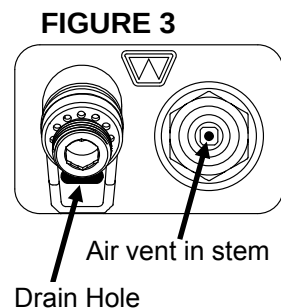


FIGURE 3



EXAMPLE: B65 or B67
installed in a block wall.

The hydrant must be properly installed and operated to insure drainage. Improperly installed or operated hydrants may freeze and burst in freezing weather.

INSTALLATION INSTRUCTIONS:

1. Before installation, flush supply line to remove any debris.
2. Cut a 5 3/4" X 6 5/8" opening through the wall in the desired location. FIGURE 1
3. Apply silicone or equivalent behind the box flange to seal and help support hydrant. FIGURE 2
4. Insert the box and faucet assembly from the outside. FIGURE 2
5. The top box flange must be installed in the horizontal position and level. *Do not install in vertical position.* FIGURE 2
- Note: Proper drainage is built into hydrant: (1/2" tube must slope slightly down toward inlet.) (3/4" tube must be level.)*
6. The hydrant Inlet must be located in a warm area of the building interior. FIGURE 2
7. Install adjustable Wall Clamp over water tubes and slide snug to interior wall. FIGURE 2
8. The operating stem air vent **must not** be plugged to ensure proper draining. FIGURE 3

Note: For solder connection, open hydrant to full open position before soldering. Excessive heat can damage valve seat rubber.

OPERATING INSTRUCTIONS:

Use Tee Key to lock/unlock door and operate hydrant. To **OPEN**, turn stem counter-clockwise. To **CLOSE** and **DRAIN**, turn stem clockwise until seated and water drains out the drain hole.