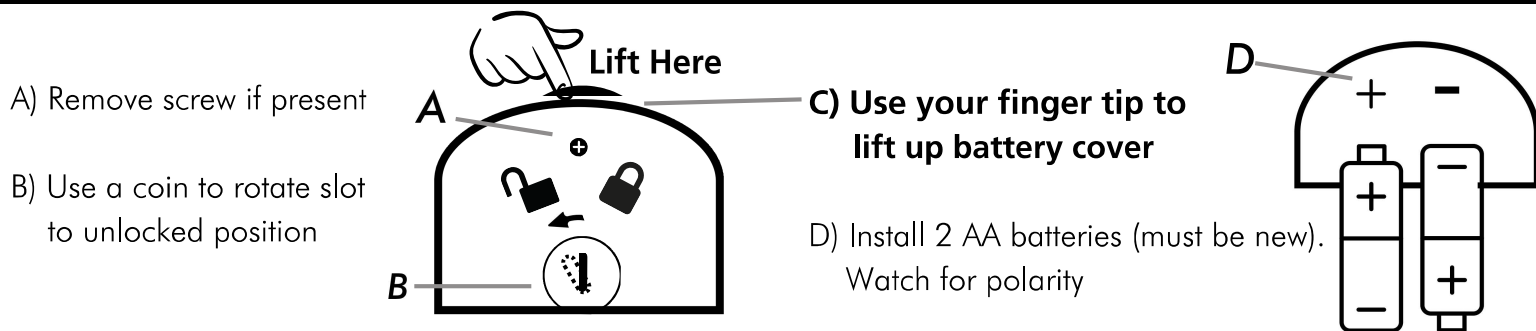


## Battery Installation



Ensure the batteries are installed correctly. A light to the left of the power button will flash any time a button is pressed. If it does not, reinstall the batteries correctly or check the condition of the batteries.

*Note: The optional screw for the battery compartment is not required, but will help reduce battery loss. (Screw is taped inside blue box)*

The Remote is now ready to operate any LG, Samsung, RCA or Philips Commercial TV

## Important

**If you are using an in-room entertainment system (GRE), you will need to program your remote.**

## GRE Streaming System Codes

Enseo® .....	004 or 006
World Cinema® / WorldVue® .....	005
Bonvoy® .....	006
GuestTek® .....	007 or 008
Sonifi® .....	010, 011, 012 or 014
LG ProCentric Direct NETFLIX® .....	038
Samsung LYNK Cloud NETFLIX® .....	041

**AEP® Box & LG, Samsung or RCA Commercial TV.....013**  
For all other TV brands, see instructions below.

**Dish Network® Evolve® MPI/MTI cable protocol .....026**  
For all other TV configurations, see instructions below.

**[www.cleanremote.com](http://www.cleanremote.com)**

## To Enter Code:

To select your system, PRESS and HOLD both  and  until the light to the left of the POWER button lights up solid, then enter the corresponding three digit code. The light on the remote turns off to confirm the code is stored. If the light flashes repeatedly, repeat the process above to add the code.



**If all of your system's functions are not working properly, please try the next code for your system.**



**See below for more codes, learning feature, tips and reset instructions**

# More Codes

## To Enter Code:

To select your system, PRESS and HOLD both  and  until the light to the left of the POWER button lights up solid, then enter the corresponding three digit code. The light on the remote turns off to confirm the code is stored. If the light flashes repeatedly, repeat the process above to add the code.

### DIRECTV AEP 1

Default	013	
LG, Samsung, RCA	013	
Element	023	
Insignia	022	
Hisense	013	
Magnavox	025	
ONN	015	
Philips	025	
RCA (Residential)	015	016
Sceptre	017	018
Sony	019	
TCL	020	
Toshiba	021	
Vizio	013	
Westinghouse	019	023

### DISH EVOLVE 1

Default	026	
LG, Samsung, RCA	027	
Element	036	
Insignia	035	
Hisense	027	
Magnavox	037	
ONN	028	
Philips	037	
RCA (Residential)	028	029
Sceptre	030	031
Sony	032	
TCL	033	
Toshiba	034	
Vizio	027	
Westinghouse	032	036

### Samsung LYNK Cloud with Hotel Key

Hotel Key (INFO Key)	042	
Hotel Key (HOME Key)	043	



Before proceeding, please ensure that your TV has the Multi (bed)-Code feature and the TV has been set to the appropriate Multi-bed setting. You will need to refer to your TV's manual for the TV's Multi-bed setup instructions.

### LG Multi-Code (Multi-Bed)

Multi-Code 1 (Bed 1)	051	
Multi-Code 2 (Bed 2)	052	
Multi-Code 3 (Bed 3)	053	
Multi-Code 4 (Bed 4)	054	
Multi-Code 5 (Bed 5)	055	
Multi-Code 6 (Bed 6)	056	
Multi-Code 7 (Bed 7)	057	
Multi-Code 8 (Bed 8)	058	
Multi-Code 9 (Bed 9)	059	

### LG Multi-Code (Multi-Bed) Continued



 

Multi-Code 10 (Bed 10)	060	
Multi-Code 11 (Bed 11)	061	
Multi-Code 12 (Bed 12)	062	
Multi-Code 13 (Bed 13)	063	
Multi-Code 14 (Bed 14)	064	
Multi-Code 15 (Bed 15)	065	
Multi-Code 16 (Bed 16)	066	



If all of your system's functions are not working properly, please try the next code for your system.

## Learning Function



The learning feature allows you to add or teach a command from your original remote to your Clean Remote SCR10. **You can use this feature to REPLACE the function of any button on the Clean Remote SCR10.**

- 1) On the Clean Remote SCR10 PRESS and HOLD both the  and  until the light to the left of the POWER button lights up solid.
- 2) Point both remotes at each other   and select the Clean Remote SCR10 button you wish to teach the new function to by PRESSING it one time.
- 3) PRESS the button on the original remote you want the Clean Remote SCR10 to learn, one time. The light to the left of the POWER button on the Clean Remote SCR10 will flash to confirm the process is complete.

Simply repeat these steps to learn other button commands.

## Factory Reset

To restore the Clean Remote SCR10 to its original factory settings.

PRESS and HOLD both the  and  until the light to the left of the POWER button flashes 3 times.

The remote is now reset, it will now operate LG, Samsung, \*RCA and \*Philips TVs.

## Philips TV Tips

Visit our website's FAQ section for tips, including how to select your Power On setting and more. (For example the TV's home screen or a TV channel)

**Important: This remote is not compatible with cable company set-top boxes. Visit our website for cable set-top box capable models.**

[www.cleanremote.com](http://www.cleanremote.com)