### PF73 & PF74 Wall Hydrants

### Installation, Maintenance & Care Recommendations



#### Installation:

Types of connections: SWT, CPVC, PEX or FPT

Step 1: If hole is not pre-drilled, you will need to drill a 1-1/4" hole through the foundation. Then insert the hydrant from the outside. Step 2: Make sure the hydrant is positioned so the spout is facing downwards.

To verify the hydrant is correctly positioned, from the inside the word TOP will be facing up on the inlet connector.


Step 3: Install the hydrant at a slight downward position (angled approximately 5 degrees) to the outside.

This will help to drain properly. This step is critical to ensure frost proof performance.

- Step 4: To achieve the correct angle for the PF73 series wall hydrant a plastic shim is provided. Slide the shim between the flange and the siding to achieve the desired position for the hydrant.
- Step 5: If you will be making a solder connection make sure to open the valve before making the connection.
- Once valve is open direct flame away from the valve when making connection.

Step 6: For threaded connections wrap pipe threads in the the same direction as the threads and connect pipe to hydrant. Do not over tighten.

Step 7: Once threaded or solder connection is made, fasten the hydrant flange with 2 screws.

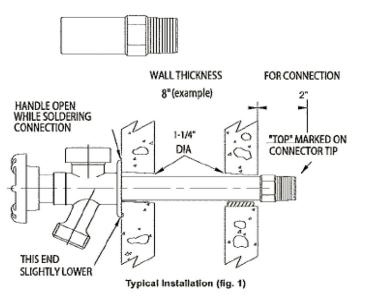

#### Available parts:

PF74CART - PF74 SERIES REPL CART ONLY PF74VBKIT - VB REP KIT FOR PF73 & PF74 SERIES PFRKLK - REP KEY F / LK ST PF73ASRK1 - REP KIT FOR PF73 SERIES PF73ASHDL - BEIGE REP HDL



#### Hydrant Maintenance

During freezing weather detach hose from hydrant. Make sure to turn hydrant handle to the closed position before removing hose.

If hose is not removed, it will not allow the frost proof hydrants to drain properly causing possible freezing.

If building where hydrant is installed will be without heat for any length of time, then all water lines should be drained and winterized.


# **PF73ASRK1** Installation Instructions



1. Remove plastic cap (#1) by turning counterclockwise.

2. Remove plastic antisyphon device (#2) by turning counterclockwise.

3. Install new parts and test.

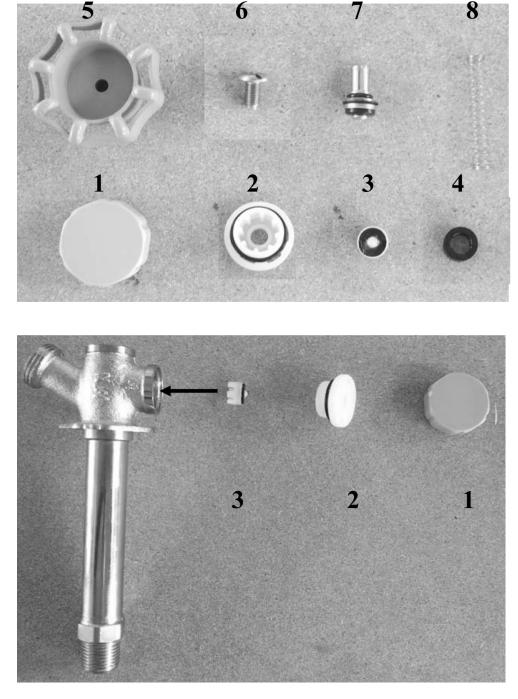

This PROFLO product carries a 1-year limited warranty.


## Change the PF73ASRK1





This PROFLO product carries a 1-year limited warranty.

## *PF74CART Installation Instructions*

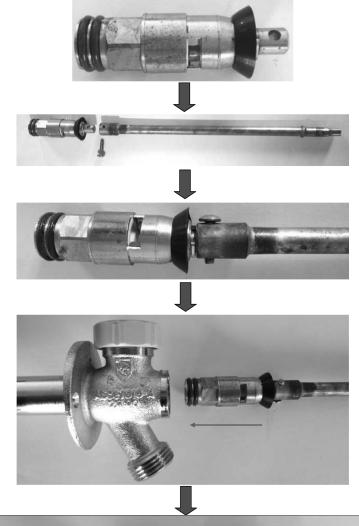


1. Take replacement cartridge

PROFLO.

2. Assemble with brass stem

3. Put cartridge & stem into hydrant body

4. Put stainless steel washer, rubber washer, and brass nut into hydrant body and assemble hand wheel with brass stem

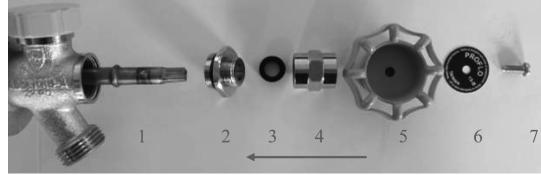

This PROFLO product carries a 1-year limited warranty.