

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

Review Date: 01/18/2012

Original Date: 06/22/2006

Installation and Maintenance Guidelines for NIBCO[®] One-Piece Bronze, Carbon Steel and Stainless Steel Ball Valves

I. INSTALLATION

1. Function valve before installing. This verifies functionality.
2. Check connecting pipe threads for accuracy. Make sure the pipe threads are clean of any foreign material such as scale or metal shavings.
3. To ensure proper installation, standard piping practices should be followed.
4. The NIBCO one-piece ball valve is a bi-directional valve.

II. MAINTENANCE

1. Routine maintenance consists of tightening the packing to compensate for wear. If there is seepage present at stem seal, tighten the pack nut 1/4 turn until snug.
2. General maintenance consists of periodic observation of the valve to ensure that the valve is functioning correctly.

**NIBCO DOES NOT RECOMMEND DISASSEMBLY OF THIS VALVE
TO ATTEMPT INTERNAL REPAIRS.**

For any technical enquiries please call NIBCO Technical Services.

CAUTION: Only qualified personnel should undertake the procedures outlined in this document. NIBCO INC., its agents, representatives and employees assumes no liability for the use of these procedures. These procedures are offered as suggestions only.