




INSTALLATION INSTRUCTIONS

Juno IC22 and IC20 Series Recessed Housings

SAVE THESE INSTRUCTIONS

When using a trim that requires plate adjustment, the socket plate must be raised prior to trim installation.

1. Locate the raised socket plate inside the housing. Loosen the wing nuts and use a flathead screwdriver or other similar tool to lift the bottom edge of the slider bracket over each stop pin.

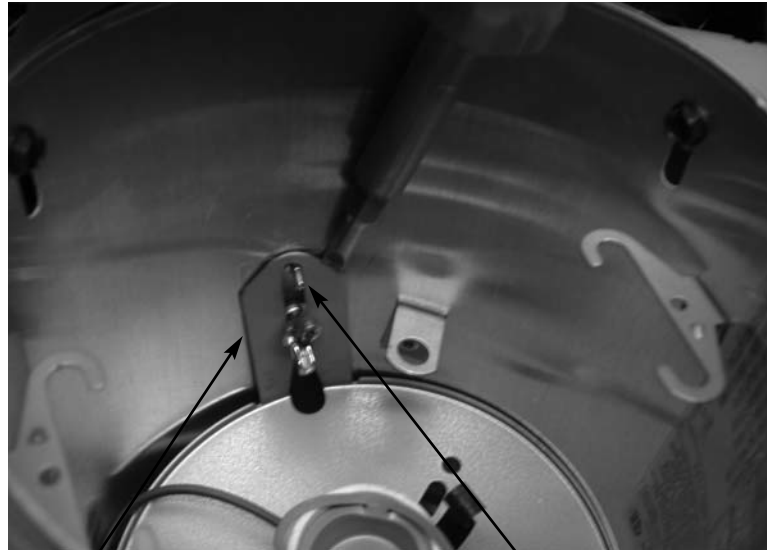


Slider Bracket

Stop Pin

2. Raise the slider brackets approximately 1/2" above the stop pins and retighten wing nuts.

3. Install the lamp. Attach trim to housing.

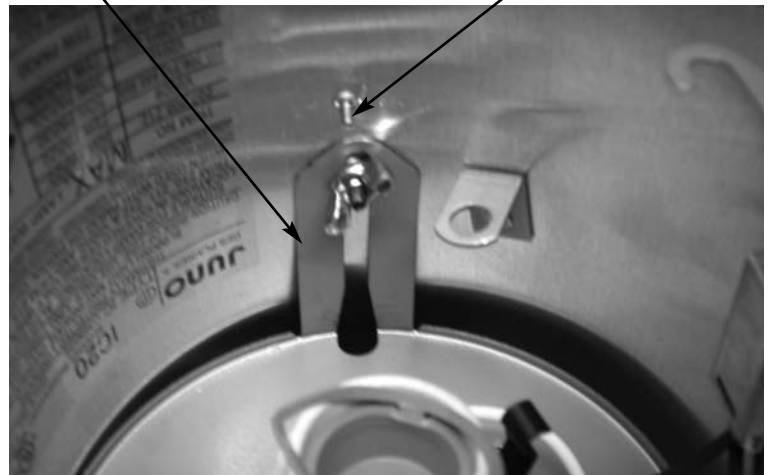

WARRANTY

Juno Lighting Group warrants that its products are free from defects in material and workmanship. Juno Lighting Group's obligation is expressly limited to repair or replacement, without charge, at Juno Lighting Group's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno Lighting Group's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

Product Services Phone (888) 387-2212

1300 S. Wolf Rd • Des Plaines, IL 60018 • Phone: 800-323-5068 • www.junolightinggroup.com

© 2010 Juno Lighting LLC. Printed in China



Rev 12/10 P0030C-00 pg 1 of 1