




## #244 Spot Market & #245 Marking Stick Operating Instructions

The Spot Marker and Marking Stick are designed for use with inverted or upright marking paint, with or without the cap still on the can. The tip will be cylindrical and the can should only be used in the correct position.

1. Shake the can according to the label instructions.
2. Remove the safety tab from the cap or remove the cap entirely.
3. Align the opening in the cap with the black plastic activation tab and push the can into the can holder until it rests on the stops. The tab will engage the top when the trigger is squeezed.
4. The Retention Clip will rest on the bottom rim of the can preventing movement when the tip is activated.
5. To remove the can, push the Retention Clip to the shaft with thumb. Pull can from holder with opposite hand.

### **245 Marking Stick Accessories** - Wheel, Flag Insertion Spike, and Flag Holder

1. Align the Stick with the Flag Holder facing up and the can holder down.
2. Insert the Wheel or the Spike into the receptacle at the base of the Stick.
  - The Wheel sits on the left side of the Stick when inserted and resting on the ground.
  - The Flag Insertion Spike points down when the plastic fork is held parallel to the ground. This will maintain the correct angle when using the Stick with flags.
3. The Flag Holder is permanently mounted to the shaft on the Stick and holds one bundle of flags. Undo any bindings from the flags and insert them into the holder from either side.

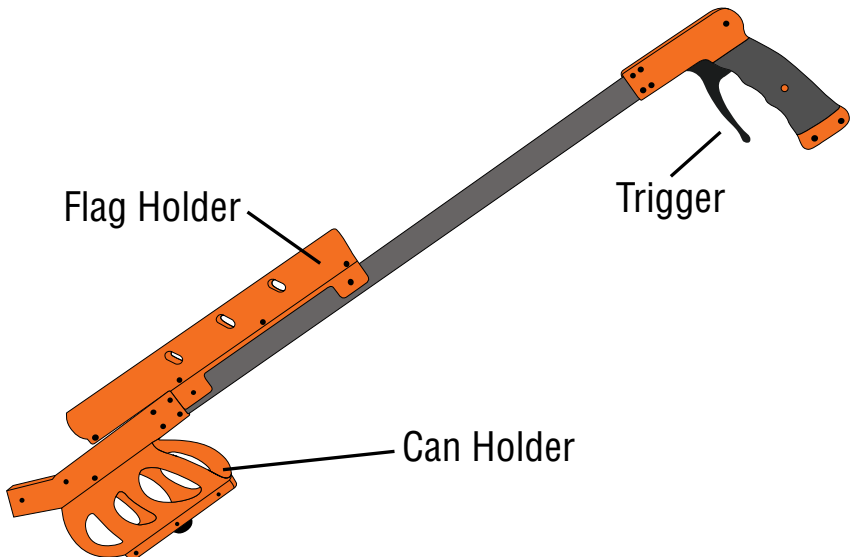

**Aervoe Industries, Inc.**  
**1100 Mark Circle, Gardnerville, NV 89410 • 800-227-0196**  
**www.aervoe.com • mailbox@aervoe.com**