INSTALLATION INSTRUCTIONS TANK LEVER MODEL No's: 504, 505, 506



Installation Instructions:

- · Remove old tank lever.
- · Place GASKET (3) on to HOUSING (2).
- · Place HOUSING (2), as shown, into tank through hole.
- · Insert FLANGE (4) through tank hole and tighten.

NOTE: Threads on FLANGE (4) are left-handed, turn counter-clockwise to tighten.

- · Position LEVER (I) though HOUSING (2) and FLANGE (4).
- · Place HANDLE (5) onto the spline of LEVER (1).
- ·Tighten HANDLE (5) set screws with ALLEN WRENCH (6) provided.
- · Place flapper chain though appropriate hole on LEVER (I).
- NOTE: Chain should be nearly vertical.
- ·Adjust chain length as needed to allow lever operation with tank cover on.

