


Telescoping Post Indicator

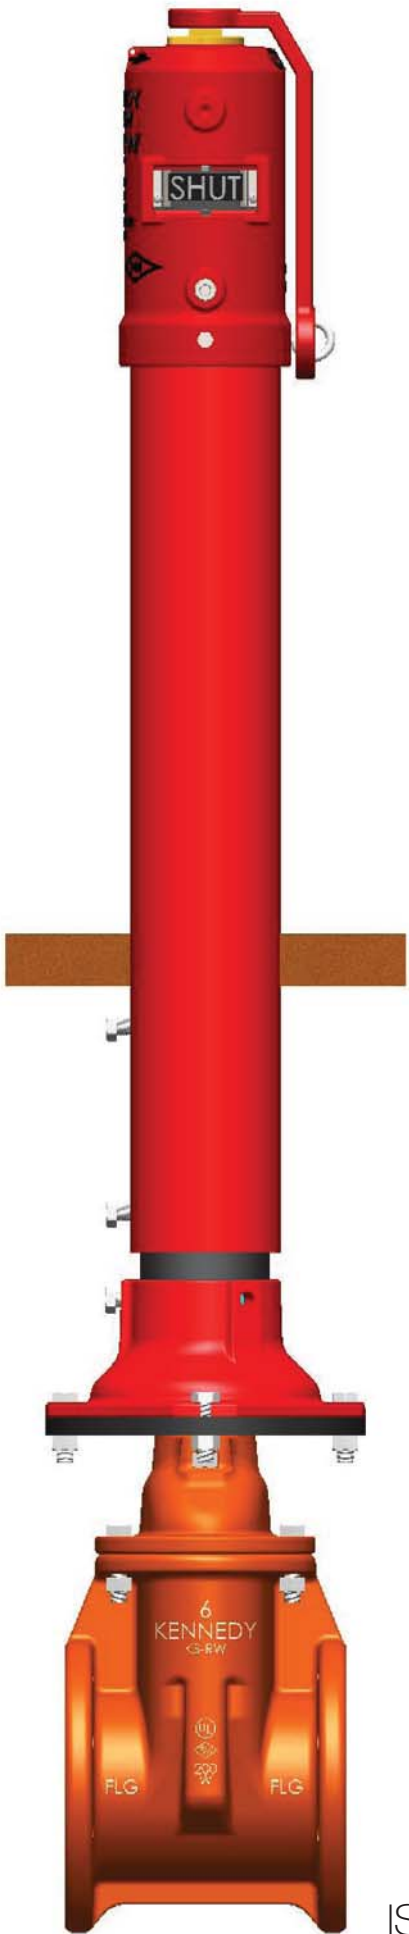

Wall Post





KENNEDY
VALVE

ISO 9000 ISO 14001

Telescoping Post Indicator

2945 A

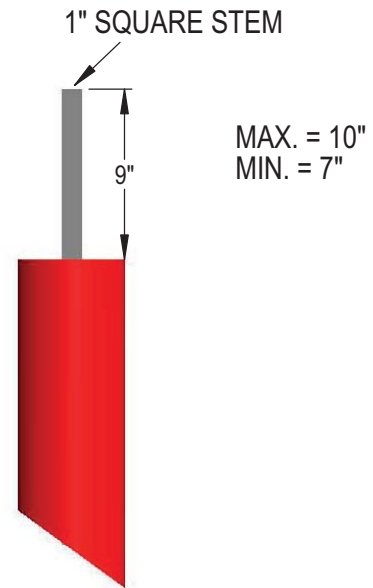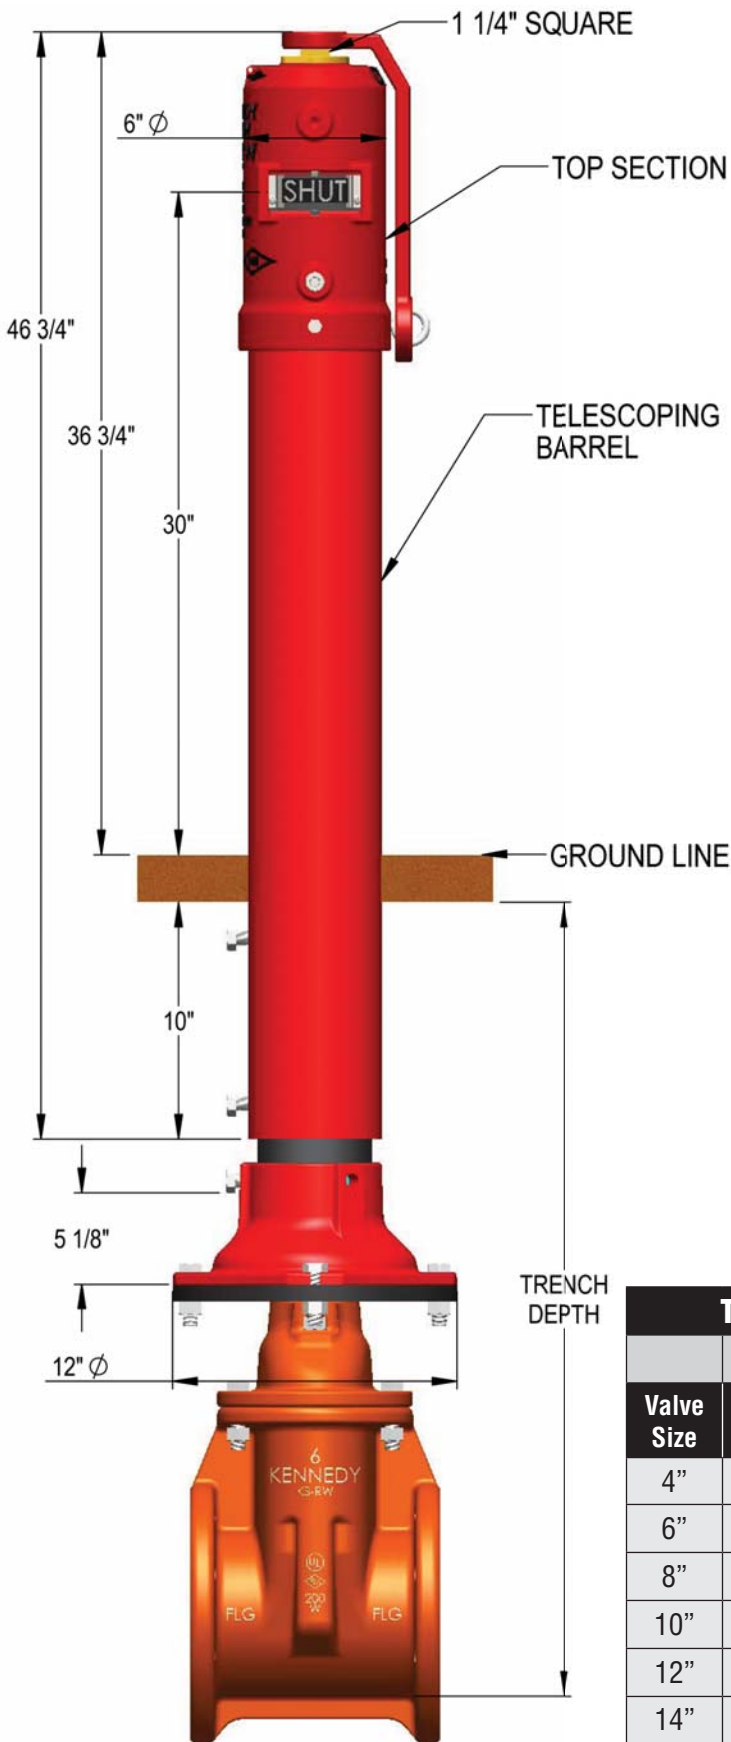

FIELD ADJUSTMENT INSTRUCTIONS

1. Remove the top section from the Indicator Post assembly.
2. Loosen the telescoping barrel screw and adjust barrel to the ground level.
3. Cut the 1" square stem at a distance of 9" above the top of the barrel end.
4. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
5. Reattach the top section to the top of the Indicator Post assembly.

TELESCOPING BARREL 2945A TRENCH DEPTH LIMITS

| Valve Size | B SIZE | | C SIZE | | D SIZE | | E SIZE | |
|------------|--------|------|--------|------|--------|------|--------|------|
| | Min. | Max. | Min. | Max. | Min. | Max. | Min. | Max. |
| 4" | 31" | 51" | 49" | 69" | 67" | 87" | 88" | 111" |
| 6" | 35" | 55" | 53" | 73" | 71" | 91" | 92" | 115" |
| 8" | 42" | 62" | 60" | 80" | 78" | 98" | 99" | 122" |
| 10" | 45" | 65" | 63" | 83" | 81" | 101" | 102" | 125" |
| 12" | 49" | 69" | 67" | 87" | 85" | 105" | 106" | 129" |
| 14" | 58" | 78" | 76" | 96" | 94" | 114" | 115" | 138" |