



## **BRONZE GATE, GLOBE AND CHECK VALVE INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS**

### **INSTALLATION**

- 1) Thoroughly clean and prepare the piping system before valve installation.
- 2) Remove the valve end caps if present, and inspect the valve ports and seating surfaces for cleanliness just prior to installation.
- 3) Support the valve to prevent unnecessary stresses induced by connecting pipe.
- 4) Be sure the rating of the valve is compatible with the intended service conditions.
- 5) Operate the valve from the full open to closed position.
- 6) Verify the tightness of the packing nut after installation.
- 7) Recommend installation with stem in vertical position, operator on top.

**NOTE 1:** For gear operated valves: The valve is normally shipped with the handwheel loose, the installing contractor or mechanic must take care to ensure the roll pin that holds the handwheel to the input shaft of the gear operator is installed completely, and is balanced on both sides of the handwheel. The fit of the pin in the handwheel and the shaft is controlled and should provide years of reliable service.

**NOTE 2:** Make sure check valves are oriented properly for flow and gravity effect, and that they are sufficiently distant from pump outlets or other turbulence inducing devices. See [Product Bulletin](#), check valves-minimum flow rates and installation

**NOTE 3:** Check valves may be shipped with internal packaging to prevent disc damage in transit. Remove any packing material prior to installation.

### **OPERATION**

- 1) Gate and globe valves are manually operated. To open, turn the handle in a counterclockwise direction. To close, turn the handle in a clockwise direction.
- 2) Check valves are automatic.

### **INSPECTION & MAINTENANCE**

- 1) Periodic inspection and preventative maintenance is not required other than adjustment of stem packing, and cycling of the valve from open to closed position.
- 2) If a valve develops a packing leak, adjust the packing nut to increase the pressure on the stem packing. The packing nut should be turned in a clockwise direction approximately 1/4 turn, or until the leakage stops. **Do not repack valves under pressure.**
- 3) Whenever a new stem is installed, the packing should be changed also.

### **REPAIR PARTS**

Under normal conditions, repair parts are not required. Parts that may be considered recommended spare parts are as follows:

Gate Valves-Handle, handle nut, packing, gland, packing nut.

Globe Valves-Handle, handle nut, packing, gland, packing nut, disc and seat.

Check Valves-Disc, holder and hinge assembly, bonnet gasket.

When ordering parts, provide figure number, size, part needed and age of the valve.