

## Alarm Panels and Onsite Products



Model # A4-AFL (w/ AO10)

The Auto Reset Alarm Panels sound an alarm when water level rises due to a pump failure. The buzzer can be silenced by pushing the silence switch. Once the alarm condition has been corrected and the alarm float turned down, the buzzer will automatically reset to make the system fully operational again.

ITEM	MODEL	DESCRIPTION
<b>A1-B0001P</b>	A1-A	Alarm Control w/ NEMA 1 Enclosure (w/ AO10 Float)
<b>A1-B0013P</b>	A1-AX	Alarm (Latching) Control w/ NEMA 1 Enclosure (No Float)
<b>A4-B0510P</b>	A4-AFL	Alarm Control w/ NEMA 4 Enclosure, Flasher & Locking Hasp (w/ AO10 Float)
<b>TA1</b>	TA1	Tank Alarm w/ Float
<b>TA3</b>	TA3	Outdoor Tank Alarm w/ Float

ITEM	DESCRIPTION
<b>BRV4</b>	Bull Run Valve 4"
<b>BRVBULK</b>	Bull Run Valve & Key Only
<b>BRVCIRISER</b>	Bull Run Valve Riser w/ Cast Cover
<b>BRVKEY28</b>	Bull Run Valve Key 28"
<b>BRVKEY36</b>	Bull Run Valve Key 36"
<b>BRVKEY48</b>	Bull Run Valve Key 48"
<b>BRVKEY60</b>	Bull Run Valve Key 60"
<b>BRVKIT</b>	Bull Run Valve Kit Complete (Valve, Key 28", Plug & Adapter)
<b>BRVMOTOR4</b>	Bull Run Valve Motorized

### Bull Run® Valve

The Bull Run® Valve is designed to split flows to septic fields or systems. The leak-proof and external operating design ensures no contact with wastewater.



Item # BRV4



Item # COOLGUIDE25

### Cool Guide®

The Cool Guide® distributes the flow of effluent around a motor in a wastewater pumping application in a manner that allows motor cooling without the mixing of residual solids.

ITEM	DESCRIPTION
<b>COOLGUIDE15</b>	Laminar Flow Collar 6", 15 GPM
<b>COOLGUIDE25</b>	Laminar Flow Collar 8", 25 GPM
<b>COOLGUIDE40</b>	Laminar Flow Collar 8", 40 GPM

ITEM	DESCRIPTION
<b>DIAL4BLACK</b>	Dial-A-Flow Black 4" for ADS
<b>DIAL4GRAY</b>	Dial-A-Flow Gray 4" for SDR35 SCH40 & ASTM3034 Pipe
<b>DIAL4GREEN</b>	Dial-A-Flow Green 4" for S&D

### Dial-A-Flow®

The Dial-A-Flow® is a device used to equally distribute flow out of distribution boxes. With the eccentrically located opening, the installer can rotate the Dial-A-Flow® to balance all discharge ports for



Item # DIAL4GRAY