

I-95

Parts List and Diagrams

CAT. NO.	DESCRIPTION	CAT. NO.	DESCRIPTION
95-100	Frame Complete	95-25-0	Small Container (for 5/16" Cables)
95-101	Frame Only	95-401	Small Container Shell & Spindle
95-102	Rubber Feet, Bolts, & Lock Washers (2)	95-403	Ball Bearing
95-103	Rubber Leg Tips (2)	95-404	Mounting Collar with Knob
95-104	End Plugs (2)	95-404-A	Knob
95-106	Cutter Holder	95-404-B	Set Screws (3)
95-107	Screws & Washers (2)	95-404-C	Grease Fitting
95-110	Motor Guard	95-405	Flange Bearing Set (2)
95-111	Screws for Motor Guard (4)	95-407	Fiber Washers (3)
95-115	Belt Guard	95-408	Brake Disc
95-116	Belt Guard Retaining Knob	95-409	Spacer
95-117	Washer	95-410	Slotted Tube
95-118	Belt Tension Adjustment Screw	95-411	Snap Ring
95-200	Chuck Assembly	95-35-0	Large Container (for 3/8" Cables)
95-201	Chuck Housing	95-451	Large Container Shell
95-201-A	Chuck Housing Bolts (4)	95-451-A	Container Front
95-202	Rear Housing	95-451-B	Container Back
95-202-A	Rear Housing Bolts (2)	95-451-C	Screws and Clips (3)
95-203	Brake Stop & Screw	95-452	Spindle for Large Container
95-204	Brake Spring	95-456	Washer (2)
95-205	Brake Sleeve	95-465	Nut
95-210	Linkage (4)	95-600	1/3 hp Motor with Reverse Switch & GFI
95-211	Sleeves (4)	95-601	Motor Pulley
95-212	Button Head Cap Screw (4)	95-602	Mounting Bolts, Nuts & Washers
95-213	Linkage Spacers (4)	95-603	Notched V-Belt
95-215	Yoke	95-604	Ground Fault Interrupter with 10 ft. Power Cord
95-216	Self Locking Nuts (2)	95-605	Reverse Switch Assembly
95-220	Chuck Slide	95-605-A	Terminal Boot
95-224	Threaded Collar w/Screws	95-605-B	Wire Loom
95-225	Chuck Shaft	95-605-C	Cord Clamp and Screw
95-226	Ball Bearing	95-605-G	Reverse Switch Only
95-230	Chuck Body	95-605-H	Toggle Boot
95-230-A	Set Screws (2)	95-605-J	Toggle Guard
95-230-C	Jaw Locating Ring	95-610	Baffle
95-233	Jaw Spring (3)	95-611	Baffit Nuts (2)
95-234	Chuck Jaws with Rings (3)	95-612	Baffle Spacer Washers (4)
95-235	Thrust Bearing & Races	95-RGH	Rear Guide Hose
95-240	Chuck Cone		
95-240-A	Limit Screw & Lock Washer		
95-242	Return Spring		
95-245	Handle Assembly		
95-245-A	Handle Only		
95-245-B	Rubber Grip		
95-245-C	Bolt and Nut		
95-245-D	Handle Adjustment Screw		

General Wire Spring Co.


1101 Thompson Avenue

412/771-6300

McKees Rocks, PA 15136 U.S.A.

I-95

SCHEMATIC DIAGRAM

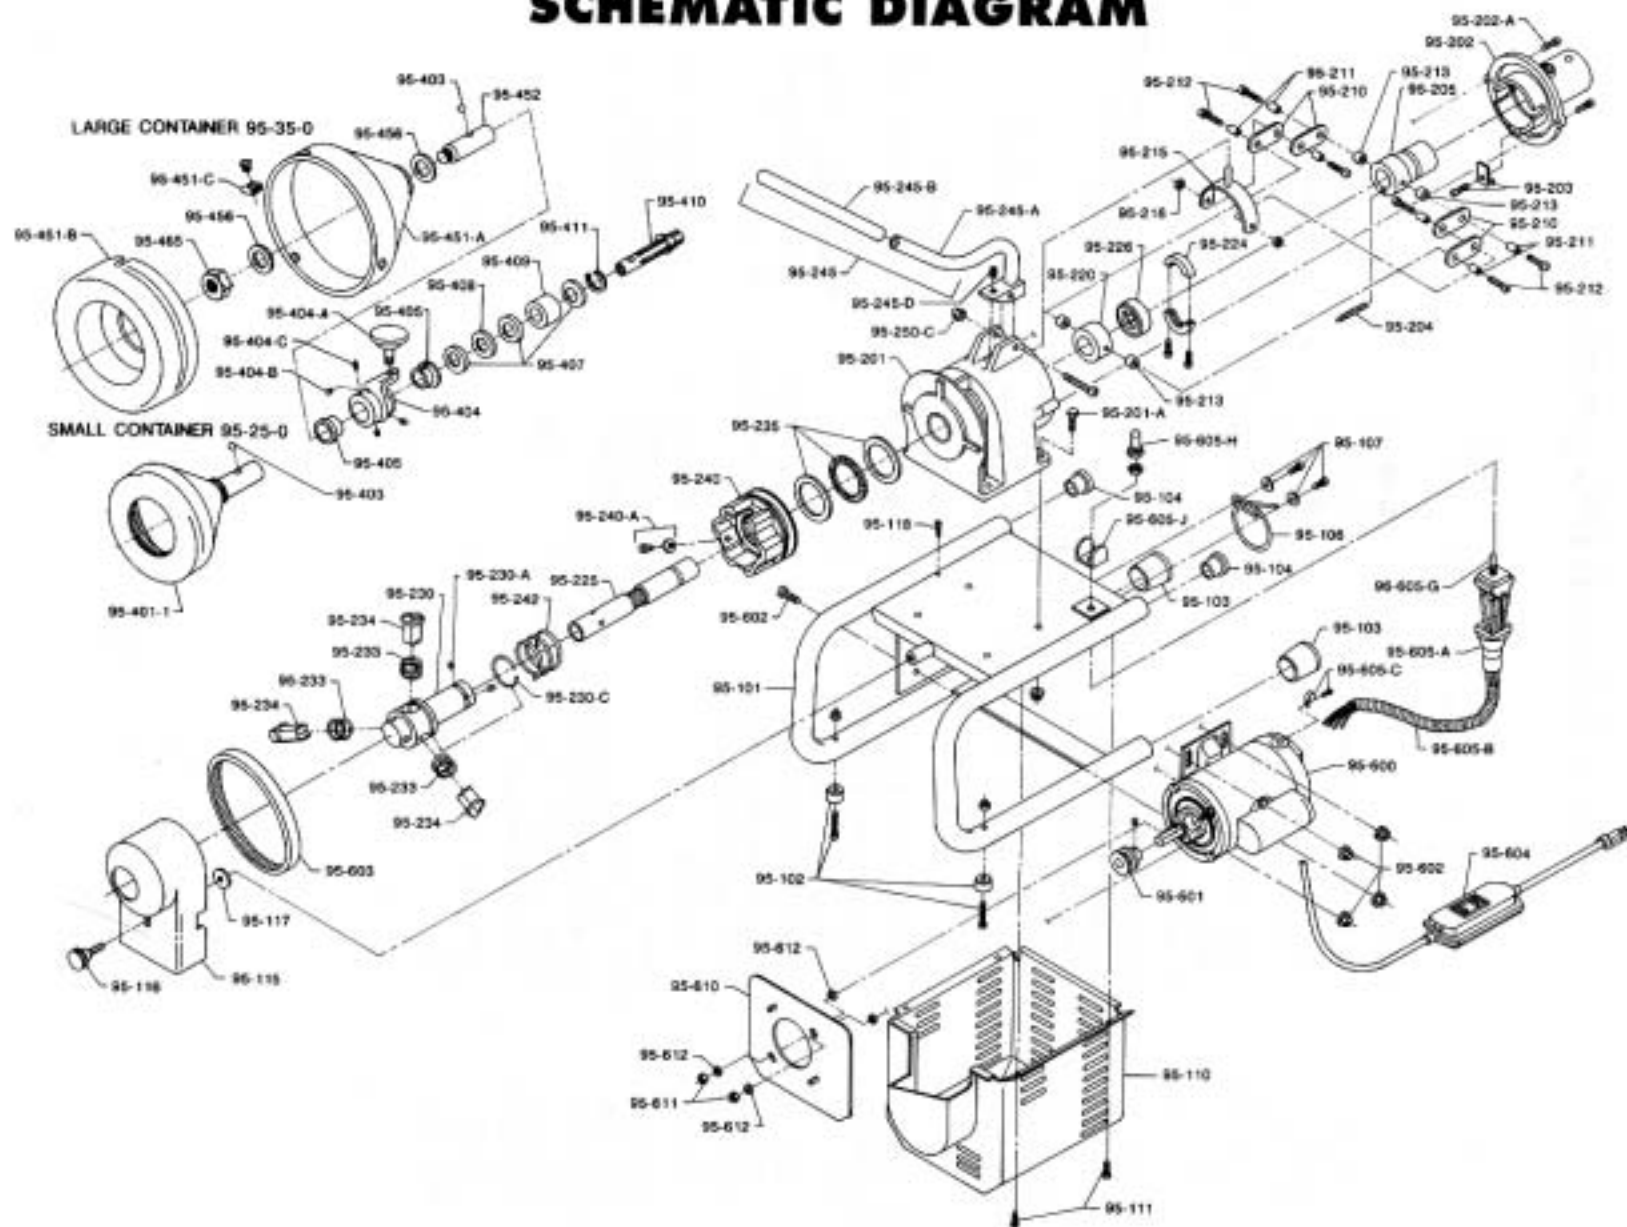

IMPORTANT: When ordering, give Serial Number of Machine