


Installation Instructions


1. Loosen the nuts on the mounting bolts and remove the toilet seat assembly.

Do NOT plug the system in before completing the installation.

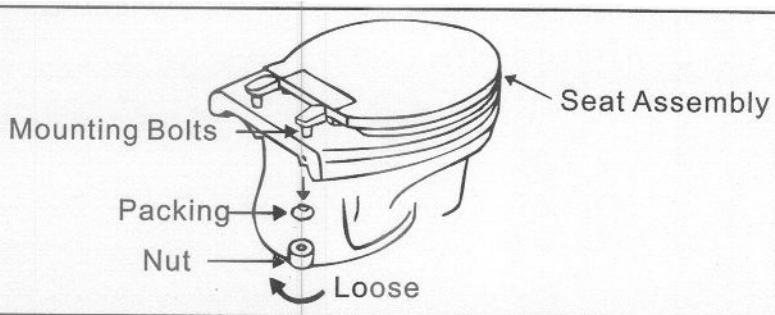


For HI-2000/2001

2. Slide the new bolts into the bolt guide slots on the bottom side of the main unit.
3. Place the two bolts into the toilet bowl holes and push the main unit to let the inner guide touch the toilet bowl. Fasten with packing B and unts.

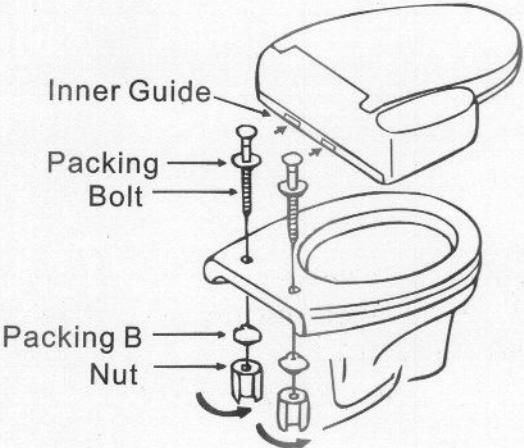


For HI-3000/30001/4000/4001


2. Place the two bolts into the base B then push with packing to the main unit. Fasten with packing B and nuts.

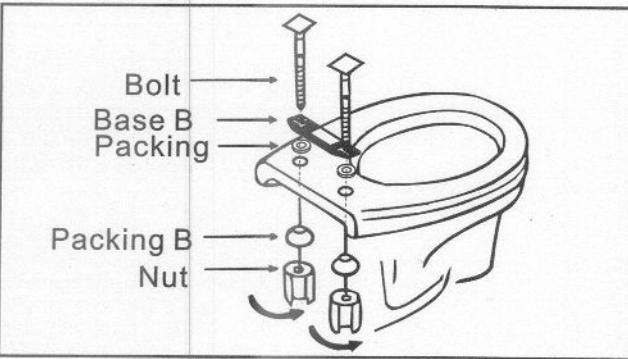

3. Push the bidet system onto slide plate following the arrow (see figure). When Secure a click will sound.

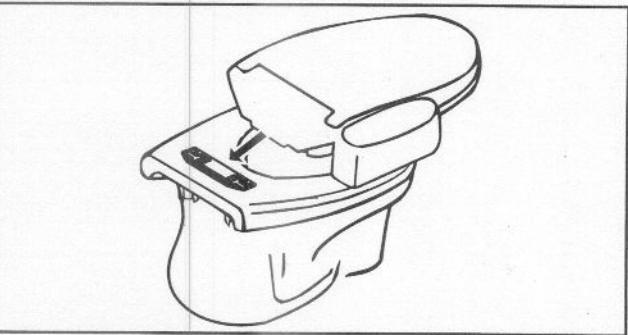


※ To Uninstall: push seat release button (see figure) and slide off the bidet unit.

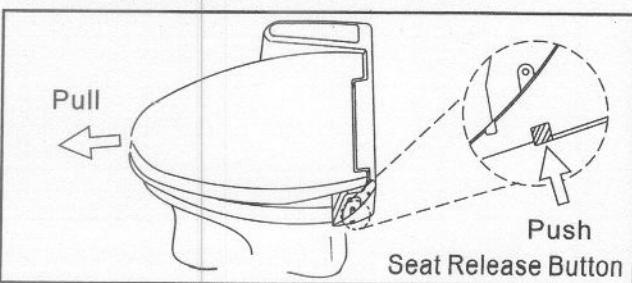


Installation Instructions


4. Shut off water supply valve (located at the bottom of the wall) and flush the toilet to empty water tank. Remove the water hose from the bottom of the water tank (Ball Cock).

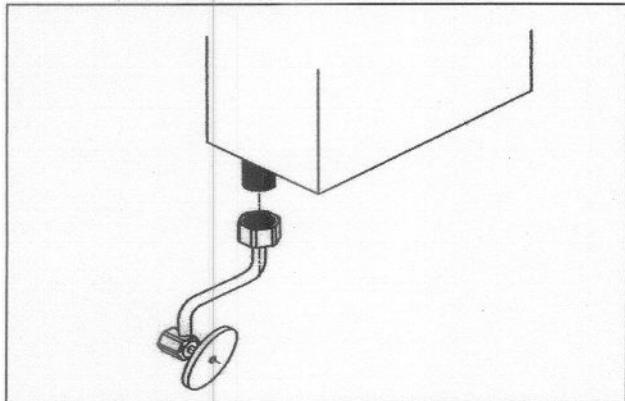


5. Attach T connector (provided) to the bottom of the water tank. Teflon tape is not required for installation. Keep all connections aligned and do not over tighten, as this may damage Connections.

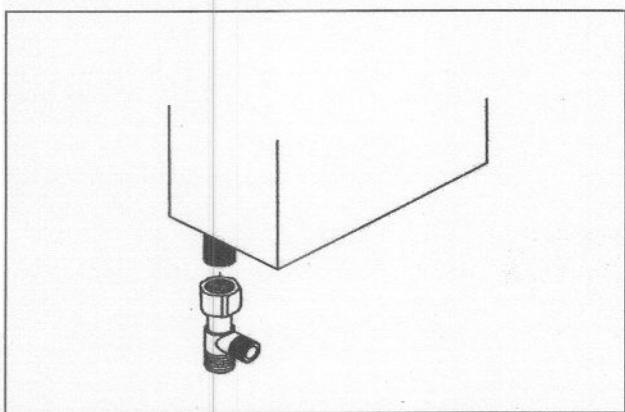

6. Connect water hose to T connector. (7/8" threaded side)

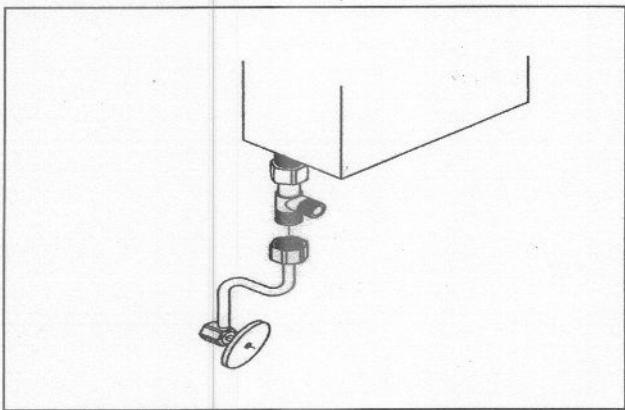


7. Connect Flexible water hose (provided) from T connector (1/2" threaded side) to system external water tank located under the control panel.

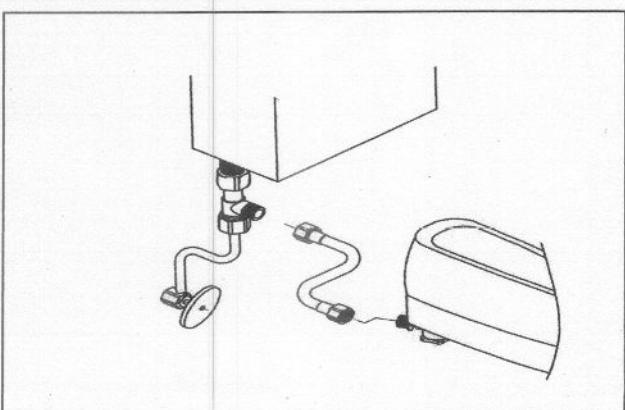

Trial Operations


Overview of Complete Installation

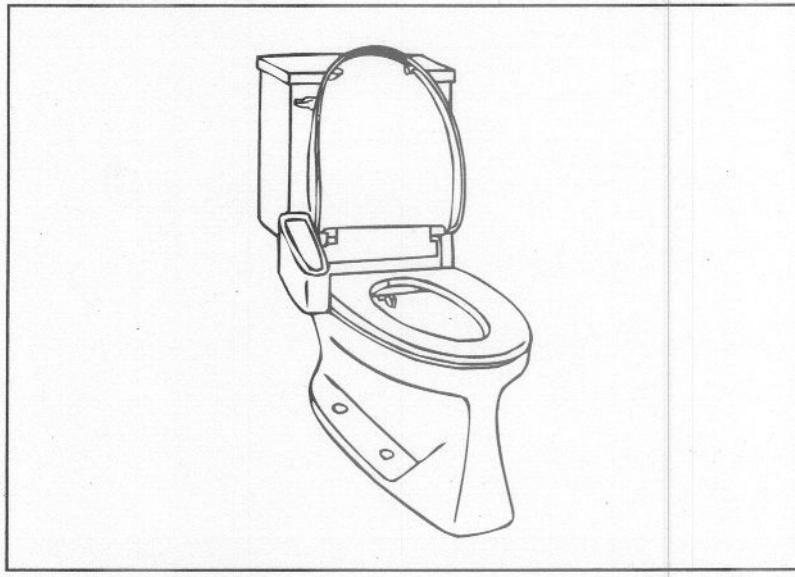


NOTE

Bidet system will automatically shut off after 5 minutes of use. Please press " BIDET ON " , " WASH ON " or " DRYER " button to continue use.

1. Open on the shutoff valve and check for water leaks.
2. Control Panel lights will turn on when system is plugged in.

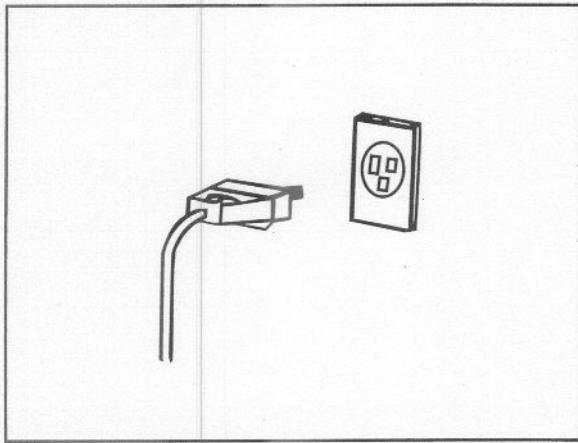


3. Maintain pressure near the junction of the lid and seat to operate the following trial.

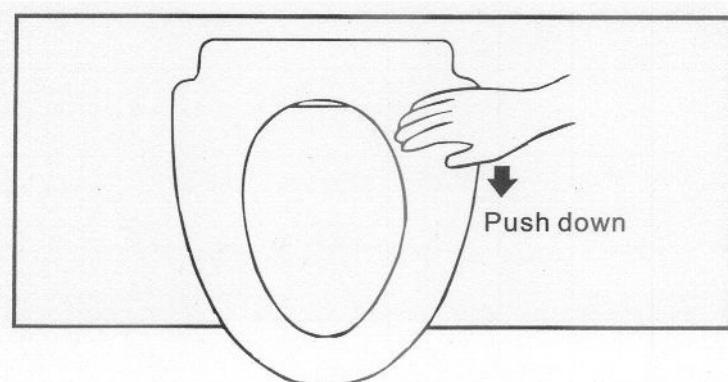

Trial Operation

Set Up Procedures.

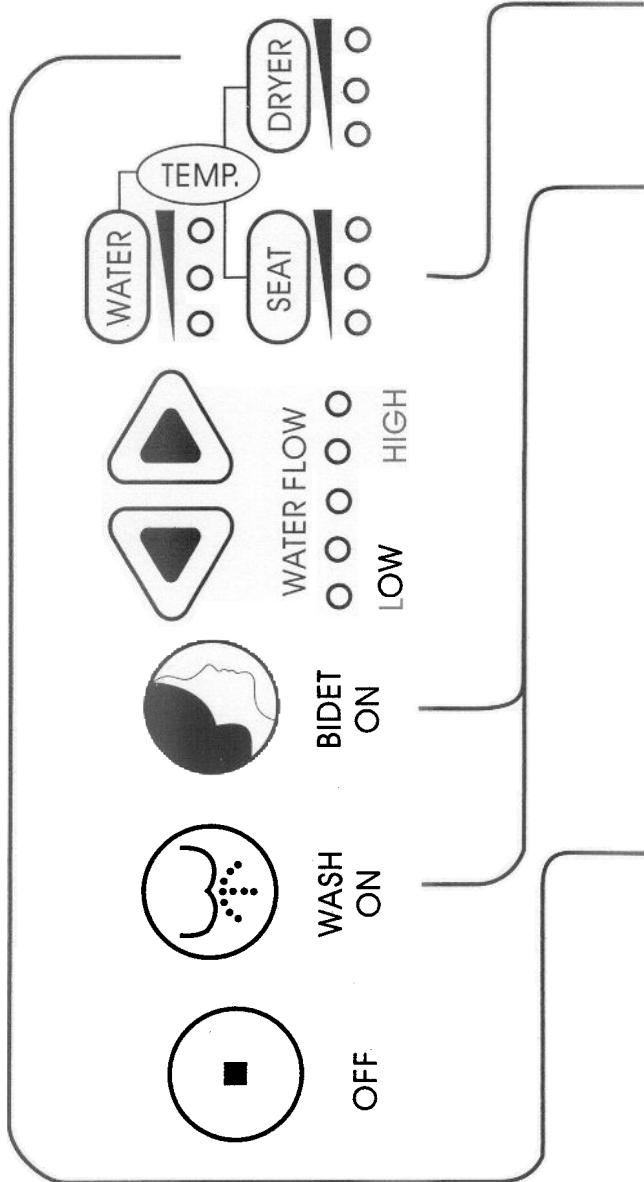

1. Select the desired water temperature: system will take up to five minutes to warm up.
2. Procedure for checking the water stream shower.
 - Select and press the button for operating function ("BIDET" / "WASH")
 - Check the water stream temperature/ shower nozzle position by hand .
 - Adjust accordingly.
3. Test seat temperature by hand and adjust accordingly.
4. For models HI-4000/4001, the unit has an additional blow dry system. Press the "DRYER" button and adjust for desired temperature.
5. The "OFF" button with terminate all of the operating functions above. "OFF" button does not reset the adjusted temperature and nozzle positions.

Note: The bidet system is delivered with an empty water tank; water tank must be filled before complete installation in order for wash functions to operate correctly.

- Open the water shut off valve and plug in unit. Press the "Wash" or "Bidet" button while pressing down right side of the seat for about 45 seconds. Water has filled lines and tank when the nozzle start to extend.
- The dryer function will stop automatically after 5 minutes.

Washing and Adjusting Functions

NOTE

This toilet seat has a weight sensor located at the junction of the lid and seat: the sensor needs to be activated in order to use operating functions.

1. Sit on the seat.
2. Press the "WASH"  or "BIDET"  button to begin washing.
3. For Models HI-4000/4001, press the "DRYER"  button to begin blow dry.
4. Press the "OFF"  button to terminate operating functions.

 
Adjusting Seat Temperature

- Press the "SEAT"  button
- Each time this button is pressed, the temperature will shift up one node from left to right (low to high temperature). If no lights are on, the heating system is off.

Adjusting Water Temperature

- Press the "WATER"  button
- Each time this button is pressed, the temperature will shift up one node from left to Right (low to high temperature). If no lights are on, the heating system is off.

Adjusting Water Flow

- By pressing the related arrow "WATER FLOW"  button the water flow pressure can be adjusted.

Adjusting Warm Air Temperature (Models HI-4000/40001)

- Press the "DRYER"  button to begin warm air blow dry.
- Each time this button is pressed, the temperature will shift up one node from left to right (low to high temperature).