

MAXIM Assembly Instruction For 5851

1. Pull the power supply wires out from the OUTLET BOX (A), and mount the MOUNTING BRACKET (B) to the OUTLET BOX (A), using MOUNTING SCREWS (D)
2. Attach the power supply wires to the fixture load wires by connecting BLACK to BLACK, and WHITE to WHITE . Attach the POWER SUPPLY GROUND WIRE from the OUTLET BOX (A) and the FIXTURE GROUND WIRE from the fixture to the GREEN GROUND SCREW (C) on the MOUNTING BRACKET (B) or connect both wires together using the correct size of wire connectors.
3. Placing the BASE (E) on the fixture over the OUTLET BOX (A) and tighten with the screw (F).
4. Screw the glass shade (G) into the ceiling pan (E) and tighten.

