
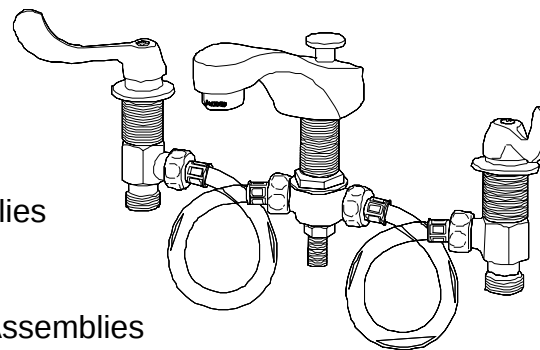
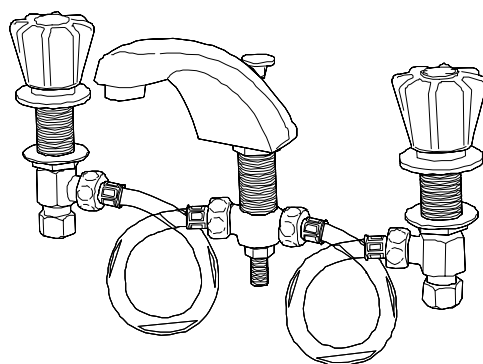


Central Brass®

The Easy Choice

WIDESPREAD SINK FAUCET

Flexible Hose Connections
6 to 24 Inch Adjustable Centers

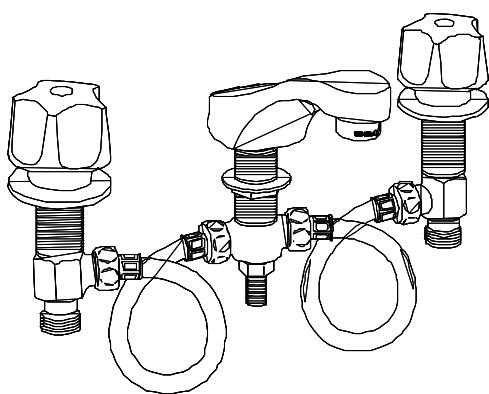

Widespread Faucet

- 1125 - A Series** with Compression Stem Assemblies
- 81125 - A Series** with Ceramic Stem Cartridges
- 1172 - 11AELS-Q** with 1/4-turn Compression Stem Assemblies
- 1179 - DA80** with Compression Stem Assemblies and acrylic handles



Faucets with lever, wrist or elbow handles and compression or ceramic stem cartridges are ADA compliant.



Certified to
ANSI/NSF 61 Section9

CENTRAL BRASS MFG CO



2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875


Email: sales @CentralBrass.com

www.CentralBrass.com

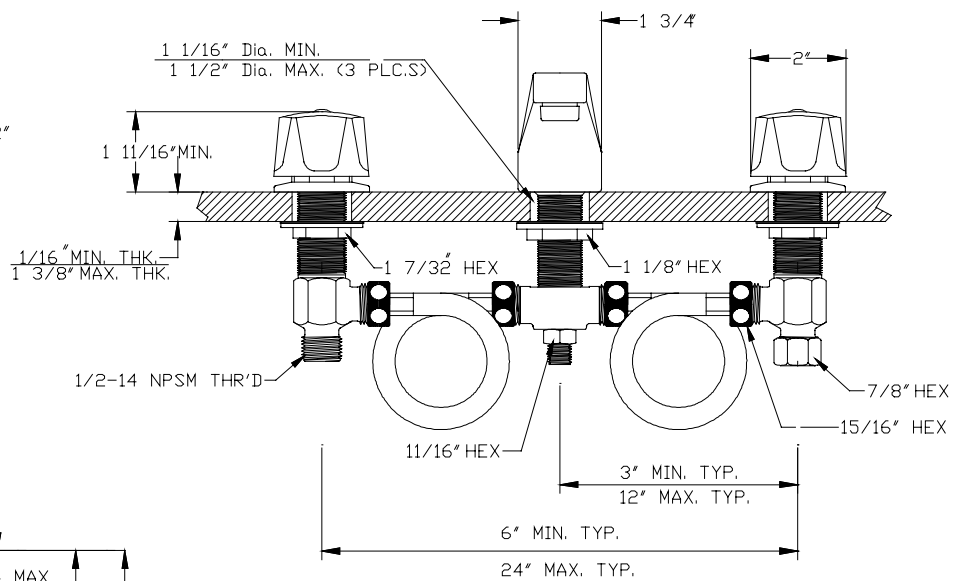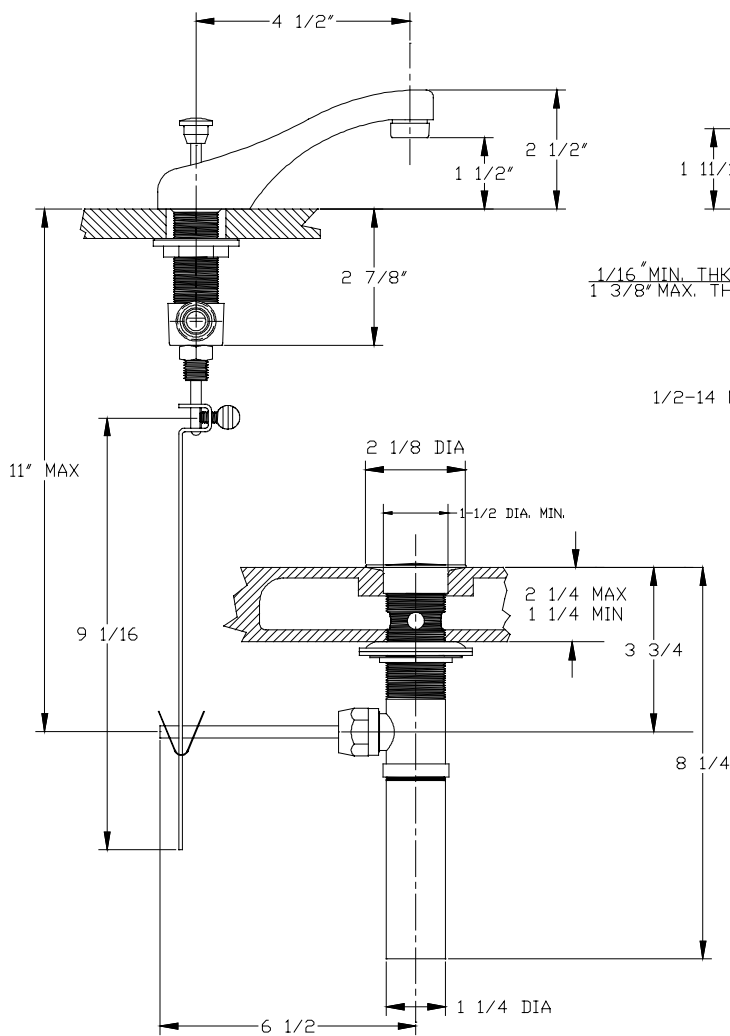

1125-DA INSTALLATION INSTRUCTIONS

80 - Silver Crown Handle Suffix

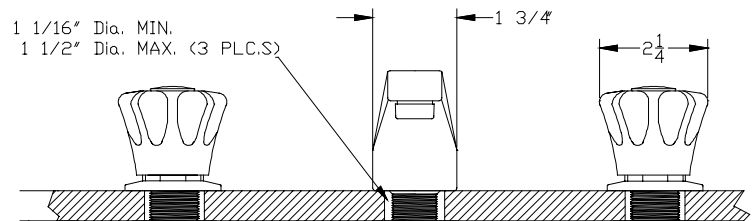

1. Apply a thin coating of plumbers putty to the bottom of the spout. Place the spout in the center hole of the lavatory. Assemble the washer and tighten the hex locknut.
2. Place the washer in the tee, assemble tee, slip washer, brass washer and tighten spout tube nut.
3. Screw hex locknut on valves to lower position on threads. Place washer over locknut and install valve in sink hole. Thread escutcheon on valve until top of packing nut is flush with top of escutcheon. Tighten the hex locknut under the sink.
4. Connect the flexible tubing to the valve units and the tee.
5. Assembly handles and tighten screw down until snug.
6. Connect supply lines using brass coupling nuts provided.
7. Turn on supply lines. Check all connections for leakage.
8. Remove aerator from spout. Turn on hot and cold water for one minute to flush out dirt and sediment that might have accumulated during installation. Replace aerator.

CENTRAL BRASS MFG CO



2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales@CentralBrass.com

1172-11AELS-Q INSTALLATION INSTRUCTIONS

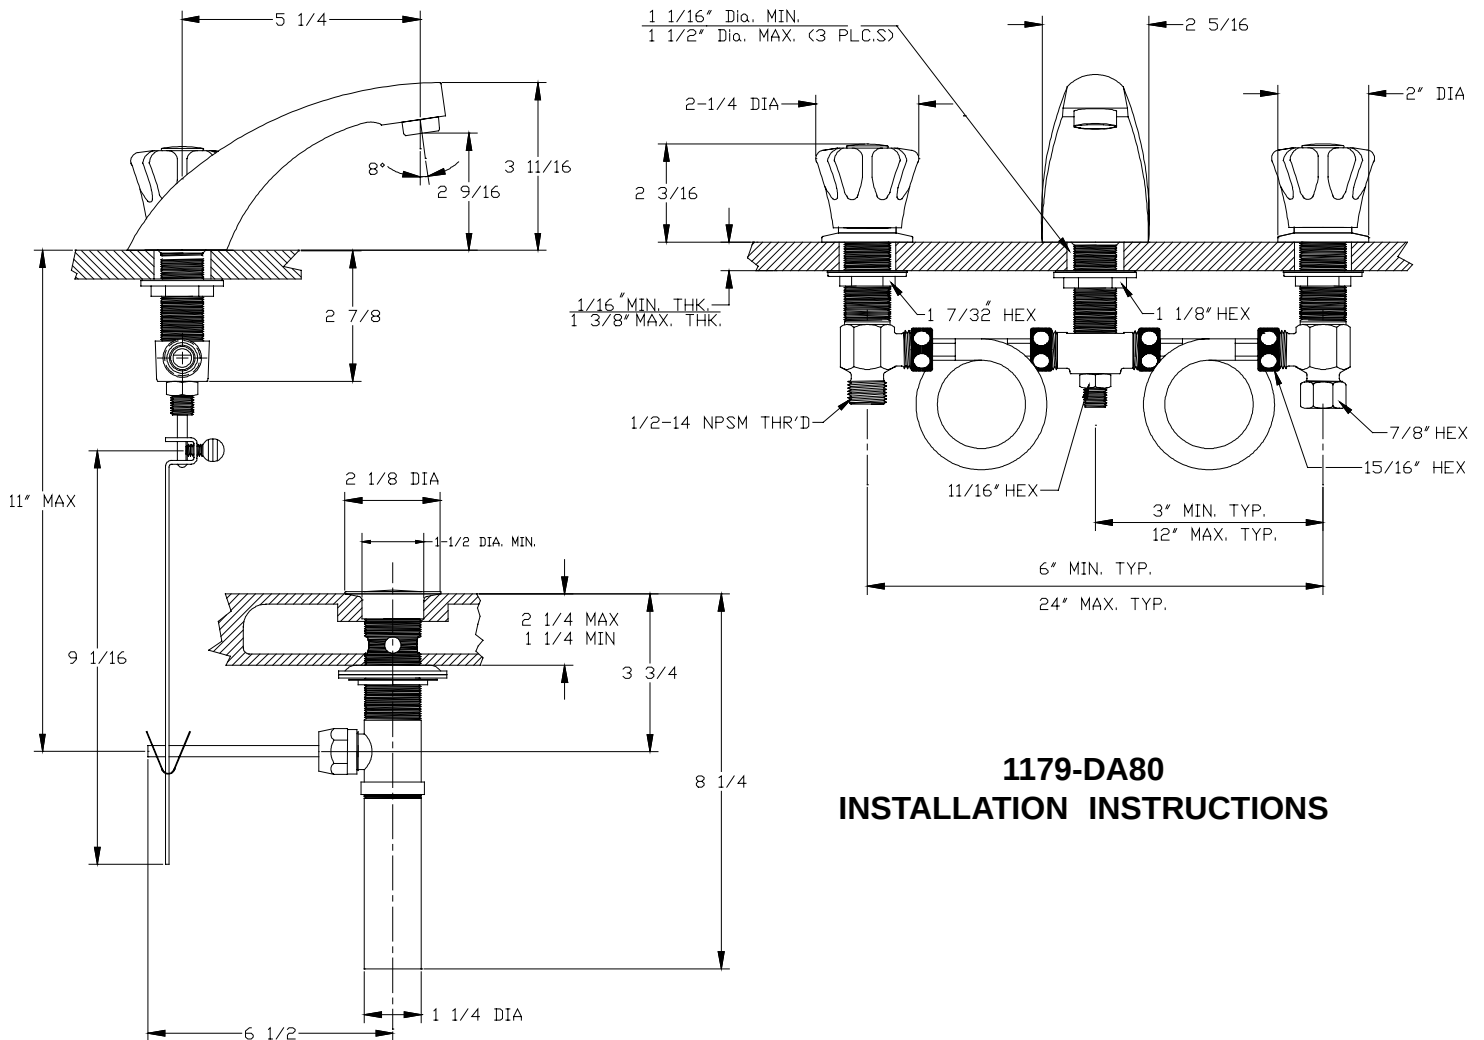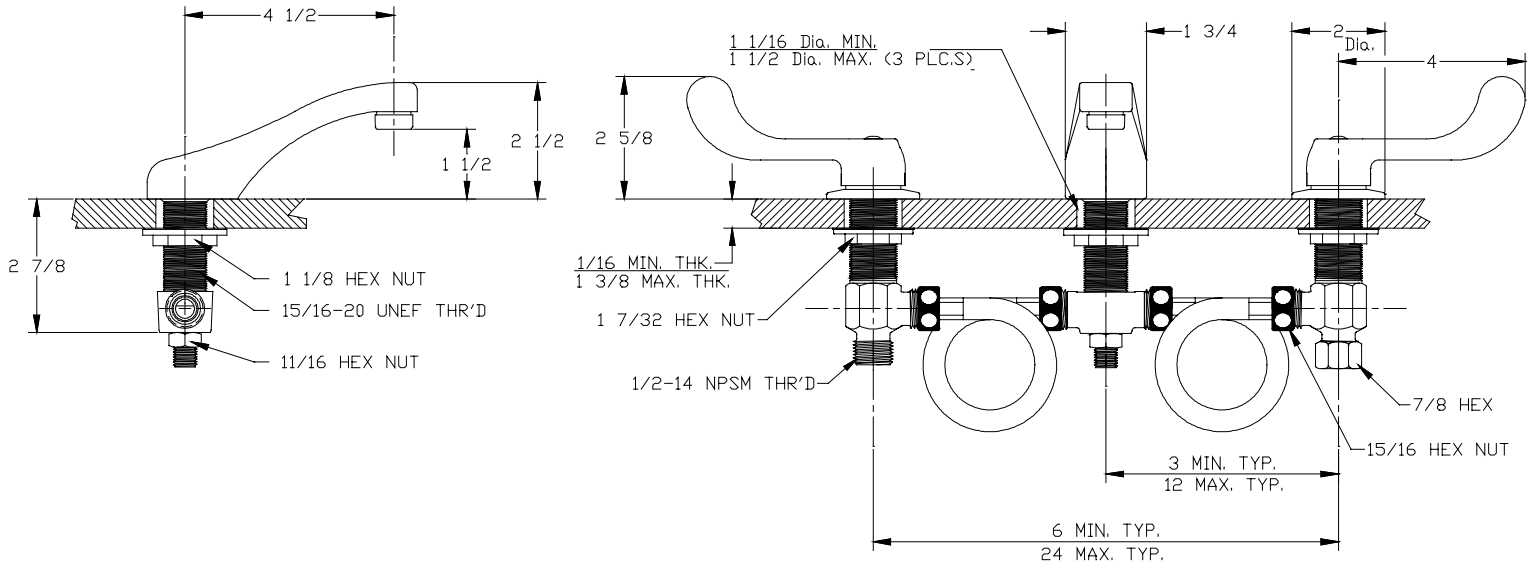

1179-DA80 INSTALLATION INSTRUCTIONS




CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220




Fax: 216-883-0875

Email: sales@CentralBrass.com

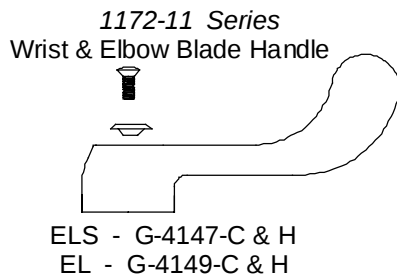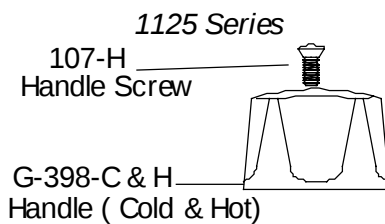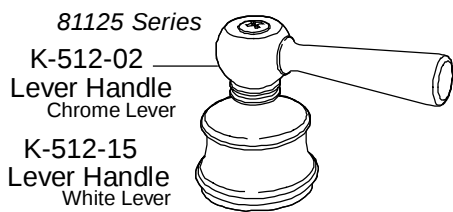


Handles

REPLACEMENT PARTS

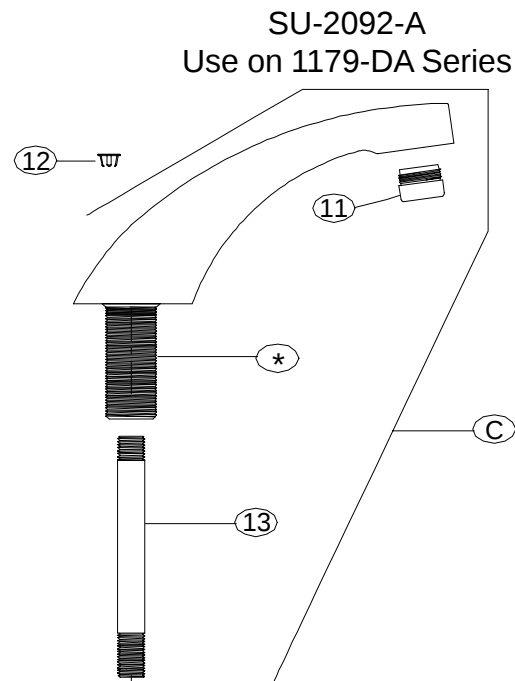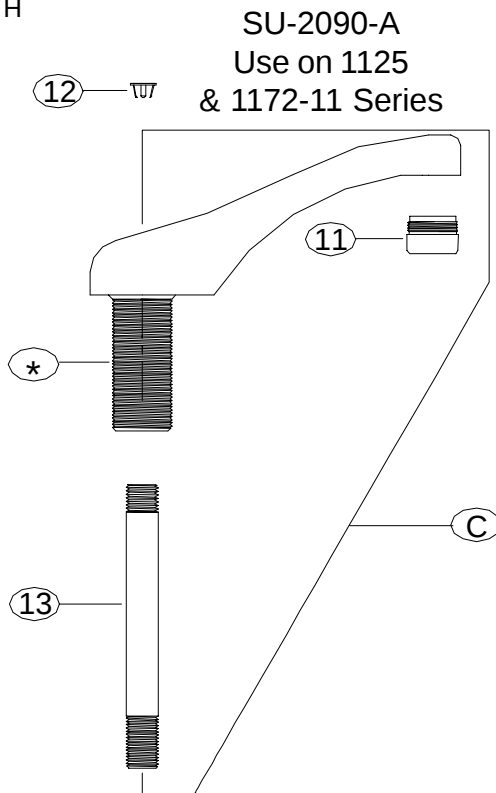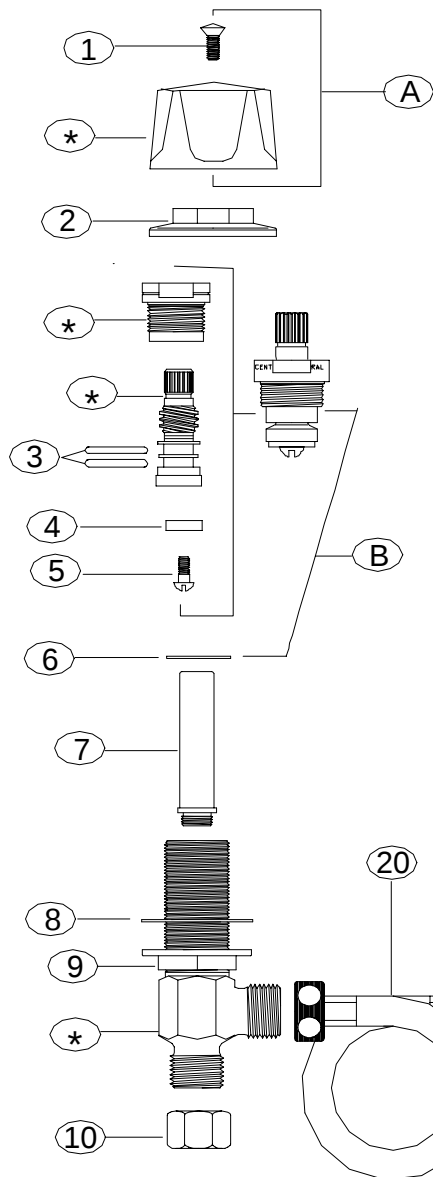


* These items are not offered individually and must be purchased as a group or unit. Please contact Central Brass for more information.

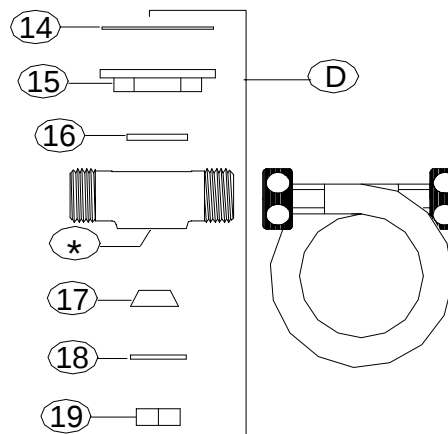

Use on 81125 Series

For
Ceramic Units

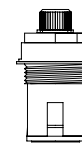

K-352-H or C
Ceramic Stem
Cartirdges
Hot or Cold



*Seat

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales @CentralBrass.com

REPLACEMENT PARTS

#	Part #	Description
A	G-398-C	Round Handle Indexed C with Screw (X107-H)
A	G-398-H	Round Handle Indexed H with Screw (X107-H)
B	G-453-EL	Cold O-Ring Stem Assembly with Gasket (X1028-Y) for lever type handles only
B	G-453-ER	Hot O-Ring Stem Assembly with Gasket (X1028-Y) use for both Cold & Hot sides for all types of round handles
C	SU-2090-A	Widespread Spout with Aerator (30-L) (for 1125 & 1172-11 Series)
C	SU-2092-A	Widespread Spout with Aerator (30-P) (for 1179-DA Series)
D	G-2090-S	Mounting Hardware with Center Tee Body for Spout
1	X107-H	Handle Screw (6 pcs per pack)
2	524-B	Escutcheon
3	X1038-453	O-Rings (25 pcs per pack)
4	X901-WNN	Stem Seat Washer (25 pcs per pack)
5	X104	Seat Washer Screw (25 pcs per pack)
6	X1028-Y	Gasket (25 pcs per pack)
7	PF-263-D	Replacement Seat
8	X491-U	Gasket (12 pcs per pack)
9	X53-AS	Locknut (6 pcs per pack)
10	X4015	Hex Coupling Nut (4 pcs per pack)
11	30-L	Aerator (for SU-2090-A use on 1125 & 1172-11 Series)
11	30-P	Aerator (for SU-2092-A use on 1179-DA Series)
12	X70-WA	Plug Hole Button
13	PF-725-GH	4 ⁷ / ₁₆ inch Spout Tube
14	X52-S	Washer (10 pcs per pack)
15	X53-CZ	Locknut (6 pcs per pack)
16	X427-WS	Gasket (12 pcs per pack)
17	X954-A	Slip Joint Washer (10 pcs per pack)
18	X28-A	Brass Washer (6 pcs per pack)
19	X168-B	Brass Hex Nut (4 pcs per pack)
20	312-10N	10 inch Flexible Hose Connector

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

www.CentralBrass.com

CENTRAL BRASS MAINTENANCE INSTRUCTIONS

DISASSEMBLY	REPLACEMENT
1 REMOVE HANDLE 1. Turn off water supply. 2. Remove screw. 3. Remove handle.	4 Use Only Genuine Central Replacement Parts Compression Units G-453-ER Hot O-Ring stem assembly G-453-EL Cold O-Ring stem assembly PF-263-D Replaceable Seat Ceramic Units K-352-H Ceramic Hot stem assembly K-352-C Ceramic Cold stem assembly
2 REMOVE STEM ASSEMBLY 1. Use adjustable wrench. 2. Unscrew counter-clockwise. Remove stem unit.	COMPRESSION CERAMIC
3 REMOVE SEAT 1. Insert 5/16" allen wrench in seat. 2. Turn seat counter-clockwise to remove.	

- If faucet has round handles (70 or 80 suffixes) , use two Hot stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO
2950 East 55th Street, Cleveland, Ohio 44127
Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com