


HYDROTEK MODEL HB-8000C-B1

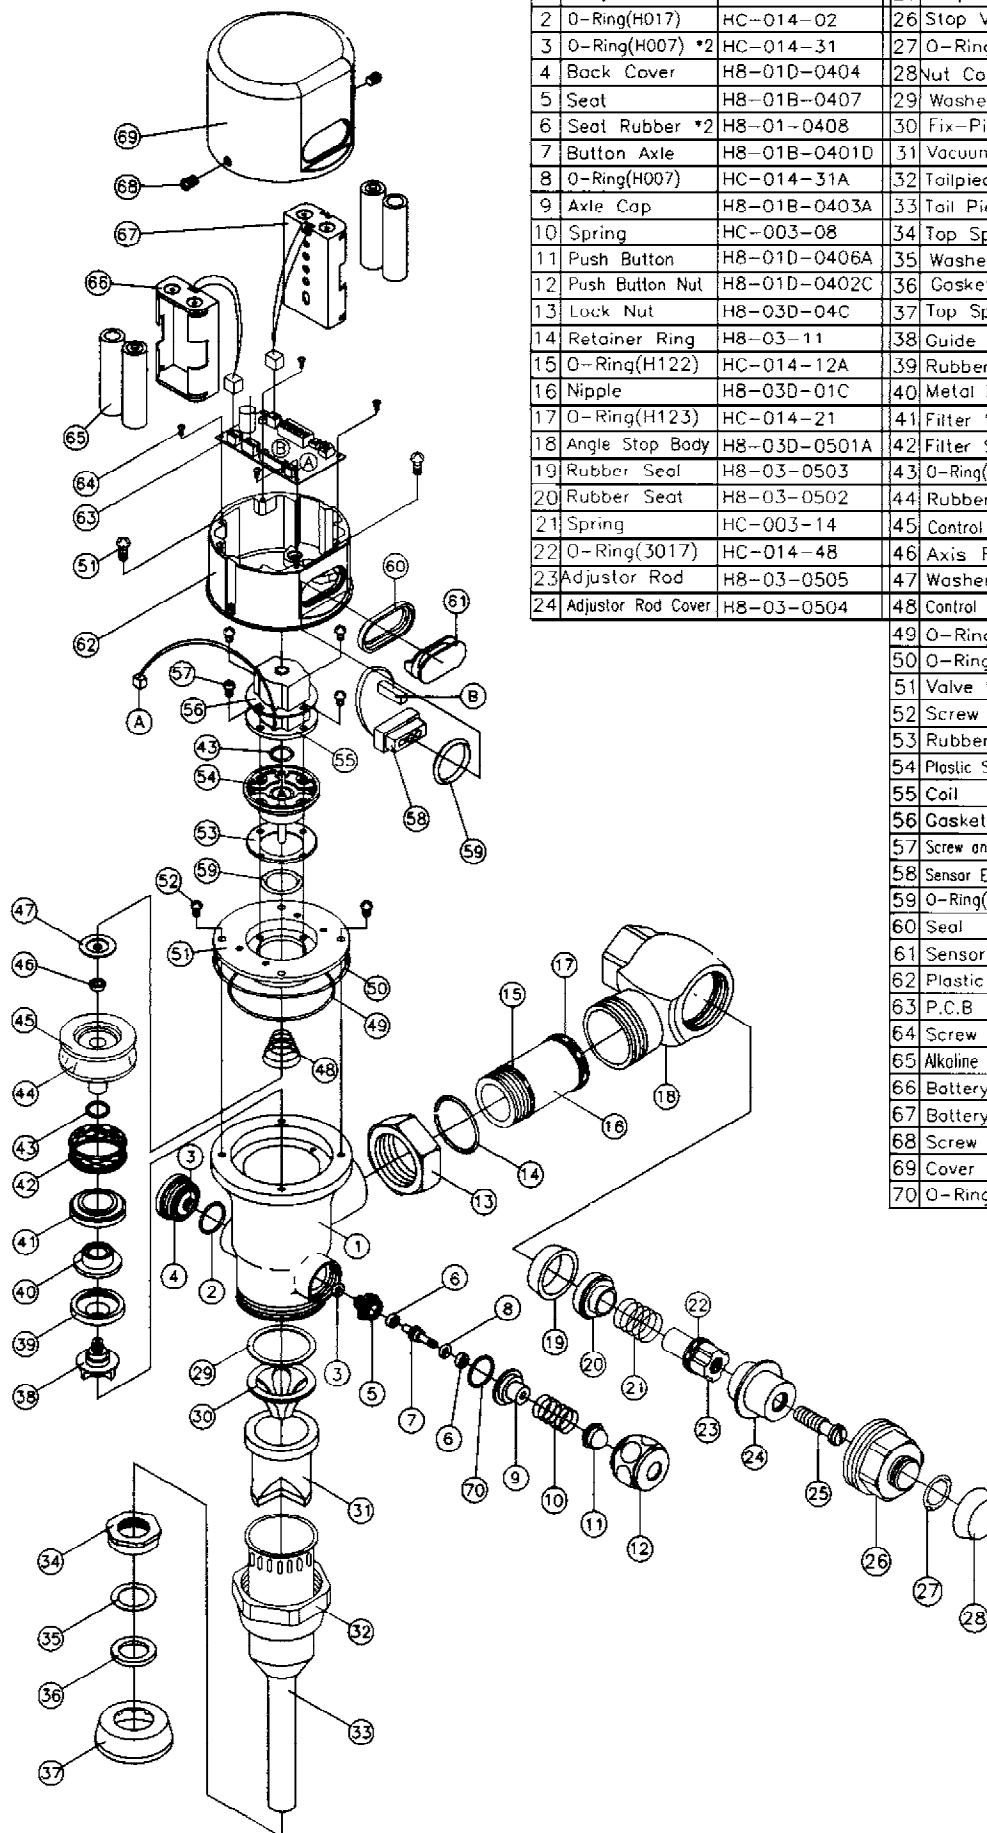

NO	DESCRIPTION	PART NO.	NO	DESCRIPTION	PART NO.
1	Body	H8-01D-0301E	25	Stop Screw	H8-03-0506
2	O-Ring(H017)	HC-014-02	26	Stop Valve Nut	H8-03D-0507A
3	O-Ring(H007) *2	HC-014-31	27	O-Ring(3012)	HC-014-66
4	Back Cover	H8-01D-0404	28	Nut Cover	H8-03D-0508A
5	Seat	H8-01B-0407	29	Washer	H8-13-06
6	Seal Rubber *2	H8-01-0408	30	Fix-Piece	H8-13-02C
7	Button Axle	H8-01B-0401D	31	Vacuum Breaker	H8-13-03A
8	O-Ring(H007)	HC-014-31A	32	Tailpiece Nut	H8-01D-0307
9	Axle Cap	H8-01B-0403A	33	Tail Piece	H8-13D-01
10	Spring	HC-003-08	34	Top Spud Nut	H8-07D-03
11	Push Button	H8-01D-0406A	35	Washer	H8-07-02
12	Push Button Nut	H8-01D-0402C	36	Gasket	H8-07-01
13	Lock Nut	H8-03D-04C	37	Top Spud	H8-07D-04
14	Retainer Ring	H8-03-11	38	Guide Pin	H8-01B-0106F
15	O-Ring(H122)	HC-014-12A	39	Rubber Seal	H8-01-0104C
16	Nipple	H8-03D-01C	40	Metal Bushing	H8-01B-0110
17	O-Ring(H123)	HC-014-21	41	Filter Seat	H8-01B-0103D
18	Angle Stop Body	H8-03D-0501A	42	Filter Screen	H8-01-0102A
19	Rubber Seal	H8-03-0503	43	O-Ring(H013) *2	HC-014-03
20	Rubber Seat	H8-03-0502	44	Rubber	H8-01-0108A
21	Spring	HC-003-14	45	Control Disc Body	H8-01K-0101E
22	O-Ring(3017)	HC-014-48	46	Axis Rubber	H8-01-0408
23	Adjustor Rod	H8-03-0505	47	Washer	H8-01-0111
24	Adjustor Rod Cover	H8-03-0504	48	Control Disc Spring	HC-003-03
			49	O-Ring(H035)	HC-014-19
			50	O-Ring(H040)	HC-014-87
			51	Valve Seat	B8-02B-01E
			52	Screw *6	HC-013-04
			53	Rubber Gasket	HB-05-05
			54	Plastic Seat INSERT	B8-02-04
			55	Coil	HB-04B-E
			56	Gasket	B86-01-04
			57	Screw and Washer *4	HC-013-35A
			58	Sensor Eye & Cable	PC-006-29
			59	O-Ring(H118) *2	HC-014-16
			60	Seal	B8-10-02
			61	Sensor Mask	PC-004-31A
			62	Plastic Ring	B8-10-01B
			63	P.C.B	PC-001B-45E
			64	Screw *4	HC-013-63
			65	Alkaline Battery *4	HB-09-04A
			66	Battery Holder	HB-09-03H
			67	Battery Holder	HB-09-03G
			68	Screw *2	HC-013-62
			69	Cover	B8-03D-01C
			70	O-Ring(H018)	HC-014-09