


HERITAGE SERIES SPREAD LAVATORY FAUCETS

Installation Instructions

4800 SERIES
4801 SERIES
4802 SERIES
7830 SERIES
7831 SERIES
7890 SERIES

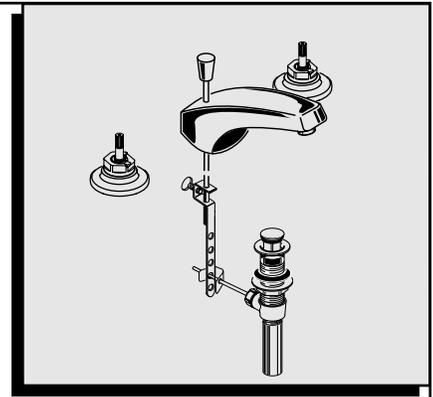

Certified to comply with ANSI A112.18.1M
U.S. Patent No. 5,819,789

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.


To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

34312M-D



4800 SERIES CONVENTIONAL SPOUT LESS POP-UP



7831 SERIES GOOSENECK SPOUT WITH POP-UP

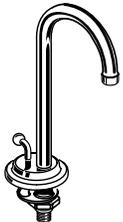

7890 SERIES GOOSENECK SPOUT BAR SINK

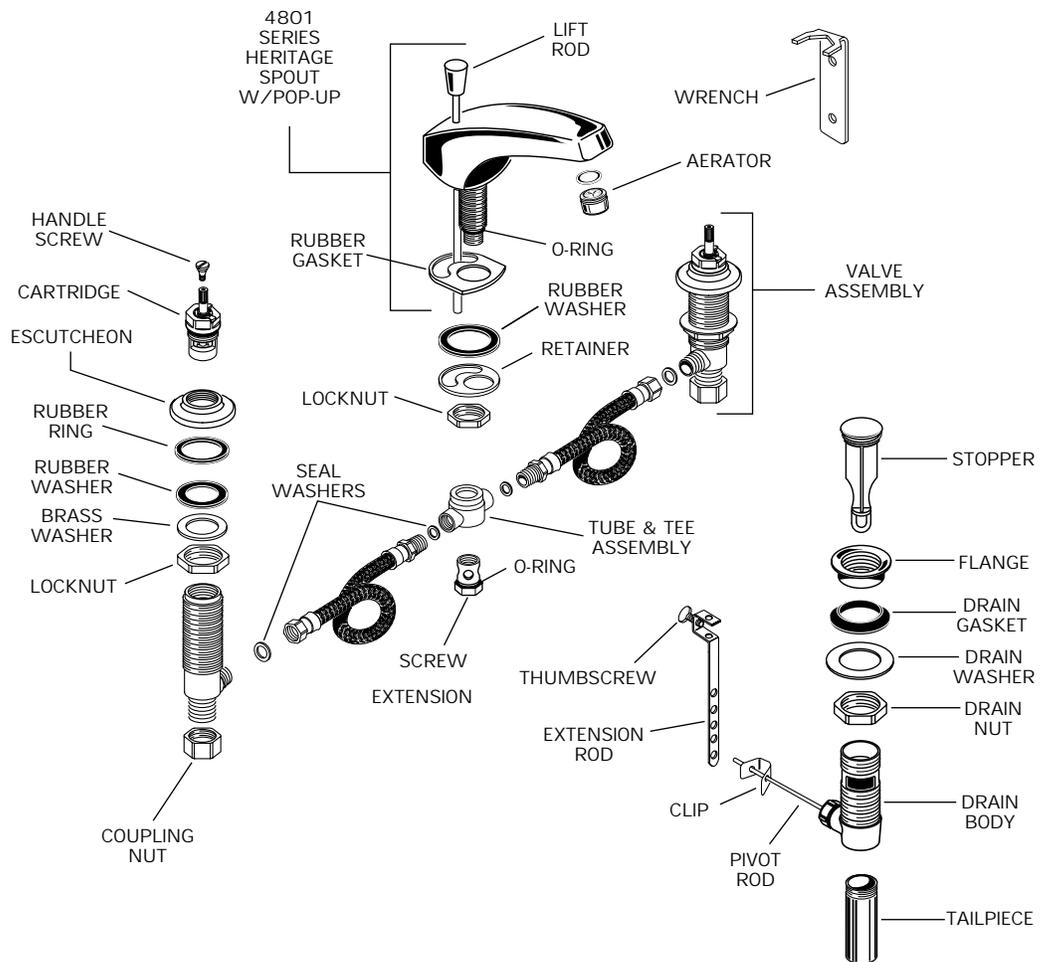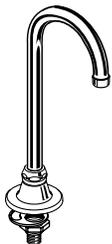 


1

CAUTION

Turn off hot and cold water supplies before beginning.

SPOUT ASSEMBLY (Model 7890 only)


- Apply the grease (provided) liberally to the SPOUT O-RINGS and SNAP RING areas.
- Assemble the SPOUT and tighten SPOUT NUT until snug on VALVE BODY.
- Tighten BRASS LOCKNUT on center body.

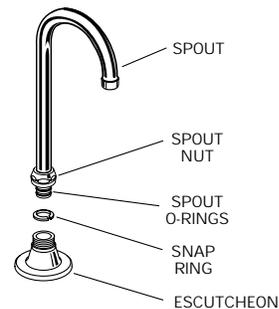


1

SPOUT OR BASE ASSEMBLY (continued)

- Insert BASE or SPOUT shank through center hole of SINK, making sure RUBBER GASKET is properly positioned.
- Assemble RUBBER WASHER, RETAINER, and LOCKNUT onto threads of SPOUT from underside of SINK.
- Insert LIFT ROD through SPOUT (or BASE) and slot of RETAINER.
- Align SPOUT and tighten LOCKNUT. Be sure slot in BRASS WASHER is positioned to the rear as shown.

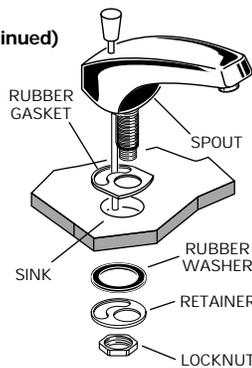


- Push SCREW into TEE and tighten SCREW onto SHANK to secure SPOUT connection.
- Place WASHERS inside COUPLING NUTS and connect HOSE to each valve outlet. Tighten COUPLING NUTS.
- Connect HOT water supply to the left VALVE and the COLD water to the right VALVE using sealant and appropriate connectors and coupling nuts.
- Refer to separate "Instruction Sheet" for assembly of handles.

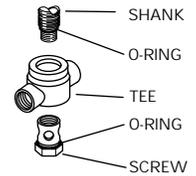

2

VALVE INSTALLATION


- Insert VALVE BODY through hole from underside of SINK. Thread of VALVE BODY should extend at least 5/16" above SINK top. If necessary, adjust LOCKNUT.
- Place RUBBER RING into ESCUTCHEON and screw ESCUTCHEON onto VALVE BODY until snug against internal stop.
- Set VALVE BODIES so that their outlets are facing toward center of SINK. Tighten LOCKNUT using wrench supplied with faucet.
- Before connecting TEE make certain that O-RINGS are properly seated on stepped SHANK and SCREW.

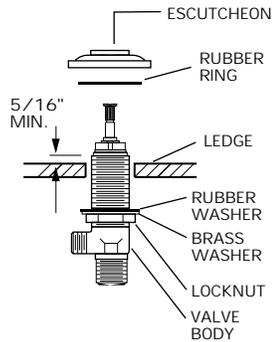

3

DRAIN ASSEMBLY (Model 4802 only)


- Apply a bead of PUTTY around underside of DRAIN PLUG flange. Insert DRAIN PLUG into SINK drain hole.
- Hold DRAIN PLUG to prevent turning and assemble GASKET, WASHER, and LOCKNUT, from underneath sink.
- Insert threaded end of TAILPIECE into lower end of DRAIN PLUG. Connect other end to trap.

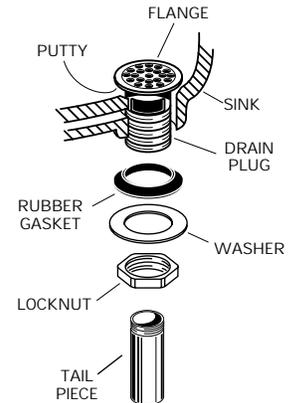


4

INSTALL POP-UP DRAIN

- Push TAILPIECE down into TRAP (threaded end up).
- Thread LOCKNUT, WASHER and GASKET onto DRAIN BODY.
- Apply a bead of PUTTY to underside of FLANGE.
- Feed DRAIN BODY up through SINK and thread FLANGE fully onto BODY.
- Tighten LOCKNUT firmly, keeping the PIVOT ROD pointed towards the back of the SINK.
- Drop STOPPER into DRAIN BODY.
- Pull TAILPIECE up and thread tightly into DRAIN BODY.

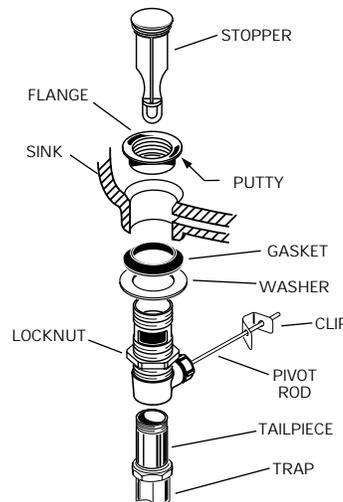

- Position EXTENSION ROD onto POP-UP ROD and tighten THUMBSCREW.
- Remove one end of CLIP from PIVOT ROD by squeezing ends together while sliding.
- Insert PIVOT ROD into second or third hole in EXTENSION and reassemble CLIP. (EXTENSION may need to be bent.)
- Adjust STOPPER height by repositioning EXTENSION and tightening THUMBSCREW.

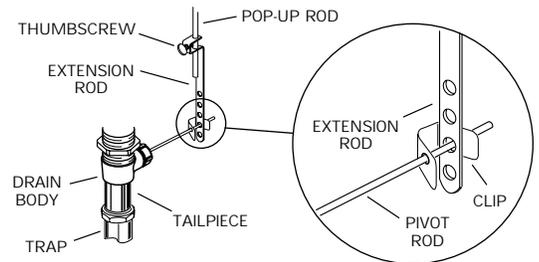

5

TEST INSTALLED FAUCET


- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.

- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Operate LIFT ROD and check DRAIN for leaks.
- Turn handles into OFF position and replace AERATOR.


6

SERVICE

- To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Remove INSERT and HANDLE SCREW.
 - Slip HANDLE with ADAPTER off.
 - Remove SPRING CLIP.
 - Lift STOP WASHER, turn 90° and replace.
 - Replace SPRING CLIP.
 - Replace ADAPTER, HANDLE, SCREW, and INSERT.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.

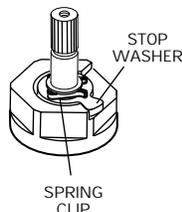

- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.
- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
 - Remove INSERT and HANDLE SCREW.
 - Slip HANDLE with ADAPTER off.
 - Unscrew CARTRIDGE with wrench.
 - Thoroughly rinse plastic SCREEN at base of CARTRIDGE.
 - Replace CARTRIDGE until flange is tight against valve body.
 - Turn valves OFF.
 - Replace ADAPTER, HANDLE, SCREW, and INSERT.

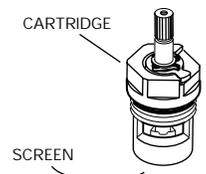

HOTLINE FOR HELP

For toll-free information and answers to your questions, call:

1 (800) 223-0068

Weekdays 8:00 a.m. to 7:00 p.m. Eastern Time

Saturdays 8:00 a.m. to 4:00 p.m. Eastern Time

Product names listed herein are trademarks of American Standard Inc.
© American Standard Inc. 1999

34312M-D