



RGLG

Parts List
19-August-2015



*This parts list is current as of the above revision date.
See <http://www.rheempartslists.net/92-42800-RGLG.pdf> for the current revision.*

80% Gas Furnaces

Table of Contents

Model Explanation	Page 3
Parts Numbers	
Panels - Miscellaneous	Page 4
Electrical Group	Page 5
Blower Group	Page 6
Heat Exchanger-Burner Group	Page 7
Gas Controls - Standing Pilot	Page 8
Gas Controls - HSI	Page 9
Orifice Selection Chart	Page 10
Drawings/Photographs	
Exploded View	Page 11
Vent Pressure Detector	Page 11
Blower Assembly	Page 12
Heat Exchanger Assembly	Page 12
Notes/Disclaimer	Page 13

MODEL NUMBER EXPLANATION

R	G	L	G	-	0	7	E	A	U	E	R
1	2	3	4			5		6	7	8	9

(1) **TRADEBRAND IDENTIFICATION**

(2) **MODEL**

G = Gas Furnace

(3) **TYPE**

P = Downflow

(4) **DESIGN SERIES**

(5) **HEATING INPUT DESIGNATION**

04 = 45,000 BTU/HR

05 = 50,000 BTU/HR

06 = 65,000 BTU/HR

07 = 75,000 BTU/HR

10 = 100,000 BTU/HR

12 = 125,000 BTU/HR

15 = 150,000 BTU/HR

0, 5 or 7 = Standing Pilot Ignition (SP)

E = Electric Ignition

N = Electric Ignition with NOX

M = Standing Pilot with NOX

(6) **VARIATIONS**

A = Standard Cabinet

B = Wide Cabinet

(7) **BLOWER DESIGNATION**

M = 11 x 7

R = 11 x 10

U = 11 x 6

(8) **AIRFLOW**

E = 1100-1300 CFM

G = 1500-1700 CFM

J = 1900-2100 CFM

(9) **FUEL DESIGNATION**

A = Natural Gas - Canadian

R = Natural Gas - U.S.

SERIAL NUMBER EXPLANATION

C	E	5	D	7	0	7	F	5	1	9	1	9	9	9	9
1		2	3	4	5	6	7		8		9			10	

(1) **GAS CODE**

(2) **LIMIT CONTROL**

(3) **BLOWER**

(4) **HEATING ELEMENT**

(5) **SPECIAL AREA REQUIREMENT**

(6) **MOTOR HORSEPOWER**

(7) **PLANT**

F = Fort Smith, AR

(8) **WEEK**

(9) **YEAR**

(10) **PRODUCTION NUMBER**

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGLG 05 A U	RGLG 07 A M	RGLG 07 A U
PANELS, MISCELLANEOUS PARTS							
1		Jacket			AS-66991-01	AS-66991-02	AS-66991-05
2	1	Top Plate - Canadian Models built (w/Jumper Plugs) - Before F0793			AE-61735-01	AE-61735-02	AE-61735-02
2	1	Top Plate - U.S. and Canadian Models (w/o Jumper Plugs) - After F0793			AE-66981-01	AE-66981-02	AE-66981-02
3		Blower/Filter Door			AE-61679-01	AE-61680-01	AE-61680-01
4		Burner Compartment Door			AE-61675-01	AE-61676-01	AE-61676-01
		Plug Button - 1-3/16 in opening (2)			45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components)			68-22857-01	68-22857-01	68-22857-01
		Control Box Cover			AE-61699-02	AE-61699-02	AE-61699-02
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)			AE-61507-01	AE-61507-02	AE-61507-02
13		Control Board/Blower Inducer Control			See Gas Controls		
14		Pressure Switch			See Electrical Group		
15		Door Switch - Push Button			See Electrical Group		
16		Limit - Main Limit (Heat Exchanger Panel)			See Electrical Group		
17		Vent Pressure Detector Control			See Electrical Group		
18		Limit - Manual Reset (Burner Compartment)			See Electrical Group		
19		Limit - Manual Reset (Burner Compartment)			See Electrical Group		
20		Limit Switch Bracket			See Electrical Group		
21		Limit - Heat Assisted (Blower Housing)			See Electrical Group		
22		Transformer			See Electrical Group		
24		Induced Draft Blower w/Gasket			See Electrical Group		
31		Ignitor			See Gas Controls		
32		Exhaust Hood Assembly (Standing Pilot Models)			See Gas Controls		
		Silicone Tubing - Pressure Switch			79-21491-93	79-21491-93	79-21491-93
		Flue Pipe			AE-66691-14	AE-66691-14	AE-66691-14
		Flue Pipe Enclosure			AE-66982-01	AE-66982-01	AE-66982-01
		Flue Pipe Enclosure Door			AE-66983-01	AE-66983-01	AE-66983-01
		Filter Rack/Support			AE-61711-01	AE-66681-01	AE-66681-01
		Filter - Permanent			54-22699-02 (1)	54-22699-01 (2)	54-22699-01 (2)

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGLG 10 A M	RGLG 10 A U	RGLG 10 B R	RGLG 12 A R	RGLG 15 A R
PANELS, MISCELLANEOUS PARTS							
1		Jacket	AS-66991-02	AS-66991-05	AS-66991-03	AS-66991-04	AS-66991-04
2	1	Top Plate - Canadian Models built (w/Jumper Plugs) - Before F0793	AE-61735-02	AE-61735-02	AE-61735-03	AE-61735-04	AE-61735-04
2	1	Top Plate - U.S. and Canadian Models (w/o Jumper Plugs) - After F0793	AE-66981-02	AE-66981-02	AE-66981-03	AE-66981-04	AE-66981-04
3		Blower/Filter Door	AE-61680-01	AE-61680-01	AE-61681-01	AE-61682-01	AE-61682-01
4		Control Compartment Panel w/o Plug Button	AE-61676-01	AE-61676-01	AE-61677-01	AE-61678-01	AE-61678-01
		Plug Button - 1-3/16 in opening (2)	45-22980-01	45-22980-01	45-22980-01	45-22980-01	45-22980-01
5		Control Box (w/o components)	68-22857-01	68-22857-01	68-22857-01	68-22857-01	68-22857-01
		Control Box Cover	AE-61699-02	AE-61699-02	AE-61699-02	AE-61699-02	AE-61699-02
12		Collar - Vent Pressure Detector (Canadian Models Before F0793)	AE-61507-02	AE-61507-02	AE-61507-02	AE-61507-02	AE-61507-03
13		Control Board/Blower Inducer Control	See Gas Controls				
14		Pressure Switch	See Electrical Group				
15		Door Switch - Push Button	See Electrical Group				
16		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group				
17		Vent Pressure Detector Control	See Electrical Group				
18		Limit - Manual Reset (Burner Compartment)	See Electrical Group				
19		Limit - Manual Reset (Burner Compartment)	See Electrical Group				
20		Limit Switch Bracket	See Electrical Group				
21		Limit - Heat Assisted (Blower Housing)	See Electrical Group				
22		Transformer	See Electrical Group				
24		Induced Draft Blower w/Gasket	See Electrical Group				
31		Ignitor	See Gas Controls				
32		Exhaust Hood Assembly (Standing Pilot Models)	See Gas Controls				
		Silicone Tubing - Pressure Switch	79-21491-93	79-21491-93	79-21491-93	79-21491-83	79-21491-83
		Flue Pipe	AE-66691-14	AE-66691-14	AE-66691-14	AE-66691-14	AE-66691-14
		Flue Pipe Enclosure	AE-66982-01	AE-66982-01	AE-66982-01	AE-66982-01	AE-66982-01
		Flue Pipe Enclosure Door	AE-66983-01	AE-66983-01	AE-66983-01	AE-66983-01	AE-66983-01
		Filter Rack/Support	AE-66681-01	AE-66681-01	AE-66681-01	AE-66681-01	AE-66681-01
		Filter - Permanent (2)	54-22699-01	54-22699-01	54-22699-01	54-22699-02	54-22699-02

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGLG 05 A U	RGLG 07 A M	RGLG 07 A U
ELECTRICAL GROUP							
14	Stk	Pressure Switch			42-22682-02	42-22682-03	42-22682-03
15		Door Switch - Push Button			42-22692-01	42-22692-01	42-22692-01
16	Stk	Limit - Main Limit (Heat Exchanger Panel)			47-22696-07	47-22696-05	47-22696-05
17	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - HSI Models			47-21900-13	N/A	47-21900-06
17	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - Standing Pilot Models			47-21900-13	N/A	47-21900-06
	Stk,2	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)			47-22862-05	47-22862-06	47-22862-06
18	Stk	Limit - Manual Reset (Burner Compartment)			47-22861-01	47-22861-01	47-22861-01
19	Stk	Limit - Manual Reset (Burner Compartment)			47-22861-01 (2)	47-22861-01 (2)	47-22861-01 (2)
20		Limit Switch Bracket			AE-61600-02	AE-61600-02	AE-61600-02
21	Stk	Limit - Heat Assisted (Blower Housing)			47-22860-01	47-22860-01	47-22860-01
22	Stk	Transformer			46-22863-01	46-22863-01	46-22863-01
23		Capacitor - Blower Motor			See Blower Group		
24	Stk,2	Induced Draft Blower w/Gasket			70-22838-02	70-22838-02	70-22838-02
		Jumper Plug - Canadian Models Before F0793			AS-60857-02	N/A	AS-60857-02
		Wiring Harness - 9 pin to 6 terminals, 5 wires (Standing Pilot)			AS-61704-02	AS-61704-02	AS-61704-02
		Wiring Harness - 9 pin from Blower/Inducer Control to 9 pin and 4 pin (Standing Pilot)			AS-61700-02	AS-61700-02	AS-61700-02
		Wiring Harness - 9 pin from Blower/Inducer Control to 4 pin, to 2 pin and 9 pin (Standing Pilot)			AS-61700-03	AS-61700-03	AS-61700-03
		Wiring Harness - 9 pin from IFC Board to 9 pin (HSI)			AS-61702-02	AS-61702-02	AS-61702-02
		Wiring Harness - 9 pin from IFC Board to 9 pin and 2 pin (HSI)			AS-61702-03	AS-61702-03	AS-61702-03
		Wiring Harness - 9 pin to 7 terminals (HSI)			AS-61706-02	AS-61706-02	AS-61706-02
		Wiring Harness - 6 pin from IFC Board to 4 pin (HSI)			AS-61703-02	AS-61703-02	AS-61703-02
		Wiring Harness - 4 pin to 2 pin and 3 terminals (HSI)			AS-61707-02	AS-61707-02	AS-61707-02

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGLG 10 A M	RGLG 10 A U	RGLG 10 B R	RGLG 12 A R	RGLG 15 A R
ELECTRICAL GROUP							
14	Stk	Pressure Switch	42-22682-03	42-22682-03	42-22682-03	42-22682-02	42-22682-02
15		Door Switch - Push Button	42-22692-01	42-22692-01	42-22692-01	42-22692-01	42-22692-01
16	Stk	Limit - Main Limit (Heat Exchanger Panel)	47-22696-05	47-22696-07	47-22696-07	47-22696-05	47-22696-05
17	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - HSI Models	47-21900-05	47-21900-05	47-21900-20	47-21900-06	47-21900-01
17	Stk	Vent Pressure Detector Control - Manual Reset (Canadian Models Before F0793) - Standing Pilot Models	N/A	47-21900-05	47-21900-06	47-21900-06	47-21900-01
	Stk,2	Vent Safety Switch - Manual Reset Limit (on Induced Draft Blower)	N/A	47-22862-06	47-22862-03	47-22862-06	47-22862-04
18	Stk	Limit - Manual Reset (Burner Compartment)	47-22861-01	47-22861-01	47-22861-01	47-22861-01	47-22861-01
19	Stk	Limit - Manual Reset (Burner Compartment)	47-22861-01 (2)	47-22861-01 (2)	47-22861-01 (2)	47-22861-01 (2)	47-22861-01 (2)
20		Overtemperature Switch Bracket	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02	AE-61600-02
21	Stk	Limit - Heat Assisted (Blower Housing)	47-22860-03	47-22860-02	47-22860-01	47-22860-03	47-22860-04
22	Stk	Transformer	46-22863-01	46-22863-01	46-22863-01	46-22863-01	46-22863-01
23		Capacitor - Blower Motor			See Blower Group		
24	Stk,2	Induced Draft Blower w/Gasket	70-22838-02	70-22838-02	70-22838-02	70-22838-02	70-22838-02
		Jumper Plug - Canadian Models Before F0793	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02	AS-60857-02
		Wiring Harness - 9 pin to 6 terminals, 5 wires (Standing Pilot)	AS-61704-02	AS-61704-02	AS-61704-02	AS-61704-02	AS-61704-02
		Wiring Harness - 9 pin from Blower/Inducer Control to 9 pin and 4 pin (Standing Pilot)	AS-61700-02	AS-61700-02	AS-61700-02	AS-61700-02	AS-61700-02
		Wiring Harness - 9 pin from Blower/Inducer Control to 4 pin, to 2 pin and 9 pin (Standing Pilot)	AS-61700-03	AS-61700-03	AS-61700-03	AS-61700-03	AS-61700-03
		Wiring Harness - 9 pin from IFC Board to 9 pin (HSI)	AS-61702-02	AS-61702-02	AS-61702-02	AS-61702-02	AS-61702-02
		Wiring Harness - 9 pin from IFC Board to 9 pin and 2 pin (HSI)	AS-61702-03	AS-61702-03	AS-61702-03	AS-61702-03	AS-61702-03
		Wiring Harness - 9 pin to 7 terminals (HSI)	AS-61706-02	AS-61706-02	AS-61706-02	AS-61706-02	AS-61706-02
		Wiring Harness - 6 pin from IFC Board to 4 pin (HSI)	AS-61703-02	AS-61703-02	AS-61703-02	AS-61703-02	AS-61703-02
		Wiring Harness - 4 pin to 2 pin and 3 terminals (HSI)	AS-61707-02	AS-61707-02	AS-61707-02	AS-61707-02	AS-61707-02

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION			RGLG 05 A U	RGLG 07 A M	RGLG 07 A U
BLOWER GROUP							
25	Stk	Blower Assembly (Includes items 23, 26-29)			AS-61697-08	AS-61697-05	AS-61697-04
23	Stk	Capacitor - Blower Motor			43-100509-42	43-21298-43	43-21298-42
26		Housing			AS-61674-04	AS-61674-21	AS-61674-04
27		Motor Mounting Legs (4)			AE-61698-01	AE-61698-01	AE-61698-01
		Motor Mounting Legs Screws (8)			63-22338-03	63-22338-03	63-22338-03
28	Stk	Blower Motor			51-22873-01	51-22859-01	51-22858-01
29	Stk	Blower Wheel			70-22683-01	70-22688-01	70-22683-01
		Capacitor Strap			AE-50892-01	AE-50892-01	AE-50892-01

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGLG 10 A M	RGLG 10 A U	RGLG 10 B R	RGLG 12 A R	RGLG 15 A R
BLOWER GROUP							
25	Stk	Blower Assembly (Includes items 23, 26-29)	AS-61697-10	AS-61697-04	AS-61697-06	AS-61697-06	AS-61697-06
23	Stk	Capacitor - Blower Motor	43-21298-42	43-21298-42	43-21298-43	43-21298-43	43-21298-43
26		Housing	AS-61674-05	AS-61674-04	AS-61674-06	AS-61674-06	AS-61674-06
27		Motor Mounting Legs (4)	AE-61698-01	AE-61698-01	AE-61698-01	AE-61698-01	AE-61698-01
		Motor Mounting Legs Screws (8)	63-22338-03	63-22338-03	63-22338-03	63-22338-03	63-22338-03
28	Stk	Blower Motor	51-22858-01	51-22858-01	51-22859-01	51-22859-01	51-22859-01
29	Stk	Blower Wheel	70-22688-01	70-22683-01	70-20602-01	70-20602-01	70-20602-01
		Capacitor Strap	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01	AE-50892-01

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGLG 05 A U	RGLG 07 A M	RGLG 07 A U		
HEAT EXCHANGER, BURNER / MANIFOLD							
6	Stk	Heat Exchanger Assembly	AS-66997-01	AS-66997-02	AS-66997-02		
7	Stk	Burner	75-22840-01 (2)	75-22840-01 (3)	75-22840-01 (3)		
8		NOX Burner Insert	AS-61714-01 (2)	AS-61714-01 (3)	AS-61714-01 (3)		
9		NOX Burner Retainer Rod	AE-61715-01	AE-61715-02	AE-61715-02		
		Burners Supports (Holds Burner between the Burner Support Brackets)	AE-61577-01	AE-61577-02	AE-61577-02		
10		Burner Support Bracket (2)	AE-61588-01	AE-61588-01	AE-61588-01		
11	Stk	Manifold (w/o Orifices)	81-23492-01	81-23492-02	81-23492-02		
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(2)	(2)	(3)		

No.	Notes	MODEL HEATING CAPACITY VARIATION BLOWER DESIGNATION	RGLG 10 A M	RGLG 10 A U	RGLG 10 B R	RGLG 12 A R	RGLG 15 A R
HEAT EXCHANGER, BURNER / MANIFOLD							
6	Stk	Heat Exchanger Assembly	AS-66997-07	AS-66997-07	AS-66997-04	AS-66997-05	AS-66997-06
7	Stk	Burner	75-22840-01 (4)	75-22840-01 (4)	75-22840-01 (4)	75-22840-01 (5)	75-22840-01 (6)
8		NOX Burner Insert	AS-61714-01 (4)	AS-61714-01 (4)	AS-61714-01 (4)	AS-61714-01 (5)	AS-61714-01 (6)
9		NOX Burner Retainer Rod	AE-61715-03	AE-61715-03	AE-61715-04	AE-61715-05	AE-61715-06
		Burners Supports (Holds Burner between the Burner Support Brackets)	AE-61577-03	AE-61577-03	AE-61577-03	AE-61577-04	AE-61577-05
10		Burner Support Bracket (2)	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01	AE-61588-01
11	Stk	Manifold (w/o Orifices)	81-23492-03	81-23492-03	81-23492-03	81-23492-04	81-23492-05
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(4)	(4)	(4)	(5)	(6)

No.	Notes	MODEL GAS CODE (TYPE)	RGLG BA (SP)	RGLG BB (SP)	RGLG BG (SP)	RGLG BL (SP)	RGLG CB (SP)	RGLG CC (SP)
GAS CONTROLS - HONEYWELL								
30	Stk	Gas Valve - Natural Gas	60-22174-02	60-22174-02	60-22174-02	60-22174-02	60-22174-02	60-22174-02
30	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3
13	Stk	Blower/Inducer Control Board	47-22827-01	47-22830-01	47-22693-01	47-22828-01	47-22827-03	47-22828-02
32		Exhaust Hood Assembly	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01
35	4	Pilot Assembly (Honeywell) - Before F3792	See Note 4	See Note 4	See Note 4	See Note 4	See Note 4	See Note 4
35	Stk,4	Robertshaw Pilot Assembly Field Service Kit	62-22864-82	62-22864-82	62-22864-82	62-22864-82	62-22864-82	62-22864-82
35	Stk	Pilot Assembly (Robertshaw) - After F3792	62-22864-02	62-22864-02	62-22864-02	62-22864-02	62-22864-02	62-22864-02
	Stk	Pilot Orifice - Natural Gas	62-22832-02	62-22832-02	62-22832-02	62-22832-02	62-22832-02	62-22832-02
	Stk,5	Pilot Orifice Kit - LP	62-22834-83	62-22834-83	62-22834-83	62-22834-83	62-22834-83	62-22834-83
33	Stk	Thermocouple (Honeywell) - Before F3792	62-22348-02	62-22348-02	62-22348-02	62-22348-02	62-22348-02	62-22348-02
33	Stk	Thermocouple (Robertshaw) - After F3792	62-19635-02	62-19635-02	62-19635-02	62-19635-02	62-19635-02	62-19635-02
		Pilot Tubing (Honeywell) - Sizes 05-07 Before F3792	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61
		Pilot Tubing (Honeywell) - Size 10 Before F3792	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63
		Pilot Tubing (Honeywell) - Size 12 Before F3792	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65
		Pilot Tubing (Honeywell) - Size 15 Before F3792	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67
		Pilot Tubing (Robertshaw) - Sizes 05-07 After F3792	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60
		Pilot Tubing (Robertshaw) - Size 10 After F3792	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62
		Pilot Tubing (Robertshaw) - Size 12 After F3792	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64
		Pilot Tubing (Robertshaw) - Size 15 After F3792	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66
34		Pilot Bracket	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01
		Pilot Shield	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01
		LP Conversion Kit:						
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04	FP-04	FP-04

No.	Notes	MODEL GAS CODE (TYPE)	RGLG BW (SP)	RGLG BX (SP)	RGLG BY (SP)	RGLG BZ (SP)		
GAS CONTROLS - ROBERTSHAW								
30	Stk	Gas Valve - Natural Gas	60-22525-10	60-22525-10	60-22525-10	60-22525-10		
30	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3		
13	Stk	Blower/Inducer Control Board	47-22827-03	47-22830-01	47-22693-01	47-22828-02		
32		Exhaust Hood Assembly	AS-61654-01	AS-61654-01	AS-61654-01	AS-61654-01		
35	Stk	Pilot Assembly	62-22864-02	62-22864-02	62-22864-02	62-22864-02		
35	4	Pilot Assembly (Honeywell) - Before F3792	See Note 4	See Note 4	See Note 4	See Note 4		
35	Stk,4	Robertshaw Pilot Assembly Field Service Kit	62-22864-82	62-22864-82	62-22864-82	62-22864-82		
35	Stk	Pilot Assembly (Robertshaw) - After F3792	62-22864-02	62-22864-02	62-22864-02	62-22864-02		
	Stk	Pilot Orifice - Natural Gas	62-22832-02	62-22832-02	62-22832-02	62-22832-02		
	Stk,5	Pilot Orifice Kit - LP	62-22834-83	62-22834-83	62-22834-83	62-22834-83		
33	Stk	Thermocouple (Honeywell) - Before F3792	62-22348-02	62-22348-02	62-22348-02	62-22348-02		
33	Stk	Thermocouple (Robertshaw) - After F3792	62-19635-02	62-19635-02	62-19635-02	62-19635-02		
		Pilot Tubing (Honeywell) - Sizes 05-07 Before F3792	AE-60777-61	AE-60777-61	AE-60777-61	AE-60777-61		
		Pilot Tubing (Honeywell) - Size 10 Before F3792	AE-60777-63	AE-60777-63	AE-60777-63	AE-60777-63		
		Pilot Tubing (Honeywell) - Size 12 Before F3792	AE-60777-65	AE-60777-65	AE-60777-65	AE-60777-65		
		Pilot Tubing (Honeywell) - Size 15 Before F3792	AE-60777-67	AE-60777-67	AE-60777-67	AE-60777-67		
		Pilot Tubing (Robertshaw) - Sizes 05-07 After F3792	AE-60777-60	AE-60777-60	AE-60777-60	AE-60777-60		
		Pilot Tubing (Robertshaw) - Size 10 After F3792	AE-60777-62	AE-60777-62	AE-60777-62	AE-60777-62		
		Pilot Tubing (Robertshaw) - Size 12 After F3792	AE-60777-64	AE-60777-64	AE-60777-64	AE-60777-64		
		Pilot Tubing (Robertshaw) - Size 15 After F3792	AE-60777-66	AE-60777-66	AE-60777-66	AE-60777-66		
34		Pilot Bracket	AE-61658-01	AE-61658-01	AE-61658-01	AE-61658-01		
		Pilot Shield	AE-61757-01	AE-61757-01	AE-61757-01	AE-61757-01		
		LP Conversion Kit:						
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15		
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04		

No.	Notes	MODEL GAS CODE (TYPE)	RGLG BT (HSI)	RGLG CA (HSI)			
GAS CONTROLS - ROBERTSHAW							
30	Stk	Gas Valve - Natural Gas	60-22525-11	60-22525-11			
30	Stk,3	Gas Valve - LP	See Note 3	See Note 3			
13	Stk	Integrated Furnace Control Board (IFC)	62-22737-07	62-22694-01			
	Stk	Flame Sensor	62-23543-01	62-23543-01			
31	Stk	Ignitor	62-22868-02	62-22868-02			
		Ignitor Bracket	AE-61581-01	AE-61581-01			
		Ignitor Shield	AE-61627-01	AE-61627-01			
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15			
	Stk	Canadian Models	FP-04	FP-04			

No.	Notes	MODEL GAS CODE (TYPE)	RGLG BR (HSI)	RGLG BS (HSI)	RGLG CD (HSI)	RGLG CE (HSI)	RGLG CM (HSI)
GAS CONTROLS - HONEYWELL							
30	Stk	Gas Valve - Natural Gas	60-22866-01	60-22866-01	60-22866-01	60-22866-01	60-22866-01
30	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3
13	Stk	Integrated Furnace Control Board (IFC)	62-22737-06	62-22694-01	62-22737-07	62-22694-02	62-22694-03
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01
31	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15	FP-15	FP-15	FP-15
	Stk	Canadian Models	FP-04	FP-04	FP-04	FP-04	FP-04

No.	Notes	MODEL GAS CODE (TYPE)	RGLG CU (HSI)	RGLG CS (HSI)	RGLG CV (HSI)	RGLG CW (HSI)	RGLG CY (HSI)
GAS CONTROLS - HONEYWELL							
30	Stk	Gas Valve - Natural Gas	60-105055-01	60-105055-01	60-105055-01	60-105055-01	60-105055-01
30	Stk,3	Gas Valve - LP	See Note 3	See Note 3	See Note 3	See Note 3	See Note 3
13	Stk	Integrated Furnace Control Board (IFC)	62-22694-11	62-22737-08	62-22694-03	62-22737-08	62-22694-11
	Stk	Flame Sensor	62-23543-01	62-23543-01	62-23543-01	62-23543-01	62-23543-01
31	Stk	Ignitor	62-22868-02	62-22868-02	62-22868-02	62-22868-02	62-22868-02
		Ignitor Bracket	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01	AE-61581-01
		Ignitor Shield	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01	AE-61627-01
		LP Conversion Kit:					
	Stk	All Models	FP-15	FP-15	FP-15	FP-15	FP-15

No.	Notes	MODEL GAS CODE (TYPE)	RGLG DA (HSI)	RGLG DB (HSI)			
GAS CONTROLS - WHITE RODGERS							
30	Stk	Gas Valve - Natural Gas	60-23490-01	60-23490-01			
30	Stk,3	Gas Valve - LP	See Note 3	See Note 3			
13	Stk	Integrated Furnace Control Board (IFC)	62-22737-08	62-22694-11			
	Stk	Flame Sensor	62-23543-01	62-23543-01			
31	Stk	Ignitor	62-22868-02	62-22868-02			
		Ignitor Bracket	AE-61581-01	AE-61581-01			
		Ignitor Shield	AE-61627-01	AE-61627-01			
		LP Conversion Kit:					
	Stk	U.S. Models	FP-15	FP-15			
	Stk	Canadian Models	FP-04	FP-04			

80% GAS FURNACE - ORIFICE SELECTION CHART - NATURAL GAS

CAUTION: Selection of the correct Natural Gas Orifice requires the following information for the specific installation:

1) Altitude in of the installation (ft.).

2) Average energy content of the Natural Gas fuel from the local supplier (BTU/cu. ft.).

For detailed information and instructions for Orifice selection, see the Gas Furnace LP Conversion Kit Index 92-21519-59 and the latest edition of the National Fuel Gas Code Handbook, or the National Standard of Canada, Natural Gas and Propane Installation Code, CAN B149.1.

CAUTION: This information is provided for replacement purposes only. Conversion for operation at High Altitude must be done using the kit specified on the product specification sheet for the unit.

NOTE: This Orifice sizing chart is based on 25,000 BTU/HR per burner.

NOTE: Factory installed orifices are calculated and sized based on a Natural Gas heating value of 1075 BTU/cu. ft. and an elevation of 0 - 3000 ft.

Energy Value (BTU/cu. ft.)	Elevation (ft.)							
	0 - 1999	2000 - 2999	3000 - 3999	4000 - 4999	5000 - 5999	6000 - 6999	7000 - 7999	8000 - 8999
850	62-22175-38	62-22175-39	62-22175-40	62-22175-41	62-22175-41	62-22175-42	62-22175-42	62-22175-43
900	62-22175-40	62-22175-41	62-22175-42	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-44
975	62-22175-41	62-22175-42	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-44	62-22175-44
1075	62-22175-42	62-22175-42	62-22175-43	62-22175-43	62-22175-43	62-22175-44	62-22175-44	62-22175-45
1170	62-22175-43	62-22175-44	62-22175-44	62-22175-44	62-22175-45	62-22175-45	62-22175-46	62-22175-47

80% GAS FURNACE - ORIFICE SELECTION CHART - LP

CAUTION: Selection of the correct LP Orifice requires the altitude of the specific installation (ft.).


For detailed information and instructions for Orifice selection, see the Gas Furnace LP Conversion Kit Index 92-21519-59 and the latest edition of the National Fuel Gas Code Handbook (NFG), or the National Standard of Canada, Natural Gas and Propane Installation Code, CAN B149.1.

CAUTION: This information is provided for replacement purposes only. Conversion to LP or for operation at High Altitude should be done using the kit(s) specified on the product specification sheet for the unit.


NOTE: This Orifice sizing chart is based on 25,000 BTU/HR per burner. Also, the chart is developed using the specified pressure setting of 10 in. water column instead of the 11.0 in water column used by the NFG and CANB149.1.

NOTE: Orifices supplied in the LP Conversion Kit are calculated and sized based on an altitude of 0 - 4000 ft.


Elevation (ft.)	Orifice							
0 - 2000	62-22175-54							
2001 - 3000	62-22175-54							
3001 - 4000	62-22175-54							
4001 - 5000	62-22175-54							
5001 - 6000	62-22175-54							
6001 - 7000	62-22175-54							
7001 - 8000	62-22175-55							
8001 - 9000	62-22175-55							
9001 - 10000	62-22175-55							

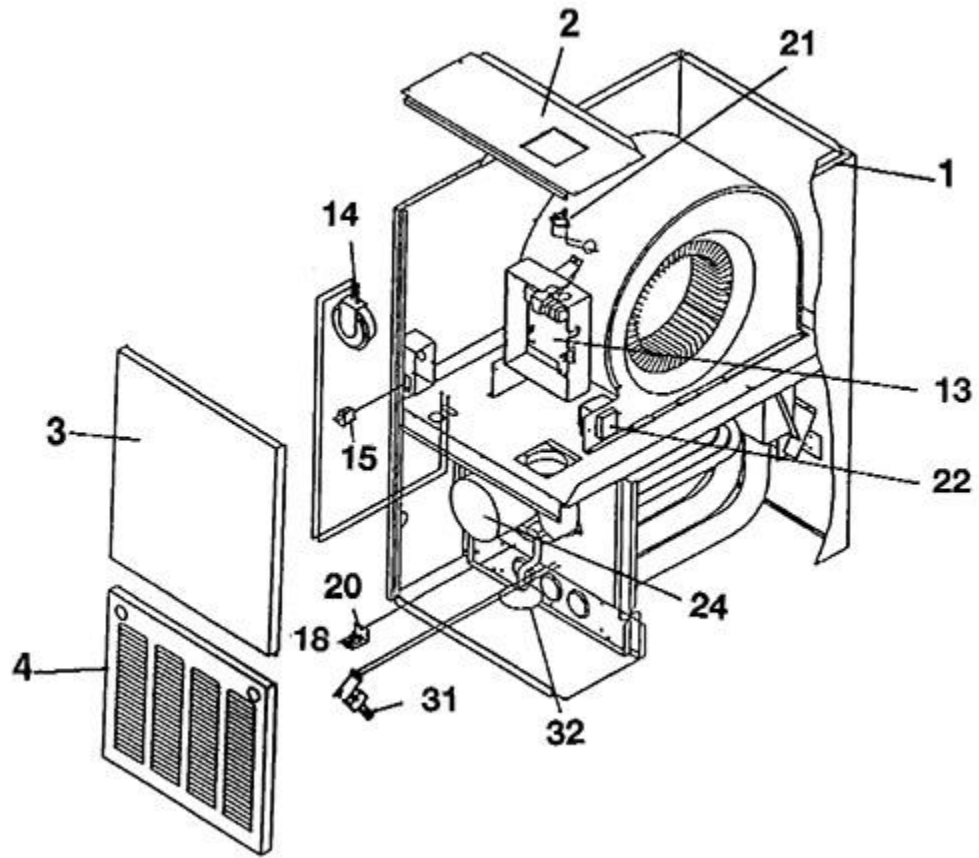


Exploded View

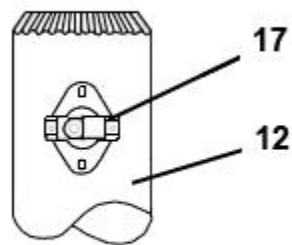

Vent Pressure Detector

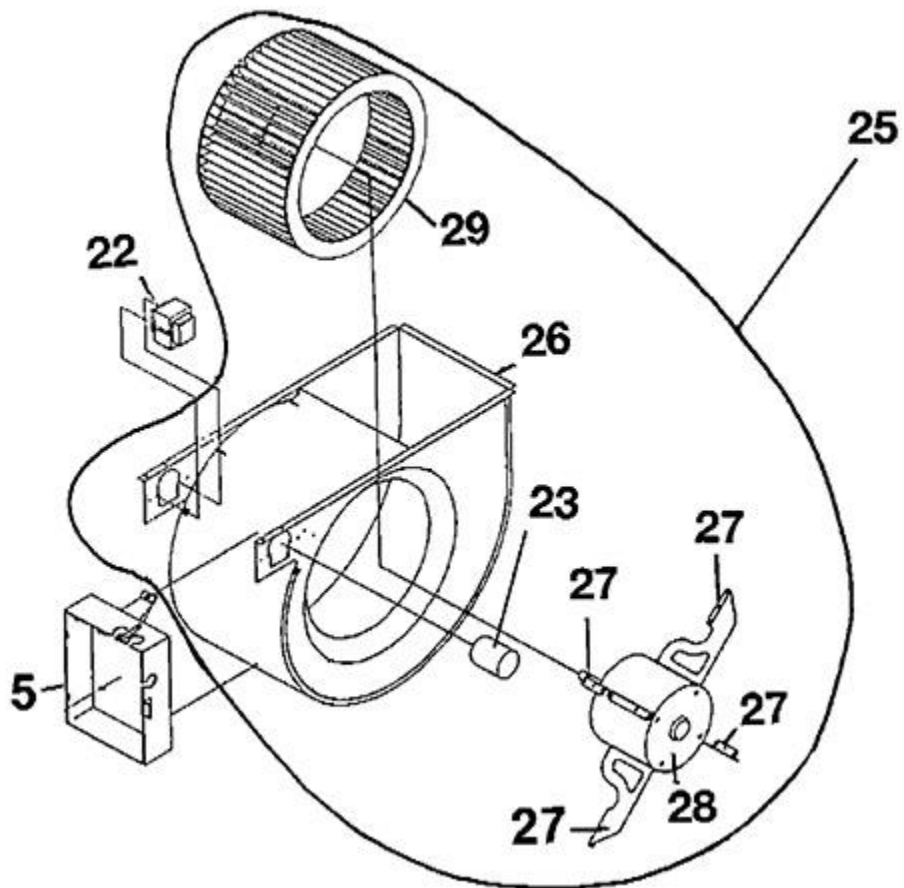

Blower Assembly

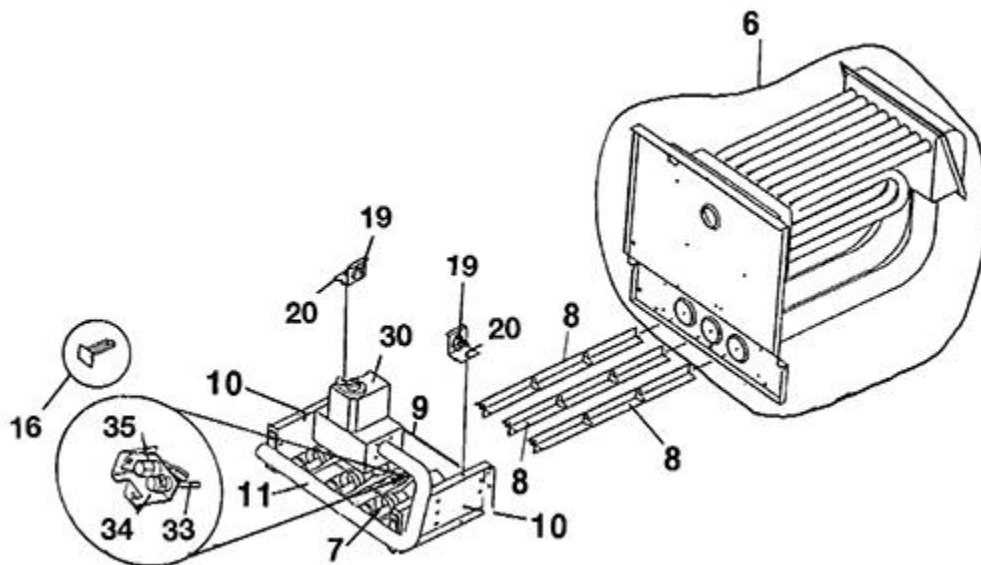

Heat Exchanger Assembly

NOTES

Stk It is recommended that stock be maintained for this part.

N/A Not Applicable

- 1 In February 1993, Production discontinued the use of the Vent Pressure Detector on the Canadian models. This change eliminated the Vent Pressure Detector Collar, Control and Jumper Plug. At this time, production stopped using the Canadian Model Top Plate which included a hole for the Jumper Plug, and went to the standard U.S. Model Top Plate.
- 2 Induced Draft Blowers were re-designed after Date Code F2192 to no longer include the mounting molding for the Vent Safety Switch. The Vent Safety Switch is not required on replacement induced draft blower motors. Remove the wiring flag connectors and connect the wires together.
- 3 Order Gas Valve for Natural Gas along with LP Conversion Kit. (If the original valve has been replaced, order the spring kit for the replacement valve.)
- 4 62-22864-82 is a Robertshaw Pilot Assembly Field Service Kit and is designed for use in replacing the Honeywell pilot assembly 62-22834-01. This kit includes: Robertshaw Pilot, Pilot Bracket And Shield, Pilot Tubing, Thermocouple, Ferrule, LP Gas Pilot Orifice. Verify pilot vendor before using the parts list to order replacement parts.
- 5 Production utilized either Honeywell or Robertshaw pilots, this kit includes both orifices.

DISCLAIMER: This document is intended to provide general replacement parts information to aid qualified service personnel in the repair of these models. The complete Model and Serial Number of the unit under repair should be specified when selecting and ordering replacement parts. Specifications and illustrations are subject to change without notice. Document 92-42800-RGLG supersedes all previous parts lists for these models. See <http://www.rheempartslists.net/92-42800-RGLG> for the latest revision of this document. The manufacturer assumes no obligation for errors or omissions. Service personnel must verify the proper and safe operation of equipment after the replacement of any original components.