

PARTS LIST

BY:
CHK'D:


SID



FINISH:
DATE:

AS SPECIFIED
10-23-01

814-VB

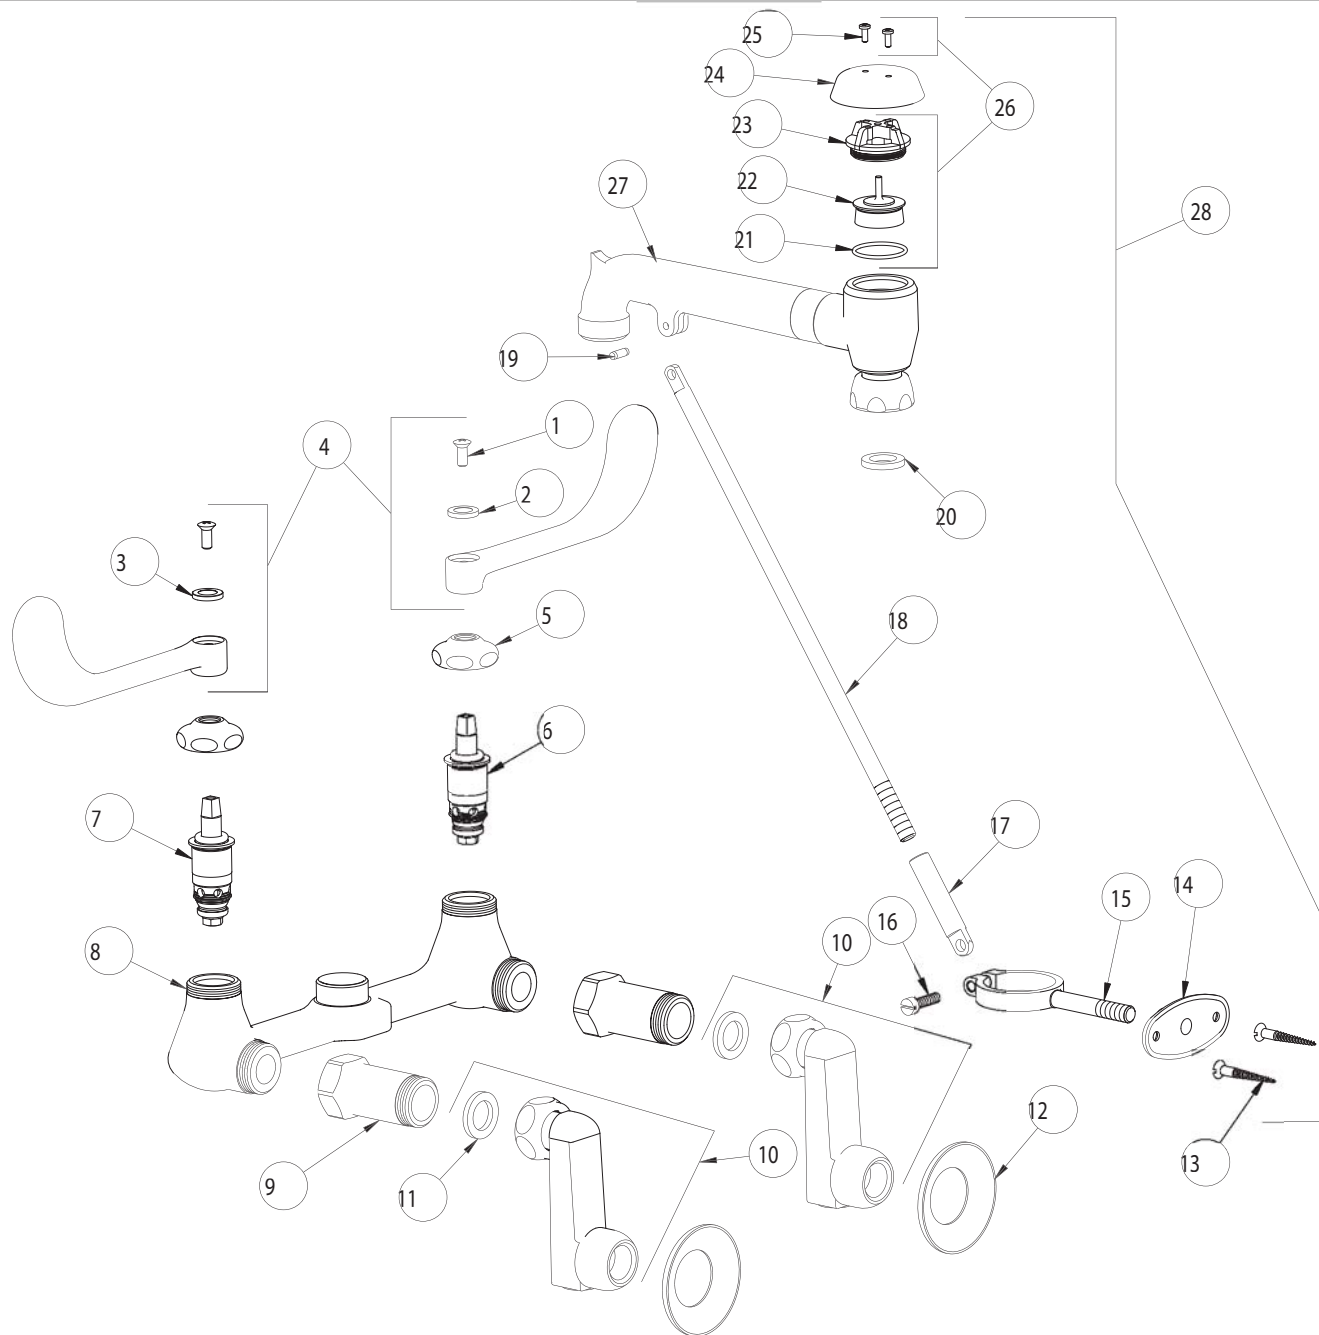

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	420-010	SCREW	16	173-012	SCREW
2	633-023	INDEX BUTTON (RED)	17	173-026	SLEEVE
3	633-123	INDEX BUTTON (BLUE)	18	175-002	BRACE ROD
4	319PR	WRISTBLADE HANDLE ASSEMBLY	19	50-007	PIN
5	1-214	CAP	20	340-004	CELCON WASHER
6	1-100XT	QUATURN UNIT (LH)	21	80-007	O-RING
7	1-099XT	QUATURN UNIT (RH)	22	892-032K	VACUUM BREAKER DISC ASSEMBLY
8	-----	VALVE BODY (NOT SOLD SEPARATELY)	23	892-202	VACUUM BREAKER SEAT
9	444-103	EXTENSION	24	892-154	VACUUM BREAKER COVER
10	R	SUPPLY ARM	25	333-321	VACUUM BREAKER TORX SCREW
11	1-011	WASHER	26	892-202K	VACUUM BREAKER REPAIR KIT
12	1-055	FLANGE	27	-----	SPOUT ASSEMBLY
13	173-006	FLAT HEAD WOOD SCREW	28	814SVB	V.B. SPOUT ASSEMBLY
14	173-109	FLANGE			
15	173-010	PIPE SUPPORT			