

HYDROTEK INTERNATIONAL, INC

957 N.Pennsylvania Avenue, Winter Park, Florida 32789 800-922-9883 Fax: 407-647-0471


INSTALLATION INSTRUCTIONS

Hydrotek Model HB8RFKC Retrofit Flush Valve

1. Turn off water supply at stop valve.
2. Remove existing flush valve body from its angle stop and flush tube connections.
3. Attach new Hydrotek Retrofit Flush Valve to angle stop and flush tube connections.
4. Using the provided allen wrench, remove the (3) vandal resistant set screws located on the side of the flush valve cap. Lift and remove flush valve cap from flush valve body.
5. Lift out battery holders, install batteries as indicated and reinstall battery holders.
6. Turn on water supply at angle stop. Flush unit using manual override button.
7. Operate flush valve electronically by standing in front of sensor for at least 4 seconds and then move out of range. Flush valve should activate one time flushing cycle operation.
8. If flush valve does not operate properly, please call Hydrotek at 800-922-9883 to technical assistance.

HYDROTEK Model HB8RFKC

- (1) Flush Valve Cap
- (2) Battery Holder
- (3) Cap Set Screws
- (4) AA Batteries
- (5) Sensor
- (6) Manual Flush Button
- (7) Angle Stop Connection
- (8) Vacuum Breaker/Flush Tube Connection
- (9) Body

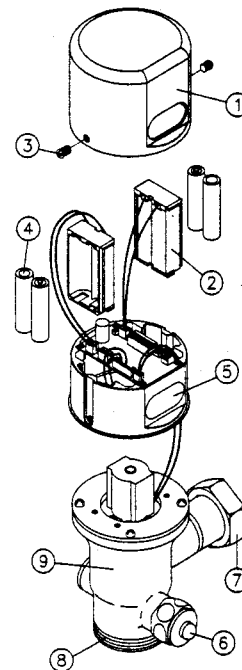

0090H084

NOTE: DO NOT USE PIPE DOPE. OR, WARRANTY VOIDED.