



NO.	DESCRIPTION	PART NO.
1	Body	H8-01D-0301E
2	O-Ring(H017)	HC-014-02
3	O-Ring(H007) *2	HC-014-31
4	Back Cover	H8-01D-0404
5	Seat	H8-01B-0407
6	Seat Rubber *2	H8-01-0408
7	Button Axle	H8-01B-0401D
8	O-Ring(H007)	HC-014-31A
9	Axle Cap	H8-01B-0403A
10	Spring	HC-003-08
11	Push Button	H8-01D-0406A
12	Push Button Nut	H8-01D-0402C
13	Lock Nut	H8-03D-04C
14	Retainer Ring	H8-03-11
15	O-Ring(H122)	HC-014-12A
16	Nipple	H8-03D-01C
17	O-Ring(H123)	HC-014-21
38	Guide Pin	H8-01B-0106F
39	Rubber Seal	H8-01-0104C
40	Metal Bushing	H8-01B-0110
41	Filter Seat	H8-01B-0103D
42	Filter Screen	H8-01-0102A
43	O-Ring(H013) *2	HC-014-03
44	Rubber	H8-01-0108A
45	Control Disc Body	H8-01K-0101E
46	Axis Rubber	H8-01-0408
47	Washer	H8-01-0111
48	Control Disc Spring	HC-003-03
49	O-Ring(H035)	HC-014-19
50	O-Ring(H040)	HC-014-67
51	Valve Seat	B8-02B-01E
52	Screw *6	HC-013-04
53	Rubber Gasket	HB-05-05
54	Plastic Seat INSERT	B8-02-04
55	Coil	HB-04B-E
56	Gasket	B86-01-04
57	Screw and Washer *4	HC-013-35A
58	Sensor Eye & Cable	PC-006-29
59	O-Ring(H118) *2	HC-014-16
60	Seal	B8-10-02
61	Sensor Mask	PC-004-31A
62	Plastic Ring	B8-10-01B
63	P.C.B	PC-001B-45E
64	Screw *4	HC-013-63
65	Alkaline Battery *4	HB-09-04A
66	Battery Holder	HB-09-03H
67	Battery Holder	HB-09-03G
68	Screw *2	HC-013-62
69	Cover	B8-03D-01C
70	O-Ring(H018)	HC-014-09