

Accessories

WARNING

To reduce the risk of serious injury, only use accessories specifically designed and recommended for use with the SuperFreeze Pipe Freezing Units such as those listed below. Other Accessories suitable for use with other tools may be hazardous when used with the Pipe Freezing Units.

Catalog No.	Description
For SF-2500:	
69712	SF-2500R 3/4" CTS Bushings (set of 2)
70652	SF-2500R 1 1/4" CTS Bushings (set of 2)
69717	SF-2500R 2" CTS Bushings (set of 2)
68857	SF-2500R 1/2" End Adapters (set of 2)
68862	SF-2500R 3/4" CTS End Adapters (set of 2)
68837	SF-2500R 22 mm End Adapters (set of 2)
72427	SF-2500R 28 mm End Adapters (set of 2)
72422	Set of 2 End Adapters 3/4" Fe (28 mm)
66986	Set of 2 End Adapters 12 mm to 16 mm
65976	Set of 2 End Adapters 3/8" Fe (18 mm), 1/2" Fe (22 mm)
For SF-2300:	
42838	12mm Bushings (set of 2)
42853	15mm Bushings (set of 2)
42843	22mm Bushings (set of 2)
42833	35mm Bushings (set of 2)
For SF-2500 and SF-2300:	
65942	Quick Grip Clamp
69707	Velcro Straps (set of 2)
74946	RIDGID Freeze Gel
60776	Spray Bottle, 8 oz. (0.25 liter)

Further information on accessories specific to the tool can be found in the RIDGID Catalog and online at www.RIDGID.com or www.RIDGID.eu.

Machine Storage

The RIDGID SuperFreeze Pipe Freezing Units must be stored in a dry secure, locked area, out of the reach of children and people unfamiliar with the Units.

Wipe frost/water from the fully thawed freeze heads and lines. Coil the hose in the adjacent compartment. Do not cross the hoses. The aluminum freeze heads should be protected from impact, sharp objects and rough handling.

NOTICE Do not store the pipe freezing unit in a vehicle. Excessive vibration and shock can damage the unit. Firmly secure the unit when transporting.

Service and Repair

WARNING

Improper service or repair can make the SuperFreeze Pipe Freezing Units unsafe to operate.

RIDGID SuperFreeze Pipe Freezing units contain refrigerant which requires certified service people. Service and repair of the SuperFreeze Pipe Freezing Units must be performed by a RIDGID Independent Authorized Service Center.

For information on your nearest RIDGID® Independent Service Center or any service or repair questions:

- Contact your local RIDGID distributor.
- Visit www.RIDGID.com or www.RIDGID.eu to find your local RIDGID contact point.
- Contact Ridge Tool Technical Service Department at rtctechservices@emerson.com or in the U.S. and Canada call (800) 519-3456

Disposal

Parts of the RIDGID SuperFreeze Pipe Freezing Units contain valuable materials and can be recycled. There are companies that specialize in recycling that may be found locally. Dispose of the components in compliance with all applicable regulations. Contact your local waste management authority for more information.



For EC Countries: Do not dispose of electrical equipment with household waste!

According to the European Guideline 2002/96/EC for Waste Electrical and Electronic Equipment and its implementation into national legislation, electrical equipment that is no longer usable must be collected separately and disposed of in an environmentally correct manner.