

SCOT® S-60 Series

LL-1	Control spindle
LL-1A	Control cartridge
LL-1B	Control cartridge for quick-closing
LL-2A	Cycle spindle assembly
LL-3N	Upper housing
LL-4	Piston washer screw
LL-6	Limit stop retainer nut
LL-8	Cycle spindle guide
LL-11	Piston cylinder
LL-12	Piston
LL-13	Inlet seat
LL-16	Shut-off seat
LL-22N	Limit stop washer (fixed)
LL-23N	Limit stop washer (adjustable)
LL-24	Control rod
LL-27	Handle set screw
LL-28	Cycle time washers
LL-31	Retaining ring
LL-32	Piston spring
LL-33	Inlet seat springs (2)
LL-35	Thrust washer
LL-37	Shut-off washer
LL-42	Inlet seat o-rings (2)
LL-44	Spindle guide large o-ring
LL-45	Shut-off seat o-ring
LL-46	Control spindle small o-ring
LL-47	Control spindle large o-ring
LL-48	Upper housing o-rings (3)
LL-49	Piston o-ring
LL-71B	In-line check/screen assembly (2)
LL-75	Spindle guide huva cup
LL-76	Huva cup retainer
LL-104	Handle
LL-105	Shell
LL-106	Base plate gasket
LL-107	Supply housing
LN-12	Anchor stud
LN-100	Aerator (vandal resistant 0.5 gpm)
LN-101	Aerator (vandal resistant)
LT-4A	Piston assembly
SPF-KIT	Mounting Kit
TT-36	Undercover plate screws (2)


Tools required for disassembly

Standard tools required:

Adjustable or 11/16" and 3/4" open end wrench, small phillips screwdriver, pliers, 3/4" deep socket

Repair Kit LL consists of:

LL-4, LL-8, LL-13, LL-24, LL-31, LL-32, LL-33, LL-35, LL-37, LL-42, LL-43, LL-44, LL-45, LL-46, LL-47, LL-48, LL-49, LL-73, LL-75, LL-76.

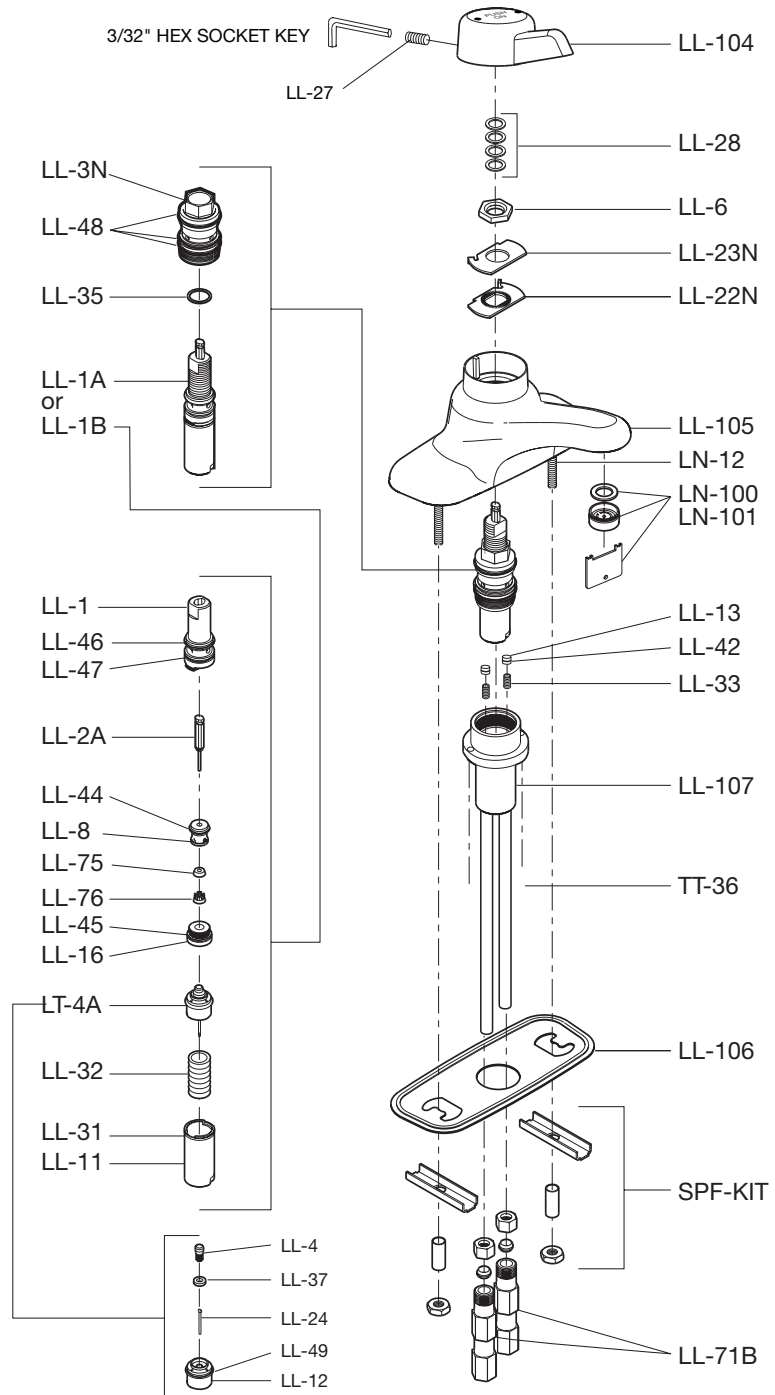

Metering Faucet S-61 Series

LL-1	Control spindle
LL-1A	Control cartridge
LL-1B	Control cartridge for quick-closing
LL-2A	Cycle spindle assembly
LL-3N	Upper housing
LL-4	Piston washer screw
LL-8	Cycle spindle guide
LL-11	Piston cylinder
LL-12	Piston
LL-16	Shut-off seat
LL-24	Control rod
LL-27	Handle set screw
LL-28	Cycle time washers
LL-31	Retaining ring
LL-32	Piston spring
LL-35	Thrust washer
LL-37	Shut-off washer
LL-44	Spindle guide large o-ring
LL-45	Shut-off seat o-ring
LL-46	Control spindle small o-ring
LL-47	Control spindle large o-ring
LL-48	Upper housing o-rings (3)
LL-49	Piston o-ring
LL-75	Spindle guide huva cup
LL-76	Huva cup retainer
LL-105	Shell
LL-106	Base plate gasket
LN-12	Anchor stud
LN-100	Aerator (vandal resistant 0.5 gpm)
LN-101	Aerator (vandal resistant)
LT-4A	Piston assembly
LT-71B	In-line check/screen assembly
LT-100	Handle
LT-108	Supply housing
SPF-KIT	Mounting Kit
TT-36	Undercover plate screws (2)

Tools required for disassembly

Standard tools required:

Adjustable or 11/16" and 3/4" open end wrench,
small phillips screwdriver, pliers, 3/4" deep
socket

Repair Kit LL consists of:

LL-4, LL-8, LL-13, LL-24, LL-31, LL-32, LL-33,
LL-35, LL-37, LL-42, LL-43, LL-44, LL-45,
LL-46, LL-47, LL-48, LL-49, LL-73, LL-75,
LL-76.

