District St. Market

SINCE 1896

Round It® Straightener/Rerounder Instructions

Applies to: 08226, 08227, 08228

RCR3/4 #08226 RCR1 #08227 RCR341 #08228

Use only with "K" Copper


The tool straightens and rounds anywhere along the length of Type K copper tubing. Work hardening and age hardening of copper can degrade the performance of this tool. The degree of initial out-of-roundness of tube can also degrade the tool's performance. Results may vary due to the above pre-existing conditions.

Rerounding

- Place the tool over the copper tube and push the handles together. Then, release.
- 2. Rotate the tool 90° and push the handles together. Then, release.
- 3. Repeat as needed.

Adjusting the tool

- 1. Loosen the Lock Screw.
- 2. Turn the Adjusting Screw clockwise to close the jaws. (Turn counterclockwise to open the jaws.)
- 3. Tighten the Lock Screw. (Over tightening the Lock Screw will cause the handle to break in service.)

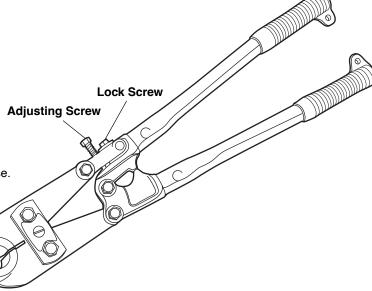

Reed Manufacturing 1425 West 8th St. Erie, PA 16502 USA



Phone: 800-666-3691 or +1-814-452-3691 reedsales@reedmfgco.com www.reedmfgco.com



Round It® Straightener/Rerounder Instructions

Applies to: 08226, 08227, 08228 RCR3/4 #08226 RCR1 #08227 RCR341 #08228

Use only with "K" Copper

The tool straightens and rounds anywhere along the length of Type K copper tubing. Work hardening and age hardening of copper can degrade the performance of this tool. The degree of initial out-of-roundness of tube can also degrade the tool's performance. Results may vary due to the above pre-existing conditions.

Rerounding

- Place the tool over the copper tube and push the handles together. Then, release.
- 2. Rotate the tool 90° and push the handles together. Then, release.
- 3. Repeat as needed.

Adjusting the tool

- 1. Loosen the Lock Screw.
- 2. Turn the Adjusting Screw clockwise to close the jaws. (Turn counterclockwise to open the jaws.)
- Tighten the Lock Screw. (Over tightening the Lock Screw will cause the handle to break in service.)

