

PC-1375 Plastic Pipe and Tubing Cutter Blade Change Instructions

WARNING

- Always wear safety goggles.
- Blade is sharp. Handle with care.

Blade Removal

1. Unlatch the handles so that they are fully open.
2. Remove retaining ring from the blade pin and remove the blade pin
3. Lay the cutter on a flat surface with the "PC-1375" logo facing up and remove the screws.



Figure 1

4. Remove the "PC-1375" half of the cutter handle.
5. Remove the blade.



Figure 2 – Blade Removal

Blade Installation

1. Place new blade into cutter so that the roller enters the blade slot.

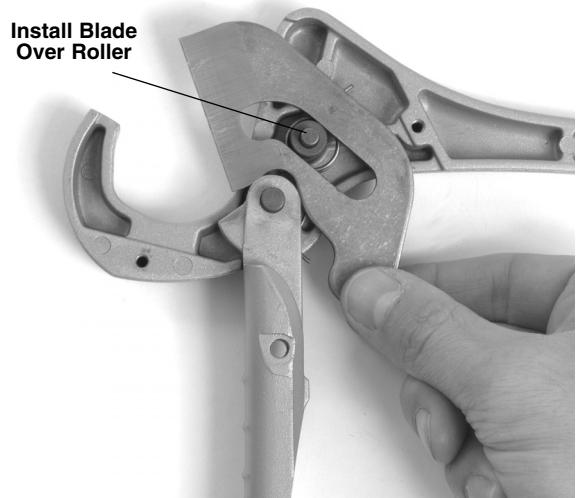


Figure 3

2. Reinstall "PC-1375" half of the handle.
3. Reinstall and tighten the three mounting screws.
4. Line up the lower handle hole and blade hole. Reinstall the blade pin and the retaining ring.

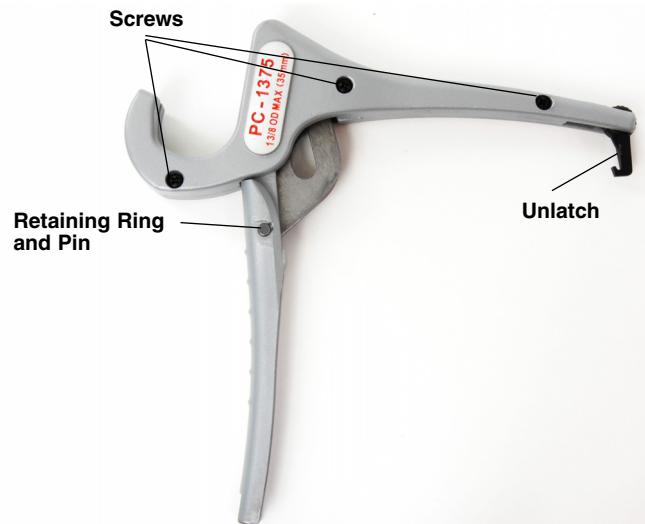


Figure 4