
Controls

Throughout this manual, features and appearance may vary from your model.

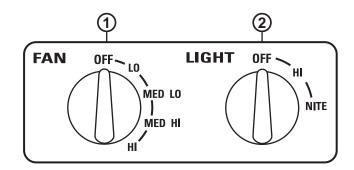

- 1. FAN Control: Turn the FAN speed control to LO, MED LO, MED HI or HI, as needed. Continuous use of the fan system while cooking helps keep the kitchen comfortable and less humid. It also reduces cooking odors and soiling moisture that create a frequent need for cleaning. NOTE: When the fan is operating on the LO setting, it will be very quiet. Always make sure that the fan is turned OFF when you are finished in the kitchen.
- LIGHT Control: Turn the LIGHT control to HI for bright light while cooking. Turn to NITE for use as a night light.

49-80520-9

6

Filters

Be sure the circuit breaker is off and all surfaces are cool before cleaning or servicing any part of the vent hood.

Reusable Metal Grease Filters

The hood has 2 metal reusable grease filters.

The metal filters trap grease released by foods on the cooktop. They also help prevent flaming foods on the cooktop from damaging the inside of the hood.

For this reason, the filters must **ALWAYS** be in place when the hood is used. The grease filters should be cleaned once a month, or as needed.

To clean the grease filters, soak them and then swish them around in hot water and detergent. Don't use ammonia or ammonia products because they will darken the metal. Do not use abrasives or oven cleaners. Light brushing can be used to remove embedded dirt. Rinse, shake and let them dry before replacing.

To remove:

Grasp the filter handle and pull it up, forward and out.

To replace:

- 1. Hold the filter at the bottom with the handle.
- 2. Place the top end of the filter against the inside front of the hood.
- Slide it up until it stops and push the bottom end back until it snaps into place.



Surfaces

Stainless Steel Surfaces (on some models)

Do not use a steel wool pad; it will scratch the surface.

To clean the stainless steel surface, use warm sudsy water or a stainless steel cleaner or polish. Always wipe the surface in the direction of the brush line. Follow the cleaner instructions for cleaning the stainless steel surface. Cleaners with oxalic acid such as **Bar Keepers**

Friend Soft Cleanser™ will remove surface rust, tarnish, and small blemishes. To receive a \$2.00 coupon for a trial sample of Bar Keepers Friend Soft Cleanser™ follow the link below

Cleanser™ follow the link below or scan the QR Code.

www.barkeepersfriend.com/ge

direction of the brush lines with a damp soft sponge. To inquire about purchasing stainless steel appliance cleaner or polish, or to find the location of a dealer

nearest you, please call our toll-free number:

Use only a liquid cleanser free of grit and rub in the

National Parts Center 800.626.2002

GEApplianceParts.com



Painted Surfaces (on some models)

Do not use a steel wool pads or other abrasive cleaners; they will scratch the surface.

Clean grease-laden surfaces of the hood frequently. To clean the hood surface, use a hot, damp cloth with a mild detergent suitable for painted surfaces. About one tablespoon of ammonia may be added to the water. Use a clean, hot, damp cloth to remove soap. Dry with a dry, clean cloth.

NOTE: When cleaning, take care not to come in contact with filters and other surfaces.

ACAUTION

When cleaning the hood surfaces, be certain that you do not touch the light with moist hands or cloth. A warm or hot light may break if touched with a moist surface. Always let the light cool completely before cleaning around it.

49-80520-9

7

Lights

Be sure electrical power is off and all surfaces are cool before cleaning or servicing any part of the vent hood.

NOTE: The glass cover should be removed only when cold. Wearing latex gloves may offer a better grip.


Before replacing your light bulb, disconnect the electrical power to the hood at the main fuse or circuit breaker panel.

Be sure to let the light cover and bulb cool completely.

For your safety, do not touch a hot bulb with bare hands or a damp cloth.

To remove:

- Turn the glass cover counterclockwise until the glass cover clears the socket.
- Using gloves or a dry cloth, remove the bulb by pulling it straight out.

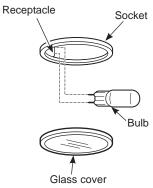


To replace:

- 1. Use a new 12-volt, 20-watt (maximum) Halogen bulb for a G-4 base.
- Using gloves or a dry cloth, remove the new bulb from its packaging. NOTE: Do not touch the new halogen bulb with bare fingers. Touching the bulb with bare fingers will significantly reduce the life of the bulb.
- 3. Push the bulb straight into the receptacle all the way.
- 4. Place the glass cover onto the socket and turn clockwise until secure. For improved lighting, clean

the glass cover frequently using a damp cloth. This should be done when the hood is completely cool.

5. Reconnect electrical power to the hood.

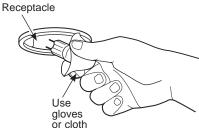

49-80520-9