# CanFab

# CANNON FABRICATION

182 GRANITE ST, SUITE 101 PHONE: (951) 278-1830

E-MAIL: canfab@canfab.com

CORONA, CA 92879


FAX: (951) 278-8444


WEB: www.canfab.com


FOR: CARRIER 48HJ\*/TF\*/TJ\*/50HJ/ TJ, 48TFF/TM/50HJQ/TFQ/TJQ/TM


PART NO: OAI GROUP


## OUTSIDE AIR INTAKE HOOD REPLACES CF4850HJ 04-070AI

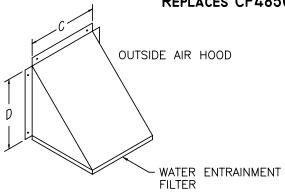


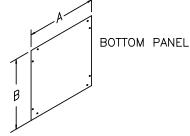

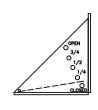

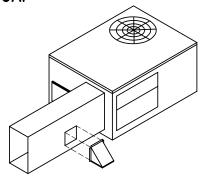

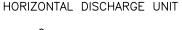

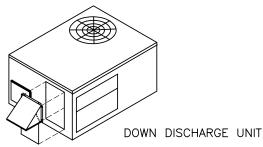

### **FEATURES**

- COLOR CO-ORDINATED PAINT FINISH.
- INSULATED BOTTOM PANEL.
- 3 GASKET MATERIAL.
- FOR HORIZONTAL UNIT INSTALLATIONS THE HOOD ASSEMBLY MUST BE ATTACHED OVER AN OPENING IN THE SIDE RETURN AIR DUCT.
- 5 WATER ENTRAINMENT FILTER.
- BAROMETRIC BACKDRAFT DAMPER OPENS WHEN FAN IS ENERGIZED.
- ALL SIZES OF OAI'S ARE APPROXIMATELY 40%.

### DOWN DISCHARGE APPLICATIONS

- 1 REMOVE THE HORIZONTAL RETURN DUCT COVER PANEL ON THE UNIT.
- 2 INSTALL THE GASKET MATERIAL PROVIDED TO THE BACK EDGES OF THE OUTSIDE AIR HOOD AND THE BOTTOM PANEL.
- 3 INSTALL THE BOTTOM PANEL ON THE UNIT FIRST, THEN INSTALL THE OUTSIDE AIR HOOD ABOVE THE PANEL USING THE SCREWS THAT ARE PROVIDED WITH THE HORIZONTAL DUCT COVER PANEL ON THE UNIT. THE HOLES ON THE OUTSIDE AIR HOOD AND BOTTOM PANEL
- WILL MATCH THE EXISTING HOLES ON THE UNIT.

  4 FASTEN THE OUTSIDE AIR HOOD TO THE BOTTOM PANEL WHERE THEY OVERLAP. USE THE 2- #10×1/2" TEK SCREWS PROVIDED.

  5 CAULK THE TOP CORNERS OF THE OUTSIDE AIR HOOD TO ASSURE A
- GOOD SEAL.
- 6 BAROMETRIC BACKDRAFT DAMPER OPENS WHEN FAN IS ENERGIZED.

### WATER ENTRAINMENT FILTER UNIT 04-07 OAL 10.875x12.5x.5 SIZE

### HORIZONTAL DISCHARGE APPLICATIONS

- 1 CUT DESIRED OPENING IN THE RETURN DUCT, INSTALL OUTSIDE AIR
  HOOD ONLY, DISCARD BOTTOM PANEL.
   2 ON MANUAL HOOD, ADJUST TO DESIRED OPENING AS DETAILED.

CANFAB PART #	UNIT SIZE	Α	В	С	D
1205-0A	48/50HJ*/TF*/TJ*/TM 004-007	11.875	11.25	10.75	15

PROJECT:			DATE:	
ENGINEER:			DISTRIBUTOR:	
DRAWING NUMBER:	1205CA.DWG	SW	11.07.02	

# CANNON FABRICATION

182 GRANITE ST, SUITE 101 PHONE: (951) 278-1830

E-MAIL: canfab@canfab.com

CORONA, CA 92879


FAX: (951) 278-8444


WEB: www.canfab.com

FOR: CARRIER 48HJ\*/TF\*/TJ\*/50HJ/ TJ, 48TFF/TM/50HJQ/TFQ/TJQ/TM


PART NO: OAI GROUP


# TWO POSITION OUTSIDE AIR INTAKE HOOD REPLACES CF4850HJ04-070AI2P

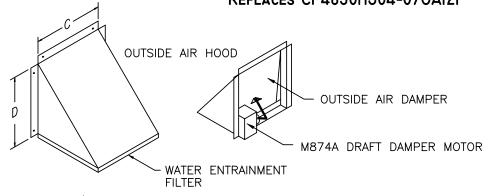


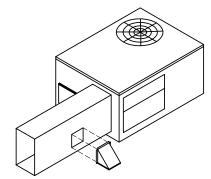



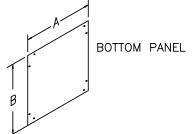

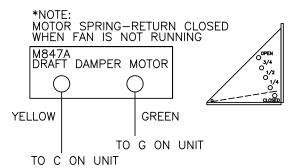

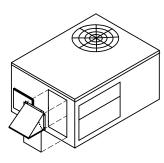

DOWN DISCHARGE UNIT

### **FEATURES**

- COLOR CO-ORDINATED PAINT FINISH.
- INSULATED BOTTOM PANEL.
- GASKET MATERIAL.
- FOR HORIZONTAL UNIT INSTALLATIONS THE HOOD ASSEMBLY MUST BE ATTACHED OVER AN OPENING IN THE SIDE RETURN AIR DUCT.
- WATER ENTRAINMENT FILTER.
- BAROMETRIC BACKDRAFT DAMPER OPENS WHEN FAN IS ENERGIZED.
- 7 ALL SIZES OF OAI's ARE APPROXIMATELY 40%.

### DOWN DISCHARGE APPLICATIONS

1 - REMOVE THE HORIZONTAL RETURN DUCT COVER PANEL ON THE UNIT. 2 - INSTALL THE GASKET MATERIAL PROVIDED TO THE BACK EDGES OF THE OUTSIDE AIR HOOD AND THE BOTTOM PANEL.

- INSTALL THE BOTTOM PANEL ON THE UNIT FIRST, THEN INSTALL THE OUTSIDE AIR HOOD ABOVE THE PANEL USING THE SCREWS THAT ARE PROVIDED WITH THE HORIZONTAL DUCT COVER PANEL ON THE UNIT. THE HOLES ON THE OUTSIDE AIR HOOD AND BOTTOM PANEL
- WILL MATCH THE EXISTING HOLES ON THE UNIT.

  4 FASTEN THE OUTSIDE AIR HOOD TO THE BOTTOM PANEL WHERE THEY OVERLAP. USE THE 2- #10×1/2" TEK SCREWS PROVIDED.
- 5 CAULK THE TOP CORNERS OF THE OUTSIDE AIR HOOD TO ASSURE A GOOD SEAL.
- 6 BAROMETRIC BACKDRAFT DAMPER OPENS WHEN FAN IS ENERGIZED.

### HORIZONTAL DISCHARGE APPLICATIONS

1 — CUT DESIRED OPENING IN THE RETURN DUCT, INSTALL OUTSIDE AIR HOOD ONLY, DISCARD BOTTOM PANEL.

	WATER ENTRAINMENT FILTER			
UNIT SIZE	04-07 OAI	10.875x12.5x.5		

CANFAB PART #	UNIT SIZE	Α	В	С	D
1205-OAM	48/50HJ*/TF*/TJ*/TM 004-007	11.875	11.25	10.75	15

PROJECT:		DATE:	
ENGINEER:		DISTRIBUTOR:	
DRAWING NUMBER: 1205CA.DWG	SW	11.07.02	