




INSTRUCTION SHEET

NUMBER
IS100-2.4A

Effective: October 1, 1983
Supersedes: IS100-2.4A
dated 4/1/83

AIR SCOOP MODEL NOS. 431-5, 432-5

Plant I.D. No. 001-914

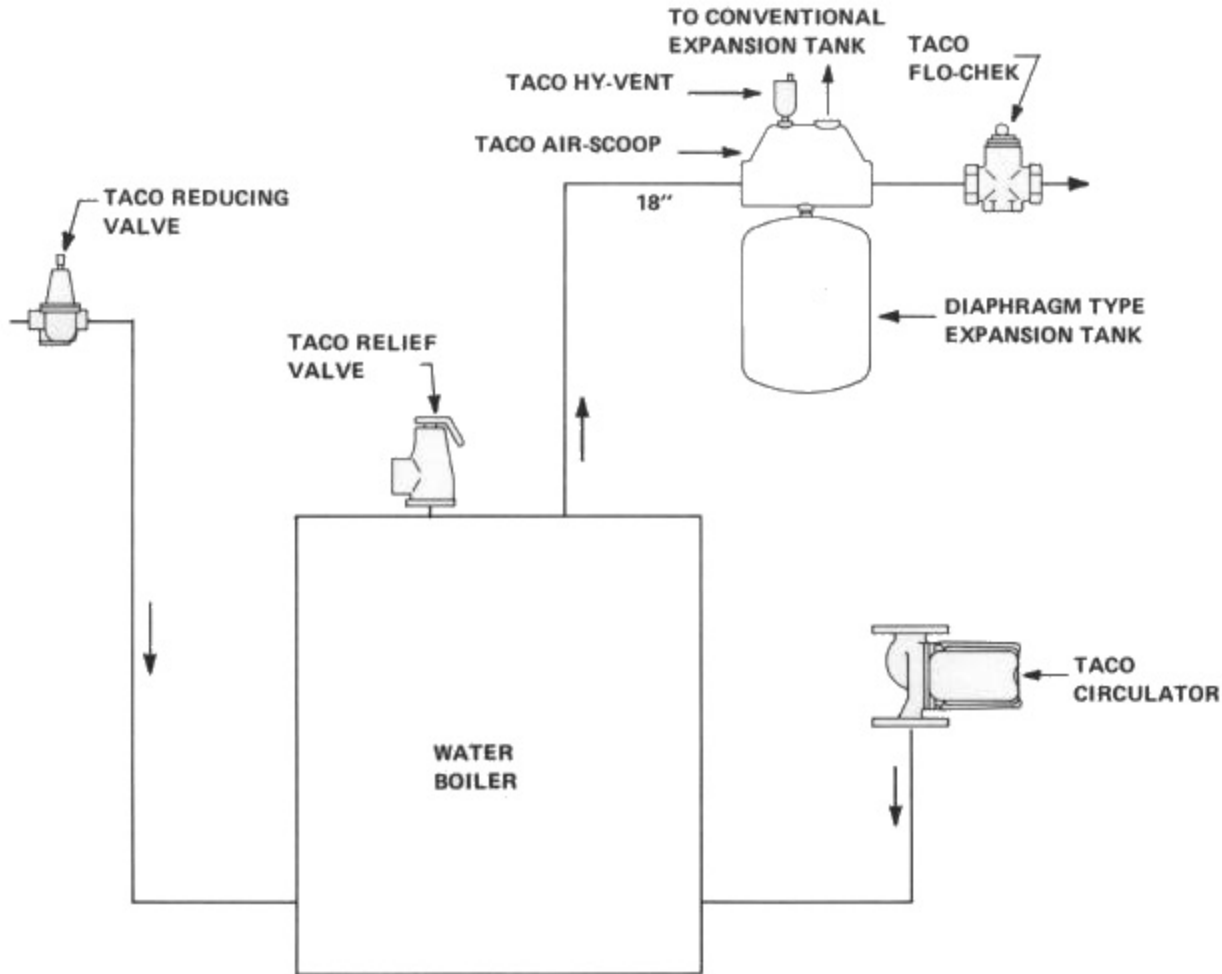

INSTRUCTIONS

Locate the Taco Air Scoop in the horizontal supply line. The tapped connection at the bottom of the Air Scoop is provided for connecting a Taco-Trol Expansion Tank.

The 1/8" tapped connection at the top of the Air Scoop is provided for installing a Taco Hy-Vent. The second tapped hole is provided for a pipe connection from an overhead plain steel expansion tank if one is used.

After the system is filled and purged or vented at high points, the Air Scoop will automatically separate any remaining air from the water pumped through it. The air is then automatically vented to the atmosphere or passes into an overhead expansion tank providing a quiet, air-free system.

Taco, Inc. 1160 Cranston Street, Cranston, Rhode Island 02920 Telephone: (401) 942-8000 Telex: 92-7627

Litho in U.S.A.

F 102-039

Taco (Canada) Limited 1310 Airco Blvd., Mississauga, Ontario L4W 1B2 Telephone: 416-625-2160 Telex: 06-981179

Copyright© 1983 TACO, INC.