

STEAMIST

Generator Pan Model: SM-DP

Generator Pan Installation

- Place the SM-DP generator pan on a flat surface suitable for the Steam Generator (Pan dimensions 24" x 11" x 2"H)
- 2. The generator pan pipe must be ran in a manner as to not obstruct any possible flow of water out of the pan.
- 3. The generator pan pipe must terminate over a suitable waste receptor or extended outside the building in an observable location. The termination point must be at least 6", but not more than 24" above ground level.
- 4. The plumbing installation must conform to all local and national codes.
- 5. The generator pan pipe must be run in a continuous downward slope to acheive adequate drainage. Termination of the drain line must allow complete drainage at all times, and not be affected by freezing temperatures.
- 6. See separate plumbing and auto drain installation manuals for complete connection details.

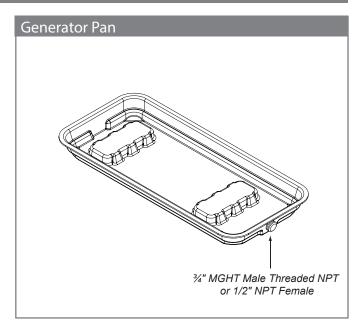

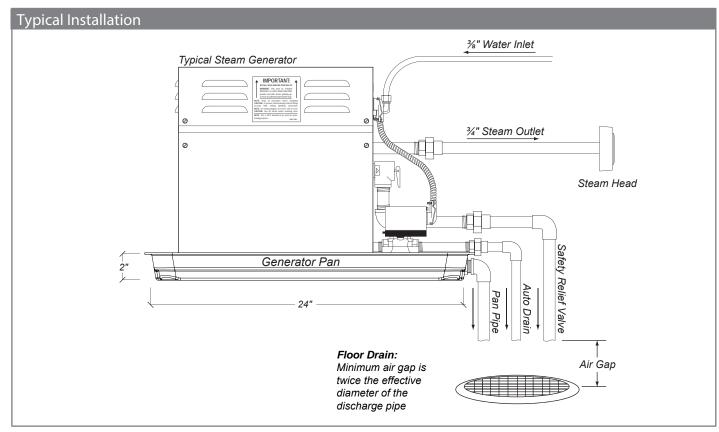

STEXMIST*

East Coast Office: 25 E. Union Ave., East Rutherford, NJ 07073 • Tel: 800-577-6478 • Fax: 201-933-0746

West Coast Office: Lancaster, CA 93534 • Tel: 800-355-6478 • Fax: 661-940-1617

01/14 Pub. No. 304-D