

# Manual Ratchet Threaders



## EXPOSED RATCHET THREADER SETS

All matched Threader/Sets include Die Heads, Ratchet Assembly, Ratchet Handle and Alloy Dies. All Threader Sets use same 12-R Dies in Die Head.

- Model 00-R: Capacity 1/8" - 1" without carrying case.
- Model 12-R: Capacity 1/8" - 2" with carrying case.

Catalog No.	Model No.	Description	Die Heads Include		Weight	
			in.	mm	lb.	kg
36345	00-R	NPT	1/2 - 1	12 - 25	10	4.5
36355			3/8 - 1	10 - 25	1 1/4	5.1
36375			1/8 - 1	3 - 25	13 3/4	6.2
36480	12-R	NPT	1/2 - 1 1/4	12 - 32	23 3/4	10.8
36475			1/2 - 2	12 - 50	34 3/4	15.8
36505			1/8 - 2	3 - 50	45 1/2	20.7
55207*			1/2 - 2	12 - 50	35 1/2	16.1
65175	00-R	BSPT	1/2 - 1	12 - 25	10	4.5
65255	12-R		1/2 - 2	12 - 50	34 3/4	15.8
65285			1/8 - 2	3 - 50	45 1/2	20.7
36510		NPSM	1/2 - 2	12 - 50	34 3/4	15.8

\*For plastic-coated pipe



Model 11-R

## ENCLOSED RATCHET THREADER SET

- All matched Threader/Sets include Die Heads, Ratchet Assembly, Ratchet Handle and Alloy Dies. All Threader Sets use same 12-R Dies in Die Head.
- No 11-R capacity: 1/8" - 1 1/4".

Catalog No.	Model No.	Description	Die Heads Include		Weight	
			in.	mm	lb.	kg
36390	11-R	NPT	1/2 - 1 1/4	12-32	16	7.3

## RATCHET & HANDLE ONLY

- Ratchet knob indicates forward and reverse.
- Die heads snap in from both sides and lock in place.



Catalog No.	Model No.	Description	Type of Ratchet
38540	00-RB & 00-R	Ratchet & Handle Only	Exposed
37777	11-R		Enclosed
38550	11-R		Enclosed
30118	12-R		Exposed
38535	0-R		Exposed



See page 4.12