 
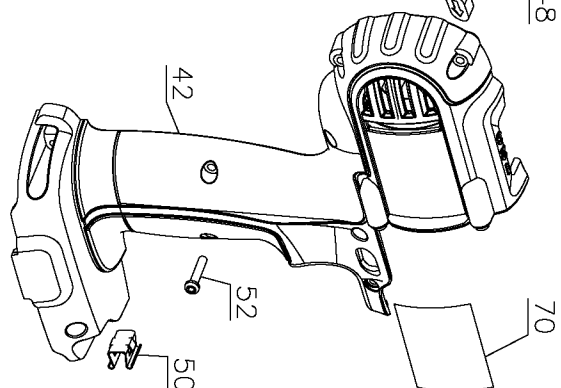 
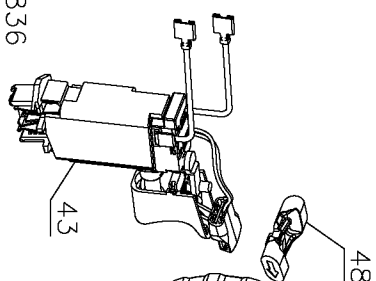 
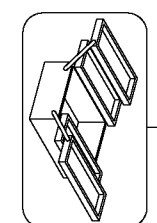 
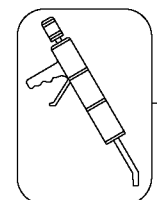 
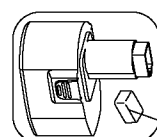 
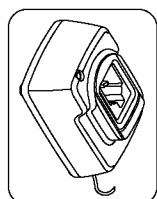 
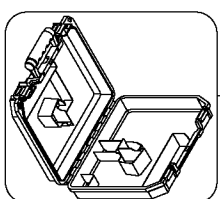 
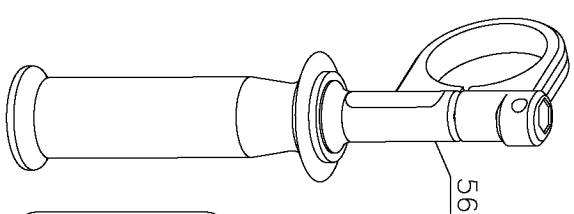 
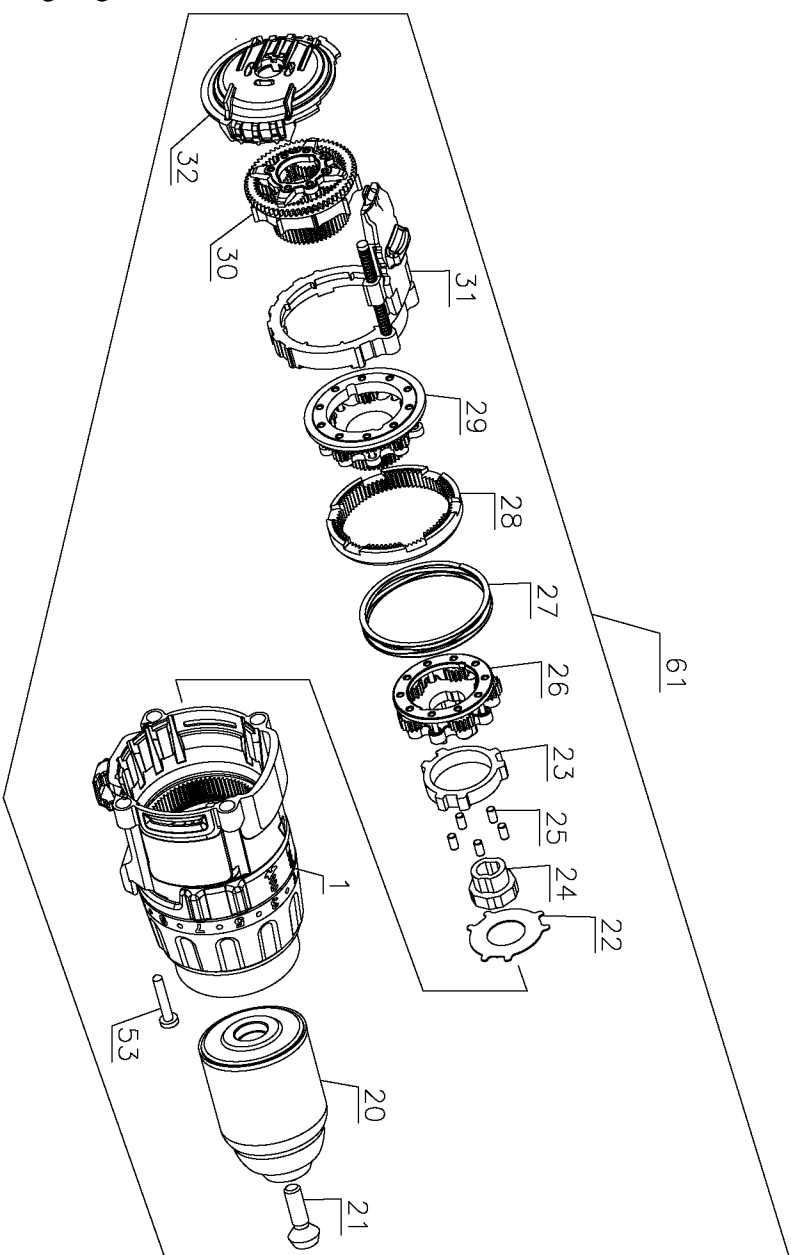 


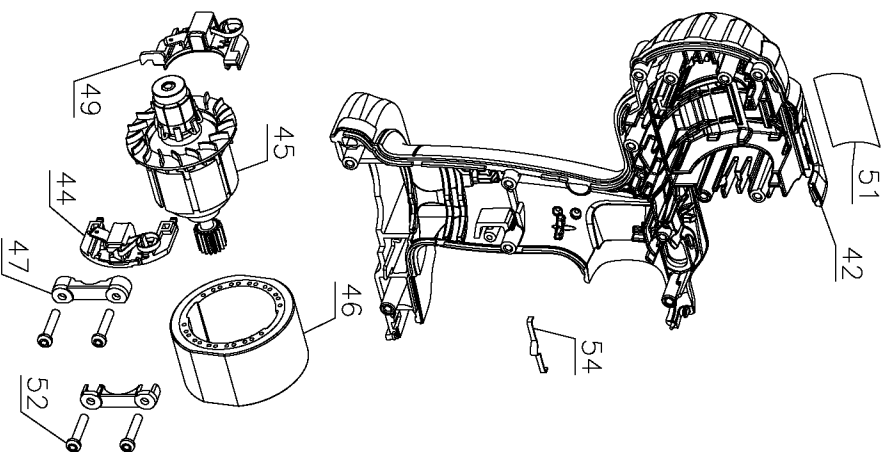

Parts List for DCD940KX Type 1

Item Number	Part Number	Description	Qty Required
1	N026314	GEARCASE ASSY	1
20	330075-91	KEYLESS CHUCK	1
21	605256-01	SCREW	1
22	652378-00	RETAINING PLATE	1
23	650470-00	LOCK RING	1
24	652379-00	ANVIL	1
25	654110-00	PIN	5
26	N017098SV	GEAR ASS'Y.	1
27	N038862	COMPRESSION SPRING	1
28	650444-00	RING GEAR	1
29	N017099SV	GEAR ASSY.	1
30	N030490SV	GEAR ASSY.	1
31	657453-00SV	SHIFTER ASSEMBLY	1
32	654927-00SV	BAFFLE ASSEMBLY	1
42	N014498SV	CLAMSHELL SET	1
43	N020621SV	SWITCH-V.S.R.	1
44	N031214	BRUSH BOX SET	1
45	N023147SV	ARMATURE ASSEMBLY	1
46	648124-00	MAGNET RING	1
47	N007948	BEARING CAP	2
48	N091392	F/R BUTTON	1
49	N031214	BRUSH BOX SET	1
50	148354-03	BIT CLIP	1
51	N028034	ID LABEL	1
52	682211-00	SCREW,TORX	13
53	330019-52	SCREW PLASTITE	4
54	N014681	DETENT SPRING	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCD940KX Type 1

Item Number	Part Number	Description	Qty Required
56	650421-00	SIDE HANDLE	1
61	000000-00	No Longer Available	1
61	N211232	GEARCASE ASSY	1
70	N037635	NAMEPLATE	1
800	N017298	GREASE	1
836	559662-99	MANDREL	1
836	596004-99	INSERT	1
836	233947-00	HOLDING FIXTURE	1
836	233804-40	CHUCK REMOVAL FIXTURE	1
861	N303239	KITBOX	1
866	389795-23	BATTERY PACK	1
866	DC9096	BATTERY PACK	2
867	645221-00	BATTERY CAP	1
871	388683-12	1 HOUR CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.