SF-2400/SF-2450 Faucets



			PART	'S I
			Item No	Co
				_
				03
	1		20	_
			28.	
				_
			3.	036
Î ³				036
		R		
	· · · · ·			036
	\		6.	036
			7.	03
			8.	03
				33
ery ery tery	\square			03
Bat 12 Bat	ų.			03
T			use th	e foll
J		2	NOT S	SHO
			_	03
			_	03
8	K	1	_	33 03
┝┎┷═╖		J	_	03
			_	03
				03
				03 03
			_	33
			4005	
				550 03
				03
			11B.	03
		y		
			12A.	03
12A 📢		14 ()	12B.	33
	13 🖵		12	03
				33
			— in Ite	em N
	0		in oc	Juc I
		U		
1		H		
		H		
		1		
	1.173			
	7 12A 12B			Image: Second

ltem No.	Code No.	Part No.	Description	
1.—	_	Pedestal Fa	ucet Assembly w/Outlet (Models SF-2400/SF-2450/	
2.	0362004	SFP-4	Mounting Hardware Kit, (Models SF-2100/SF-2150/ SF-2400/SF-2450) (pre-3/2010)	
2A.	_	SFP-44-A	Mounting Hardware Kit, (Models SF-2100/SF-2150/ SF-2400/SF-2450) (Post 3/2010	
	—	SFP-5	Screws and Anchors for Control Module	
3.	0362006	SFP-6	110 VAC/6 VDC Plug-In Adapter (US)	
4.	_	_	Batteries-AA size (4)	
5A.	0362040	SFP-40-A	Control Module with Adjustable Button (6 pin connector)	
5B.	0362008	SFP-8	Control Module (Old Style 4 pin connector)*	
6.	0362045	SFP-45-A	Inlet adapter – 1/2" NPSM to 3/8" Compression Connection (not supplied with most international models)	
7.	0362010	SFP-10	Flex Hose, Control Module to Spout	
8.	0362011	SFP-11	Trim Plate w/ Spacer (not supplied with most international models)	
9.	3365461	ETF-617-A	A 3/8" Bak-Chek® Tee Compression Fitting	
10A.	0362041	SFP-41-A	Sensor Assembly (6 pin connector)	
		SFP-34	Sensor Assembly (Old Style 4 pin connector)*	

following replacement parts: SFP-34 and SFP-8 Augi

IOWN SEPARATELY

—	0335029	EAF-51	0.35 gpm (1.3 Lpm) spray head
_	0335012	EAF-15	0.5 gpm (1.9 Lpm) vandal resistant spray head
_	3362000	SFP-1000	0.35 gpm (1.3 Lpm) vandal resistant spray head
—	0362013	SFP-13	0.5 gpm (1.9 Lpm) Spray head
_	0362023	SFP-23	2.2 gpm (8.3 Lpm) Aerator
_	0362024	SFP-24	2.2 gpm (8.3 Lpm) vandal resistant aerator
—	0362020	SFP-26	220 VAC/6 VDC Plug-In Adapter (ASIA)
_	0362025	SFP-25	220 VAC/6 VDC Plug-In Adapter (EURO)
—	0362026	SFP-20	220 VAC/6 VDC Plug-In Adapter (UK)
—	3362022	SFP-22	8" Trim Plate

ORIES

11.	0362035	SFP-35-A	100-240 VAC/6 VDC Gang Adapter Kit, includes 11A, 11B and 11C
11A.	0362016	SFP-36-A	100-240 VAC/6 VDC Plug-In Adapter
11B.	0362018	SFP-38	Cable Splitter, 51"/1300 mm (5 included in kit)
11C.	0362017	SFP-37	Cable Extension, 51"/1300 mm

PARTS

12A.	0362015	SFP-15	Strainer (located in water inlet of control module/for SFP-8 Module)	
12B.	3315028	EBF-1004-A Solenoid Filter Replacement Kit for current solenoid includes Filter Screen Assembly and 0-ring		
13.	0326045	MIX-135-A Below Deck Thermostatic Mixing Valve		
14.	3326009	MIX-60-A	Below Deck Mechanical Valve Mixing Valve	
		= Not shown in illu		

No. and Part No. column = Not sold separately

11B



SF-2800/SF-2850 Faucets

TROUBLESHOOTING GUIDE

1. Faucet delivers water in an uncontrolled manner.

A. Faucet is not working properly. Contact Sloan Technical Support.

2. Faucet DOES NOT deliver any water when Sensor is activated. INDICATOR: Solenoid valve produces an audible "CLICK."

A. Water supply stop(s) closed. Open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

INDICATOR: Solenoid valve DOES NOT produce an audible "CLICK."

- A. Batteries low (battery powered models). Replace batteries.
- B. Power failure (adapter powered models). Check power supply.
- 3. Faucet delivers only a slow flow or dribble when Sensor is activated.
 - A. Water supply stop(s) are partially closed. Completely open water supply stop(s).
 - B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.
 - C. Aerator is clogged. Remove, clean, and reinstall aerator. Replace aerator if required.
 - D. Faucet is not working properly. Contact Sloan Technical Support.
- 4. Faucet DOES NOT stop delivering water or continues to drip after user is no longer detected.

A. Faucet is not working properly. Contact Sloan Technical Support.

5. The water temperature is too hot or too cold on a faucet connected to hot and cold supply lines.

A. Supply Stops are not adjusted properly. Adjust Supply Stops.

CARE AND CLEANING INSTRUCTIONS

DO NOT USE abrasive or chemical cleaners (including chlorine bleach) to clean faucet that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, protect the faucet from any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).