• Limited Lifetime





HI-Flow Pressure Balance Concealed Bath Mixer With Diverter

ROHL Cisal Basth ROHL Country Bath Collection ROHL Perrin & Rowe Bath ROHL Modern Collection

RMV-2

FEATURES WARRANTY

Pressure balanced concealed bath and shower mixer rough

• Single lever, diaphragm cartridge

Body made from solid brass

• Shower flow: 6.8 GPM at 45 PSI

8.8 GPM at 60 PSI

• Tub flow: 6.9 GPM at 45 PSI

9 GPM at 60 PSI

• 1/2" male x 1/2" male service stops, included with valve

• From the center of supply to finish wall: min. 1 5/8", max 2 1/8"t 5.7/8"

5 7/8"

2 5/32"

5 1/8"

2 5/32"

5 1/8"

2 5/32"

5 7/8"

1 11/16"

2 3/32"


5 7/8"


1 15/8"


Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.



RMV-2 Installation Instructions Page 1

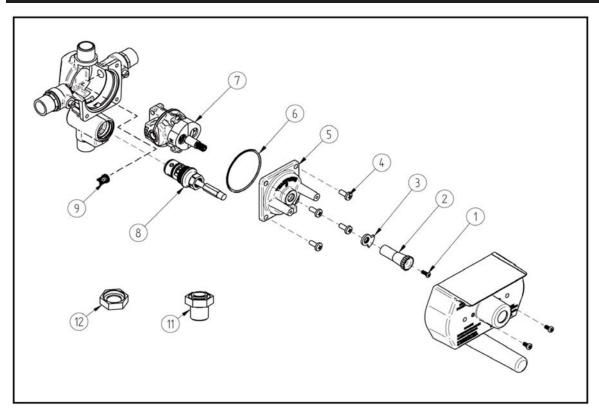

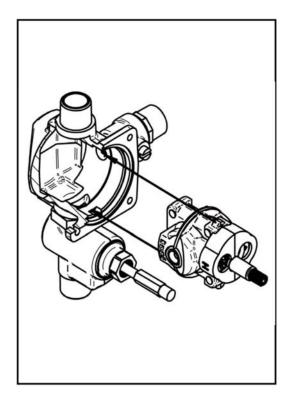

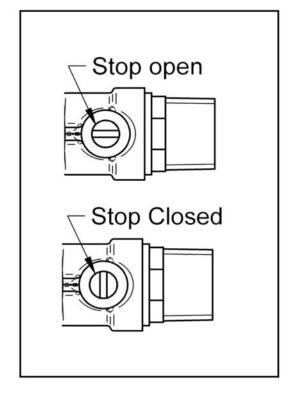



RMV-2 Installation Instructions Page 2

BEFORE YOU BEGIN

READ ALL DIRECTIONS PRIOR TO INSTALLATION. ANY ALTERATIONS MADE TO THE VALVE OR CARTRIDGE OR FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE DAMAGE OR IMPROPER INSTALLATION AND WILL NULLIFY THE WARRANTY AS WELL AS INCREASE THE RISK OF SCALDING.

- · Observe and adhere to all local plumbing codes.
- Pressure-balancing valves are designed for use with hot water supplied from pressurized storage heaters and cannot be used in conjunction with low-pressure storage heaters (displacement water heaters).
- Refer to the protective cover (mud guard) markings for proper installation depth. This cover <u>must</u> remain in place for plastering and/or tiling etc.
- If PEX (plastic) pipes are to be used, do not use PEX with a diameter of less than 3/4" between the valve and the
 tub spout (4-Port valves only). Smaller diameter pipes and fittings will cause stacking in the shower outlet.
- It is not necessary to remove the pressure-balancing cartridge from the valve during normal soldering of connections using propane-butane gas. DO NOT USE OXYGEN-ACETYLENE. When soldering connections, do not use excessive heat. Open the stop valves when soldering inlets.
- It is recommended that the pipes be flushed clean prior to installation, in order to avoid any problems later.
- Ensure that the stop ring is correctly installed per the instructions below, otherwise a user could potentially
 disengage the cartridge with minimal force to the external handle. This would cause the valve to fail and the user
 would be unable to turn the water on/off or control the temperature.

SPECIFICATIONS

Min. Operating pressure:

Max. Operating pressure:

Max. Burst pressure:

Max. Hot water temp.:

20 psi [140 KPa]

125 psi [860 KPa]

500 psi [3450 KPa]

180°F [80°C]

Flow rate in USGPM [I/min] @ 50 psi [345 KPa]:

3P 3-Port:	Tub		Shower	
	-	-	5.3	[20]
4P 4-Port :	6.8	[26]	5.3	[20]
ID Diverter (Automatic):	6.5	[25]	5.3	[20]
ID Diverter (Manual):	5.3	[20]	4.7	[18]


ROUGH-IN NOTES

When installing 4-Port (4P) and Diverter (ID) valves, please ensure that the fixed outlet is up, and the configurable outlet is down

Open the valve counterclockwise to verify the changes in outlet water temperature. The cartridge driver can be used to turn the cartridge stem.

To test pipe joints, and to inspect for any other possible leaks, pressurize both the hot and cold inlets **before** attaching the outer trim components.

For installations where the hot and cold water supplies are reversed, turn off the hot and cold water supplies and then simply take out the cartridge, rotate it 180° and re-insert as shown below.

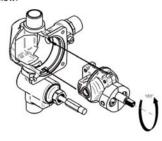


STOP RING INSTALLATION

Ensure that the stop ring (3) is correctly installed as follows:

- Rotate the cartridge stem (13) fully clockwise.
- Position the stop ring on the stem such that it rests against the stop post (14).

The stop ring must be correctly installed **before** the outer trim is installed.

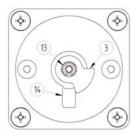

See the trim installation instructions included with the trim components to properly install the hot limit stop.

INSTALLATION PROBLEMS

If water continuously drips from the spout or showerhead and/or there is reduced water flow:

- . Turn off the water supplies.
- · Remove the cartridge.
- . Check for debris in the valve body
- Inspect o-rings for damage.
- Re-grease with silicone-based grease only.
- Re-install cartridge.

For additional troubleshooting help, please go to www.tempress.ca or contact Point of Purchase.

We reserve the right to change specifications without notice. Some valves may not appear exactly as shown. Valves are warranted to be free from manufacturing defects for a period of 18 months from the date of manufacture. PBV Cartridges are warranted to be free from manufacturing defects for a period of 10 years from the date of manufacture. Additional warrantees may apply. All warranty concerns must be directed through the original point of