

1 3/4" AND 1 1/8" NOZZLE INSERTS™

USER GUIDE

Item#: HMNI1.75, HMNI1.125

OVERVIEW

- Use the 2 1/2" Hose Monster® Flow Chart for determining the flow- rate.
- The 1 3/4" and 1 1/8" Nozzle Inserts™ are inserted in the 2 1/2" Hose Monsters® for obtaining flow-rates lower than 533 GPM.
 - The 1 3/4" FM Nozzle Inserts™ measures from 282-771 GPM.
 - The 1 1/8" FM Nozzle Inserts™ measures from 118-324 GPM.



ASSEMBLY

- 1) Lightly lubricate the outside of the Nozzle Insert™ with grease or petroleum jelly. (recommended)
- 2) Insert the Nozzle Insert™ into the inlet of the Hose Monster® seating it against the gasket ring. The small opening in the Nozzle Insert™ must be toward the pitot.
- 3) Slide the male hose coupling over the Nozzle Insert™ and thread it into the female coupling on the Hose Monster®.
- 4) Tighten the coupling.
- 5) Continue the setup using the 2 1/2" Hose Monster® instructions.
- 6) After the tests are complete, remove the Nozzle Insert™ from the Hose Monster®.

MAINTENANCE

- Store the Nozzle Insert™ in a manner to protect it from damage.
- Wipe dirt and debris off with a damp cloth after each use.
- Ensure the O-ring is present and not torn or damaged. Without the O-ring, there may be leakage. Replace as necessary.

