


Installation:

- Connect expansion tank to bottom FIP connection
- Connect supply feed to Tee pattern FIP connection
- Connect top FIP or MIP/SWT connection to system piping, or to Webstone Horizontal Air Separator


To service the expansion tank:

- Remove cap and attach hose
- Close expansion tank isolation valve
- Open drain valve
- Pressure in tank will drain contents - tank may be removed once empty

INSTALLATION

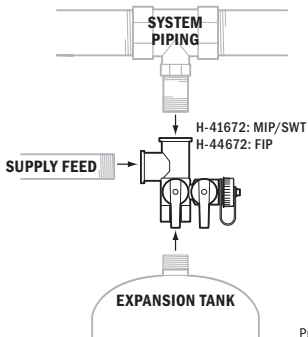

NORMAL OPERATION

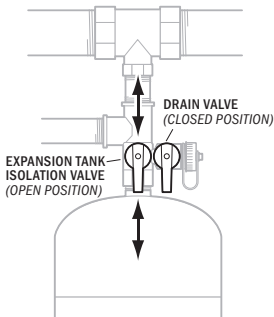

TANK SERVICE

