



**NOTE: Order parts by Catalog Number only.  
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	24483	Handle Pad	25	24548	Tube Seal
2	24488	Screw #4-20 x 1/2"	26	24683	SR-20 Product Decal
3	24418	Speaker Gasket	34803	34803	Scout Icon Ref. Label
4	24493	Speaker	27	24278	SR-20 Icon Ref. Label
5	24498	Speaker Adhesive Label	34813	34813	Scout Product Label
6	24503	Speaker Circuit Board	28	24553	Screw #4-20 x 3/8"
7	24508	Flat Washer	29	24558	SR-20 Display Window
8	24513	Cross Pin	34818	34818	Scout Display Window
9	21343	Keypad	30	23643	SR-20 LCD
10	24518	SR-20 Top Case Asm	33013	33013	Scout LCD
	32998	Scout Top Case Asm	31	23638	SR-20 LCD Mounting Plate
11	24298	Top Handle Seal	32	23653	SR-20 LCD Power Module
12	24523	Foam, 2" Wide Sheet	33	23658	SR-20 LCD Gasket
13	24528	Tape, 2.25" Wide Backing	34823	34823	Scout LCD Gasket
14	24383	Screw #4-40 x 3/8"	34	33008	Scout Main Circuit Board
15	24533	Hex Nut #4-40			
16	24273	Housing Seal	<b>Following Items Not Shown</b>		
17	24293	Bottom Handle Seal	—	24563	Serial Board Asm
18	24433	SR-20 Bottom Case Asm	—	24568	USB/Serial Port Cover
	33003	Scout Bottom Case Asm	—	24388	Bottom Handle Grip Pad
19	24303	Nylon Washer	—	31923	Flex Cable
20	24288	Screw #6 x 5/8"	<b>These Parts Are Located Inside Bottom Case</b>		
21	27868	Battery Cover	—	24583	Right Angle Mounting Bracket
22	24368	Screw #6 x 3/4"	—	24588	Screw #6 x 3/8"
23	24538	Tube Bracket	—	24593	Screw #6-32 x 3/16"
24	24543	Tube Bracket Gasket			

**NOTE: Parts Are Identical Between SR-20 & Scout Locators Unless Specifically Noted.**