


Z-1996 MOP SINK FAUCET ASSEMBLY

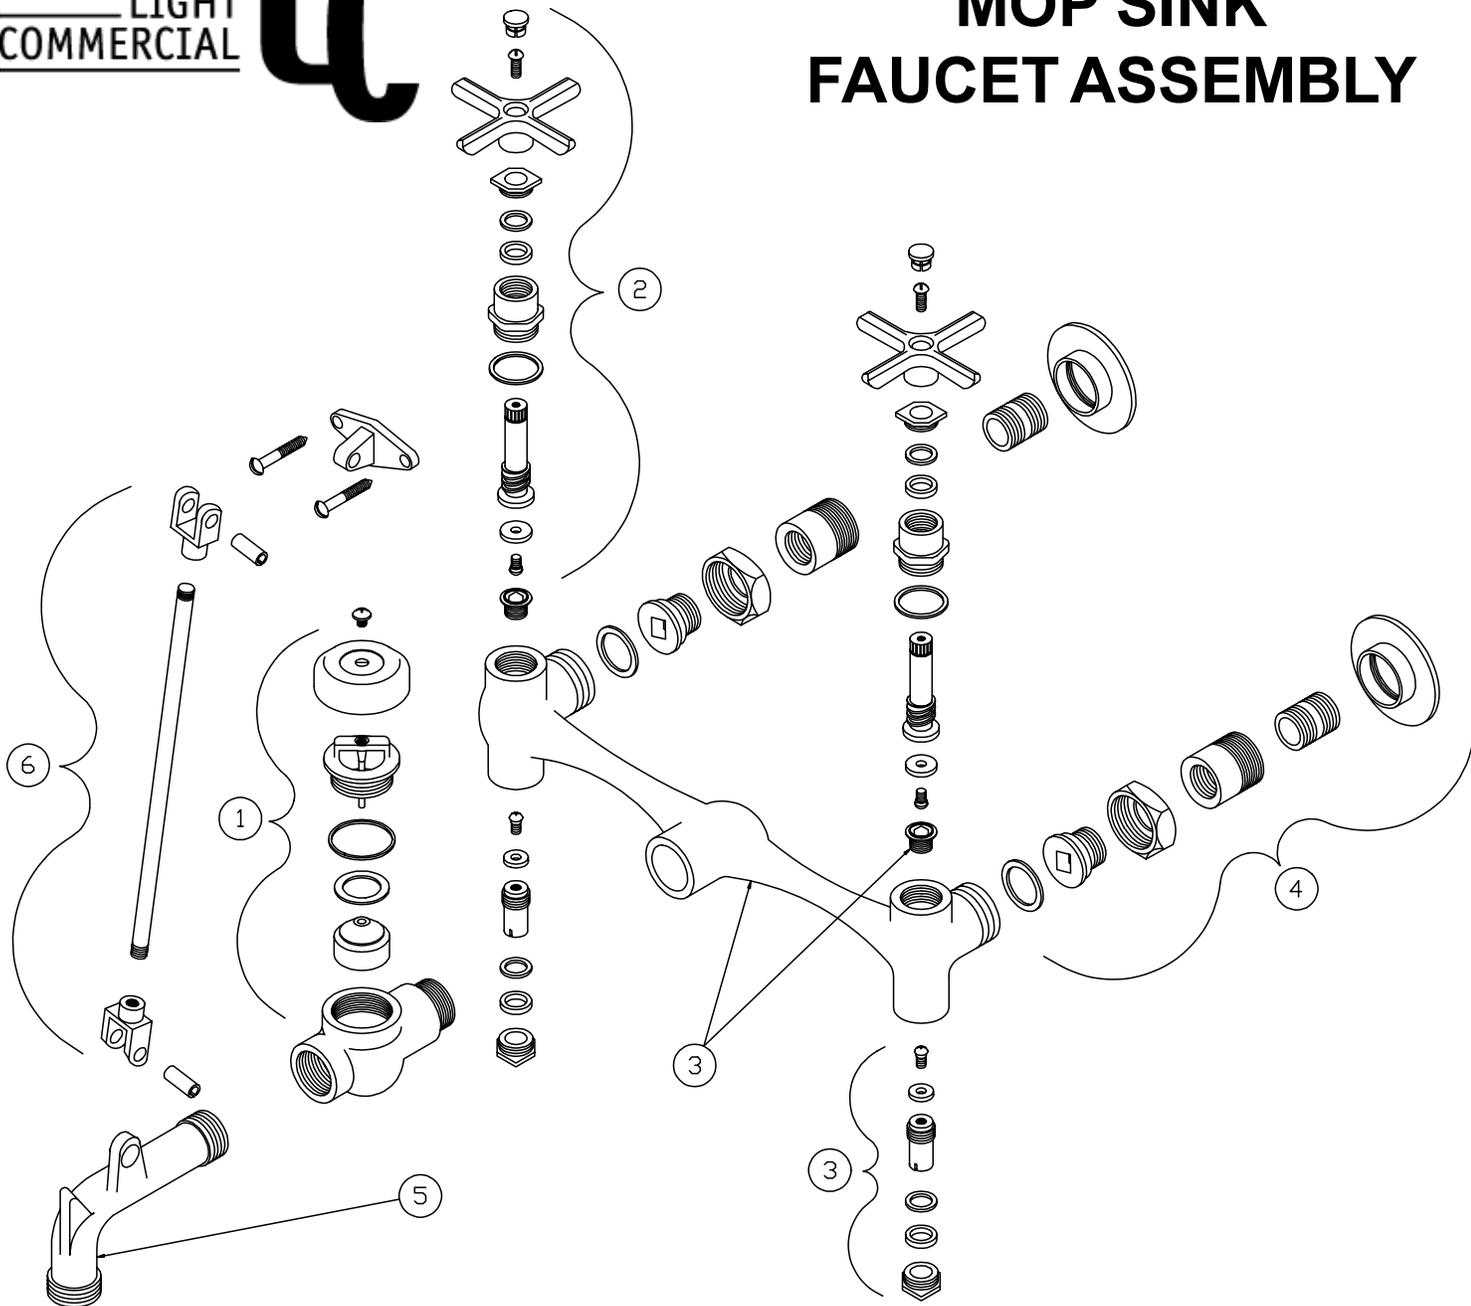

INSTALLATION INSTRUCTIONS

- 1) Plumb hot and cold water supply lines to wall on 8" centerlines.
- 2) Use eccentric fittings supplied with faucet to attach the faucet body to the supply lines.
- 3) Attach support bracket to the end of the spout with spring pin provided.
- 4) Level faucet body so that it is perpendicular to wall, and fasten the support bracket to the wall with the fasteners provided.

NOTE: Shut off valves have been provided at each supply for easy access to the shut off washers and seats should replacement ever be needed.

ITEM	DESCRIPTION	QTY.	LIST PRICE
1	JP1996-SF-VB-RK	1	\$36.95
2	JP1996-SF-HDL-RK	2	\$66.00
3	JP1996-SF-BODY-RK	1	\$66.00
4	JP1996-SF-CONN-RK	2	\$61.00
5	JP1996-SF-SPOUT-RK	1	\$65.00
6	JP1996-SF-SPOUT-BRACE-ASSY-RK	1	\$37.50