




856

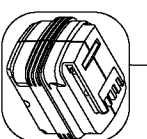


866

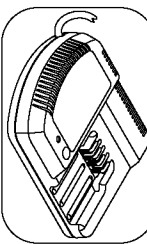

871

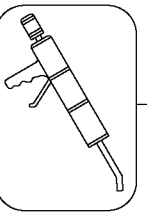

800

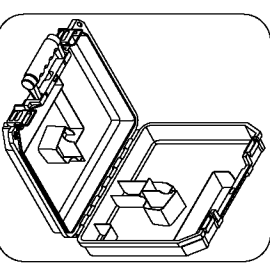

861

Parts List for DCD740C1 Type 1

Item Number	Part Number	Description	Qty Required
1	N078939	CLAMSHELL SET	1
2	N071094SV	MOTOR & PINION ASSY	1
3	N039577SV	TRANSMISSION	1
4	N045437SV	GEARBOX ASSY	1
5	N056872	SHIFTER ASSEMBLY	1
6	383184-00	SHIFTER WIRE	1
7	N090341	SWITCH,VSR	1
8	N041740	KEYLESS CHUCK	1
9	N039575	ID LABEL	1
10	N079593	TRIGGER	1
11	330019-00	SCREW	6
12	098091-10	SCREW	8
13	N079834	FWD/REV BUTTON	1
15	N268241	BELT HOOK KIT	1
16	N042665	MACHINE SCREW	1
17	330021-11	STOP NUT	2
18	N039570SV	PINION ASSEMBLY	1
19	080164-00	SCREW	2
20	N039710	RING RETAINING INTER	1
21	N039567SV	GEARCASE & BRG.	1
22	156179-01	SCREW,TAPTITE	2
23	N075466SV	SPINDLE & GEAR	1
33	N064780	NAMEPLATE	1
800	761995-01	GREASE, 6 OZ.	1
800	283484-01	GREASE,32 OZ.	1
800	284778-00	GREASE,MOLYKOTE	1
861	N067906	KITBOX	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCD740C1 Type 1

Item Number	Part Number	Description	Qty Required
866	DCB201	BATTERY PACK	1
871	DCB101	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.