American Standar BERWICK [™] / BOU SPREAD LAVATORY with Speed Connect [™] Drai Congratulations on purchasing faucet with Speed Connect dra American Standard faucets.	Instruct LEVARD [™] 7430 FAUCET 7430 in 7431 7431 7431	cions 0.801 0.821 0.821 0.801 0.821	7430.821 7431.821 30.801 31.801
 Speed Connect Drain* Fewer parts, installs in less time Never needs adjustment Guaranteed to seal properly th *Your new American Standard fa To ensure that your installation 	e first time, every time. Jucet is designed to work only	with the Speed Connect d	
Recommended tools		200	3 Com
Screwdriver	Channel Locks Turn off hot and cold water supplies before beginning.	Adjustable Wrench	Tubing Cutter
 Seat SEAL (1) into under side of Feed FAUCET SUPPLIES (3), M CABLE ASSEMBLY (8) through mounting surface. <i>Figure A</i>. From below, slide DRAIN CABL through opening in the SPACEF Note: For thick deck installaitor From below, push GASKET (7) MOUNTING STUD (4). Secure F pulling faucet to front of sink, s mounting hole. Before final tigh MOUNTING NUT (6) is seated <i>Figure B.</i> 	IDUNTING STUD (4) and DRAIN the mounting hole of lavatory or E ASSEMBLY (8) and FAUCET S (9) against underside of deck. Ins the SPACER (9) is not require and RETAINING WASHER (5) of Faucet with MOUNTING NUT (6) to SUPPLIES (3) rests against itening, make sure collar on	SUPPLIES (3) <i>Figure B.</i> ed. nto) , <i>Figure A</i>	TO FIXED SPOUT.



M968640 REV.1.4

5 POP-UP DRAIN

- Remove CLEAR PLASTIC COVER (1).
- Remove CARDBOARD SPACER (2) from under DRAIN POP-UP (3).
- Tighten TAILPIECE (4) on DRAIN BODY before installing DRAIN BODY. Fig. B.





- Thread FLANGE (1) counter-clockwise and remove FLANGE (1) and FOAM GASKET (2) from drain body. Fig. A.
- Thread LOCKNUT (3) clock-wise to bottom of drain body. Push GASKET (4) down against LOCKNUT (3). Fig. B.



8



DRAIN

Δ

BODY

INSTALL DRAIN FROM BELOW FIXTURE

 From under side of SINK install DRAIN BODY (1) up through drain outlet.

Note: No plumber's putty or caulk is required. The CABLE ATTACHMENT POINT **(2)** must face towards the rear of the SINK.

 Install FOAM GASKET (3) and FLANGE (4) onto drain body from above SINK and tighten FLANGE (4) firmly.



TIGHTEN LOCKNUT

Tighten LOCKNUT (1) firmly with Adjustable Wrench or Channel Locks.



FLANGE GASKET AND POP-UP KNOB

- Check DRAIN FLANGE in SINK to ensure that WHITE FOAM GASKET (3) is fully compressed and not visible. Fig. A.
- POP-UP KNOB (1) must be fully down. Fig. B.







TEST INSTALLED FITTING

- With HANDLES (1) in OFF position, turn on WATER
 SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (3). First loosen aerator set screw with HEX WRENCH (6) supplied. Pull out AERATOR (3) with AERATOR KEY (7).
- Operate both HANDLES (1) to flush water lines thoroughly.
- Replace AERATOR (3) and tighten set screw.

CHECK DRAIN CONNECTIONS

- Operate POP-UP KNOB (5) and fill Sink with water. Check that DRAIN STOPPER (4) makes a good seal and retains water in Sink. If STOPPER (4) does not seal properly, please refer to "Troubleshooting Guide" in these instructions.
- Release POP-UP KNOB (5) down and check all drain connections and "P" trap for leaks. Tighten if necessary.



5 SERVICE

- To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Thread counter-clock wise HANDLE BASE (1) to remove HANDLE ASSEMBLY (2) from ESCUTCHEON BASE (3).
 - Use a flat blade screw driver to remove SPRING CLIP (4).
 - Lift STOP WASHER (5), turn 90° and replace.
 - Replace SPRING CLIP (4)
 - Reinstall HANDLE ASSEMBLY (2).
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.



SPOUT CAN BE FIXED OR SWIVEL. CONVERT TO A FIXED SPOUT IF DESIRED.

- To change from swivel to fixed spout, proceed as follows:
- Remove PLUG BUTTON (1) from back of spout. VIEW "A"
- Remove SET SCREW (2) using screwdriver.
- Install FIXING SET SCREW (3) using Hex Wrench supplied.
- Align SPOUT (4) and tighten SET SCREW (3) to secure SPOUT (4).
- Replace PLUG BUTTON (1).



CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

Speed Connect™ Drain **Troubleshooting Guide**

- If sink does not hold water even though Stopper is in the "down" position:
 - Follow CABLE ADJUSTMENT PROCEDURE.
- If Stopper does not raise up fully or sink drains too slowly: Follow CABLE ADJUSTMENT PROCEDURE.
- If you need to remove the Stopper: Follow STOPPER REMOVAL PROCEDURE.
- If you would like the ability to remove your Stopper simply by lifting it out of the drain: • Follow STOPPER INSTALLATION PROCEDURE for "Unlocked" mode.

CABLE ADJUSTMENT PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" in the illustration. Fig. B.
- Use a small screwdriver to rotate the Cam in the clockwise direction as far as it will go. At this point the Stopper should be in the UP position. Fig. B, C.
- Push DOWN on the Lift-Knob to make sure it is fully down. Fig. C.
- Re-attach the Cable to the Drain Body Connection (2) by threading the Cable Connector (1) clockwise onto the Drain Body Connection (2) and hand-tighten. Fig. A.



STOPPER REMOVAL PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" and "Cam Cap" in the illustration. Fig. B.
- Use fingers or small screwdriver under either side of the Cam Cap to pry it out from the Drain. Fig. D.
- Remove the Cam by pulling it straight out while wiggling gently to loosen the Rubber Seal. Fig. E.
- The Stopper can now be removed by lifting it out of the Drain. Fig. F.



M968640 REV.1.4

STOPPER INSTALLATION PROCEDURE

The Stopper can be installed two ways, "Locked" Mode (Stopper cannot be removed) or "Unlock" Mode (Stopper is removable).

Locked Mode:

- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. Fig. G.
- To install the stopper in "Locked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the rear of the Sink and the American Standard logo is facing front. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. G.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in Troubling Shooting Guide to complete installation. Stopper will be in "Locked" mode and not be removable.

Unlocked Mode:

- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. H.**
- To install the stopper in "Unlocked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the front of the Sink and the American Standard logo is facing rear. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. H.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in "Troublingshooting Guide" to complete installation. Stopper will be in "Unlocked" mode and removable.





LOGO



Fig. G.

Unlocked Mode

