

NOTES:

TO ADJUST FLOW:

- 1. REMOVE HEX NUT COVER AND PUSH BUTTON COVER.
- 2. ADJUST WITH SCREWDRIVER: CLOCKWISE TO INCREASE FLOW & COUNTER-CLOCKWISE TO DECREASE FLOW.
- 3. IF DESIRED FLOW IS NOT OBTAINED, CLEAN SCREEN AT INLET (SEE 5010SS OPERATION AND MAINTENANCE MANUAL FOR ACCESS INSTRUCTIONS.
- 4. REPLACE PUSH BUTTON COVER AND HEX NUT COVER.

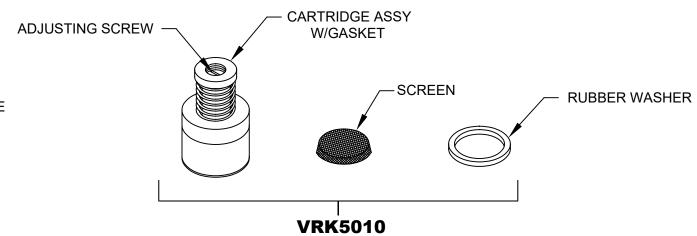

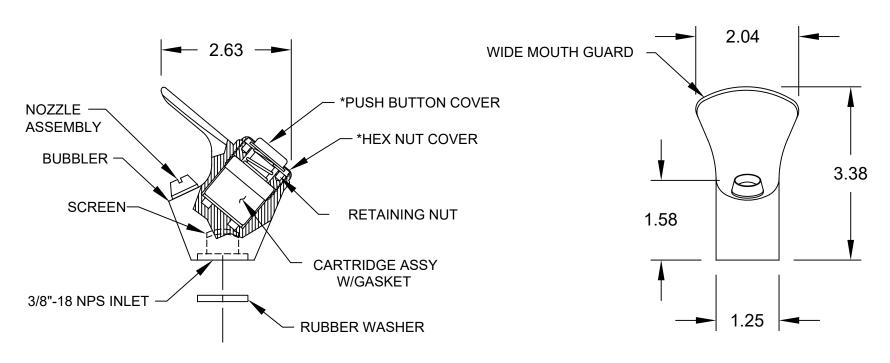

*CHROME PLATED PUSH BUTTON COVER & NUT ARE STANDARD ON 5010SS. COPPER PLATED OPTION IS AVAILABLE AS MODEL PB8C.