American Standard

TOWNSQUARE PRESSURE BALANCING BATH AND SHOWER TRIM KIT

Installation Instructions T555.52X

Certified to comply with ANSI A112.18.1

oompi) marriatorii 12.10.1

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

Recommended Tools














M965112 REV.1.1

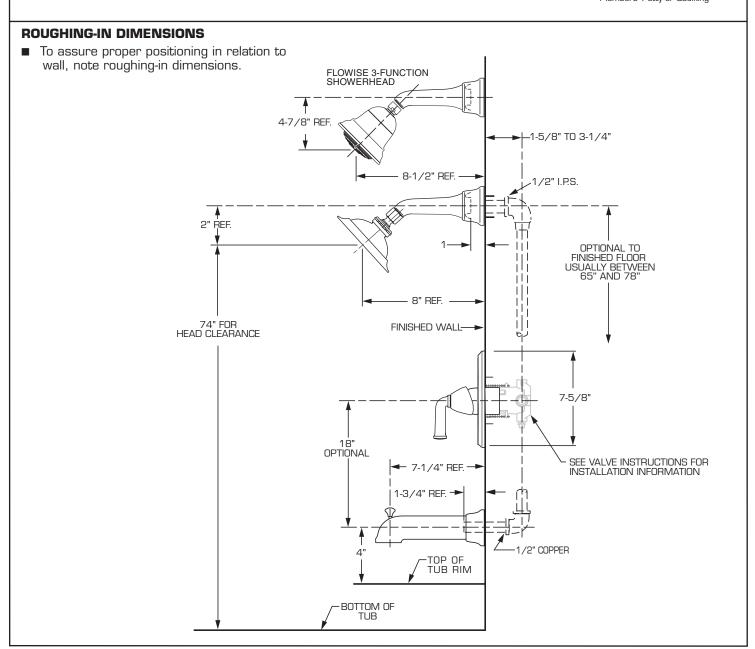


INSTALL TRIM

CAUTION: Protect finish on SHOWER ARM, SHOWER HEAD and TUB SPOUT when installing.


- When finished tiling the wall, remove PLASTER GUARD (A) and turn off water supply.
- Push CAP (1) over VALVE CARTRIDGE (2).
- Mount ESCUTCHEON (3) to valve body with SCREWS (4).
- Push DECORATIVE SCREW COVER (9) (optional) onto CAP (1) flush against ESCUTCHEON (3).
- Remove PIPE CAPS (5) from shower pipe and tub filler pipe.
- Install SHOWER ARM (6), SHOWER HEAD (7 or 7A) by threading onto pipe nipple using teflon tape or pipe sealant.

Install SLIP-ON TUB SPOUT (8). Tighten with HEX WRENCH supplied.

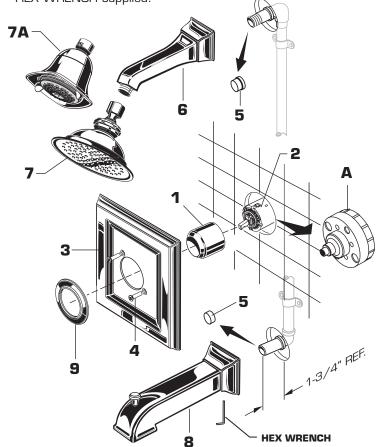

3 INSTALL HANDLE and TEST FITTING

- Align and install HANDLE (1) onto valve stem.
 Tighten SET SCREW (2) using 2.5mm Hex
 Wrench supplied. Push in index (4).
- Check proper operation of HANDLE (1).
- Turn on water supply on and test installed fitting.
 Operate valve and DIVERTER SPOUT (3).

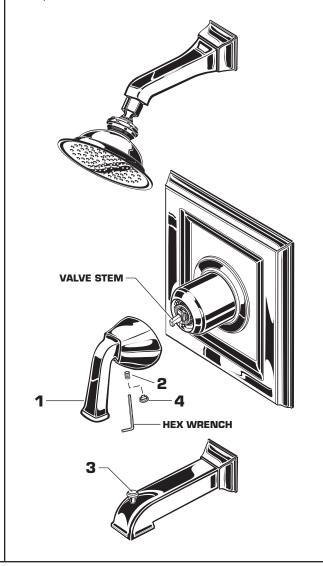


2 ADJUST HOT LIMIT STOP

HOT LIMIT SAFETY STOP ADJUSTMENT

By restricting handle rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP reduces risk of accidental scalding. To set the maximum hot water temperature of your faucets, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP.


■ Use a flat blade screwdriver or your fingers to pull up and rotate red HOT LIMIT SAFETY STOP (1). Follow Step "A" or "B" to adjust min./max. discharge temperature. "O" being the hottest to "7" the coldest temperature setting. Factory set at "O".

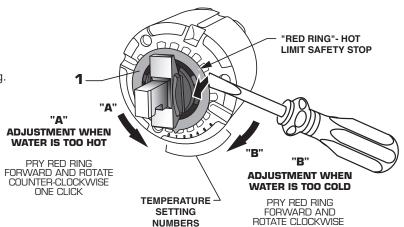

4 SERVICE


TO GAIN ACCESS TO VALVE FOR SERVICING

- Turn off hot and cold water supplies.
- Loosen HANDLE SET SCREW (1) and pull of HANDLE (2).
- Pull off DECORATIVE SCREW COVER (3).
- Remove two SCREWS (4) holding ESCUTCHEON (5) and remove ESCUTCHEON (5).
- Remove CAP (6).

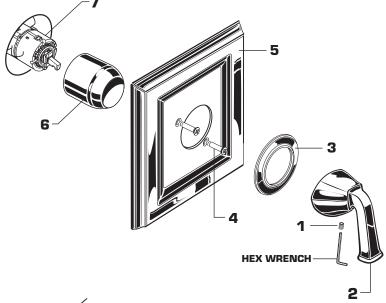

VALVE LEAKS WHEN SHUT OFF

- Remove CARTRIDGE (7) by removing CARTRIDGE SCREWS (8). Remove three SCREWS (9) from FIXATION RING (10) and pull out PRESSURE BALANCING (16) unit.
- Clean SEALS (11) on base of CARTRIDGE (7). Check base of PRESSURE BALANCING UNIT (12) and clean O-RINGS (13). Remove CAPS (14) and check O-RINGS on inside of CAPS (14) for debris. Clean inside sealing surfaces of VALVE BODY (15). Re-assemble PRESSURE BALANCING UNIT (12) and CARTRIDGE (7). Tighten all screws.

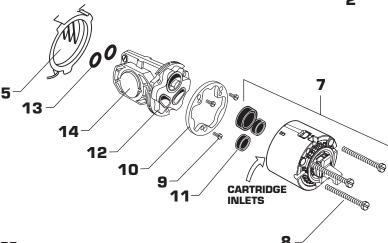

UNABLE TO MAINTAIN CONSTANT TEMPERATURE

- Remove PRESSURE BALANCE UNIT (12).
- Remove CAPS (14) and clean valve thoroughly.
- Examine balancing unit and check condition of O-ring on end of piston. Piston should move back and forth. Order Repair Part M952100-0070A if balancing unit is defective.
- Replace CAPS (14) and install PRESSURE BALANCE UNIT (12). Make sure inlets line up with two holes in bottom of casting. Top flange should butt-up against top of casting.

5 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.


DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A
CLOTH WITH A COARSE SURFACE.


American Standard


TOWNSQUARE BATH/SHOWER TRIM KIT

MODEL NUMBER

T555.52X

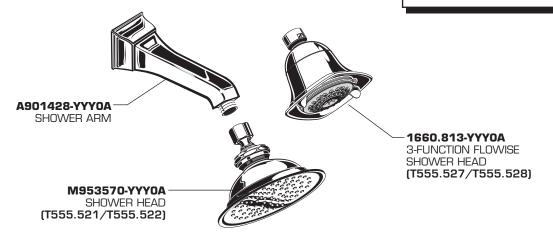

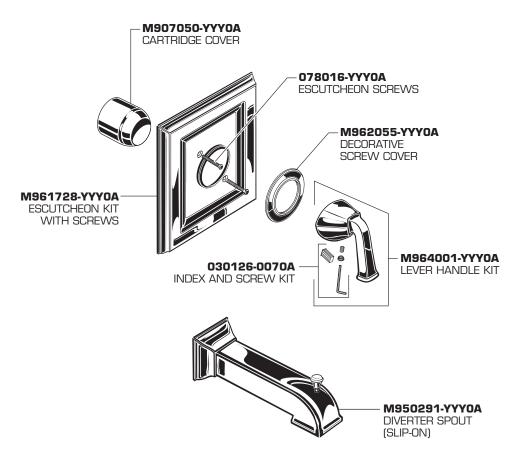

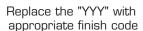

CI	HROME	002
S	ATIN NICKEL	295
	L RUBBED BRONZE	224



HOT LINE FOR HELP

Product names listed herein are trademarks of American Standard Inc. \odot AS America, Inc. 2011