

Replacing a Supco Plenum Thermostat.

1. Turn off power to unit.
2. Remove the access panel.
3. Disconnect two wires attached to the thermostat terminals
4. Unscrew the screws holding the thermostat in place.
5. Remove the thermostat.
6. Check the thermostat temperature information on the old plenum thermostat and make sure it matches Supco replacement. Do not use a thermostat with higher opening temperature.
7. Insert the new Supco thermostat and secure with screws.
8. Re-attach the wires. You can attach wires to either terminal. There is no polarity.
Make sure the terminals or wires are not damaged and fit securely on the plenum.
If the wire terminals are loose, replace them.
9. Attach the access panel.
10. Turn on power.



SEALED UNIT PARTS CO., INC.
PO BOX 21, 2230 LANDMARK PLACE
ALLENWOOD, NJ 08720 USA