

Installation:

BL100504-K Lower Supply

⚠ CAUTION: Pressure Vessel, to prevent injury turn water supply off and flush the unit prior to servicing.

To replace the lower supply assembly on the 501A and B series, turn off the water supply and flush the toilet to relieve the pressure in the *FLUSHMATE®* vessel.

1. Disconnect the water supply from the shank.
2. Remove the hose clamp from the upper supply using a pair of pliers.
3. Pull off the hose from the upper supply.
4. Remove the plastic locknut on the bottom of the tank, and remove old lower supply with hose.
5. Install the new hose on the replacement lower supply and secure with hose clamp.
6. Install the replacement lower supply, by placing the lower supply shank in the hole of the tank and secure in position by installing the shank locknut.
7. Put the other hose clamp on the other end of the hose and push the hose end onto the fitting of the upper supply. Secure the hose with the hose clamp.
8. Reconnect the water supply line to the shank and turn the water supply to the tank back on, and check for leaks.

